

OWNER'S MANUAL Shuttle 4 EFI

666011 - A ISSUED DECEMBER 2018



Read and comply with all of the instructions and safety precautions in this manual and on all product labels.

Failure to follow the safety precautions could result in serious injury or death.

California Proposition 65



WARNING

The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



Never modify the vehicle in any way that will alter the weight distribution of the vehicle, decrease its stability or increase the speed beyond the factory specifications. Such modifications can cause serious personal injury or death. The manufacturer, TEXTRON SPECIALIZED VEHICLES (TSV Augusta), prohibits and disclaims responsibility for any such modifications or any other alteration which would adversely affect the safety of the vehicle.

OWNER'S MANUAL

GASOLINE

Shuttle 4 EFI

Starting MODEL YEAR 2019

CONTACT INFORMATION **Textron Specialized Vehicles, Inc.**1451 Marvin Griffin Road.

Augusta, Georgia, USA 30906-3852

1-800-774-3946 Technical Assistance & Warranty 1-888-438-3946 Service Parts 001-706-798-4311 International www.cushman.com

WELCOME

Thank you for purchasing this vehicle. Before driving your new vehicle, read this owner's manual to familiarize yourself with safe driving practices, operation, features and controls.

This manual contains instructions for minor maintenance only. Information about major repairs can be found in the repair manual. Your dealer has thorough knowledge of your vehicle and wants your total satisfaction with your purchase. We recommend you return to your dealership for all of your service needs during, and after the warranty period.

Repair or replacement parts can be purchased from your dealer or through the manufacturer's parts and accessories department.

These are original instructions as defined by 2006/42/EC.

Textron Specialized Vehicles, Inc. maintains the right to change the design of the vehicle without responsibility to make the changes on units purchased before changes were made. The information in this manual can change without notice

All information in this owner's manual is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some discrepancies may be found between your vehicle and the information presented in this publication. The content in this publication is intended for reference use only. The manufacturer is not liable for omissions or inaccuracies. Any reprinting or reuse of the content in this publication, whether whole or in part, is expressly prohibited.

INTRODUCTION

MANUFACTURER'S INTENDED USE	7
WARRANTY AND REGISTRATION	7
EXHAUST EMISSIONS	7
BATTERY PROLONGED STORAGE	8
BATTERY DISPOSAL	8
VEHICLE IDENTIFICATION NUMBERS	8
REPAIR AND PARTS MANUALS	8
SAFETY LABELS	
SAFETY LABELS	
Operation (P/N 614121)	
Operation (P/N 601781)	
Instrument Panel Labels (P/N 71127G01 / 71131G01)	
Engine Warning CE (P/N 74093G01)	
Governor Warning (P/N 608527)	
Governor Warning CE (P/N 608822)	
Direction Selector CE (P/N 73317G01)	
Load Bed (P/N 74821G01)	11
SAFETY	
MAXIMUM CARGO LOAD / MAXIMUM WEIGHT CAPACITY	15
TIRE PRESSURE	15
OPERATOR SAFETY	15
Unauthorized Operation	16
Operating without Instruction	16
Alcohol or Drugs	17
Passenger	17
Before Operating	17
Load Operation	17
Fuel Handling Guidelines	17
Carbon Monoxide Exposure	17
Driving in Reverse	18
Driving a Damaged Vehicle	18
Driving at Maximum Speeds	18
Driving on Pavement	18
Driving on Public Roads	18
Turning	18
Driving Uphill	18
Driving Downhill	18
Stalling on a Hill	18
Tires	18
Slippery Terrain	18
HOT EXHAUST SYSTEMS	19
VEHICLE LIFTING	19
VEHICLE MODIFICATION	19
MAINTENANCE SAFETY	19

TABLE OF CONTENTS

FEATURES AND CONTROLS

KEY SWITCH	21
FUEL GAUGE WITH LOW OIL PRESSURE INDICATOR	21
CUP HOLDER	21
STEERING WHEEL	21
TURN SIGNAL (IF EQUIPPED)	
FRONT HYDRAULIC BRAKES (IF EQUIPPED)	21
BRAKE PEDALS	21
Brake Pedal	21
Parking Brake Pedal	21
HORN	22
ACCELERATOR PEDAL	
DIRECTION SELECTOR	22
EFI MALFUNCTION INDICATOR LIGHT (MIL)	22
CHOKE	
HIP RESTRAINTS	
SEAT BOTTOM	
GLOVE BOX / STORAGE COMPARTMENTS	
FUEL FILL	
CANOPY TOP AND WINDSHIELD	
TRUCK BED	
Manual Bed Release Lever	23
OPERATION	
SAFETY	25
BEFORE INITIAL USE	
PRE-RIDE INSPECTION	
ENGINE BREAK-IN	
CVT BELT BREAK-IN	
FUEL	
ENVIRONMENTAL AWARENESS	
STARTING AND STOPPING THE ENGINE	
Starting on a Hill	
ACCELERATING	
BRAKING	
DRIVING PROCEDURE	
Coasting	
DRIVING WITH A PASSENGER	
SLIPPERY SURFACES	
DRIVING UPHILL	
DRIVING UPHILLTRAVERSING HILL SIDES	29
TRAVERSING HILLSIDES	29
TRAVERSING HILLSIDES DRIVING DOWNHILL	
TRAVERSING HILLSIDES	
TRAVERSING HILLSIDES DRIVING DOWNHILL	

TABLE OF CONTENTS

HAULING CARGO	31
Maximum Cargo Load / Maximum Weight Capacity	
TRUCK BED OPERATION	32
Load Bed (P/N 74821G01)	
DUMPING THE TRUCK BED	32
VEHICLE MAINTENANCE	
MAINTENANCE SAFETY	35
SCHEDULED MAINTENANCE	
Initial Service Requirements	35
Severe Use Conditions	
SCHEDULED MAINTENANCE CHART	36
RECOMMENDED LUBRICANTS AND FLUIDS	
REPLACEMENT OF MAINTENANCE ITEMS	38
LIFTING THE VEHICLE	39
Lifting Front	39
Lifting Rear	39
Lowering Vehicle	39
VEHICLE CLEANING AND CARE	40
Washing the Vehicle	40
Polishing the Vehicle	40
TIRES	40
Tire Pressure	41
Tire Repair	
Tire Replacement	
WHEELS	
Wheel Removal	
Wheel Installation	
LIGHTS	
Halogen Headlight Bulb Replacement	
LED Headlight Assembly Replacement	
Taillight	
FUSE REPLACEMENT	
FOUR CYCLE ENGINE	
Engine Specifications CHECK THE OIL LEVEL	
CHANGE THE ENGINE OIL	
Remove the Engine Oil	
Change the Oil Filter	
Refill Oil	
STARTER/GENERATOR BELT	
Adjusting the Belt	
AIR INTAKE AND COOLING FINS	
REAR AXLE	
Checking the Axle Oil Level	
AIR FILTER	
LUBRICATION	
SPARK PLUG	

TABLE OF CONTENTS

MALFUNCTION INDICATOR LIGHT (MIL)	49
BRAKES	
Periodic Brake Test	50
Brake Fluid (If Equipped w/ Hydraulic Brakes)	51
Check Brake Fluid Level	
BATTERY	51
Battery Cleaning	51
Battery Charging	
Discharged Battery	52
Battery Disposal	
Battery Storage	52
TRANSPORTING THE VEHICLE	53
Hauling the Vehicle	53
Towing the Vehicle	53
VEHICLE STORAGE	54
Remove from Storage	54
SPECIFICATIONS	
SHUTTLE 4- VEHICLE SPECIFICATIONS	55

INTRODUCTION

The following symbols appear throughout this manual and on vehicle labels. Your safety is involved when these symbols are used. Become familiar with their meanings before reading the manual.

▲ DANGER

DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

A WARNING

WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

A CAUTION

CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.



The PROHIBITION SAFETY SIGN indicates an action NOT to take in order to avoid a hazard.

)

The MANDATORY ACTION SIGN indicates an action that NEEDS to be taken to avoid a hazard.



Failure to comply with the warnings in this manual can result in severe injury or death.



Read this entire manual carefully before operating this vehicle. Do not attempt to operate this vehicle until you have thorough knowledge of the controls and features.



Regular inspections and maintenance, along with good operating techniques, will help ensure your safe enjoyment of the capabilities and reliability of this vehicle.

This vehicle was designed and manufactured in the United States of America (USA). The standards and specifications in the following information originate in the USA unless otherwise indicated.

When servicing engines, all adjustments and replacement components must be per the original vehicle specifications to maintain the USA Federal and State emission certification applicable at the time of manufacture.

MANUFACTURER'S INTENDED USE

This vehicle is designed and manufactured for off road use only. Use on public streets, roads, or highways is illegal in most areas and increases the risk of an accident involving other vehicles and people. This vehicle does not meet FMVSS (Federal Motor Vehicle Safety Standards) for public street, road, or highway use.

Check all laws and regulations before choosing an area to operate your vehicle.

WARRANTY AND REGISTRATION

A literature package is included with the purchase of a new vehicle. The package contains the following items:

- · Vehicle Warranty Statement
- · EPA and California Emission Control Warranty Statement (EVAP emission)
- Emission Control System Warranty Statement (Engine emission)
- Vehicle Registration Card (registration can also be done at www.cushman.com)

Use Original Equipment Manufacturer (OEM) approved parts to keep the vehicle warranty effective.

Tampering with or adjusting the governor to allow the vehicle to operate above factory specifications will void the vehicle warranty.

All information, including coverage, limitations, exclusions and how to obtain warranty service is included in the literature package with the purchase of the vehicle. It can also be obtained from your *CUSHMAN* dealer.

EXHAUST EMISSIONS

The exhaust emissions of this vehicle's engine complies with regulations set forth by the Environmental Protection Agency (EPA) of the United States of America (USA) at time of manufacture. Significant fines could result from modifications or tampering with the engine, fuel, ignition, or air intake systems. Refer to the warranty statements provided with the vehicle for all information.

INTRODUCTION

BATTERY PROLONGED STORAGE


Batteries discharge over time. The rate of discharge changes according to the ambient temperature, the age and condition of the batteries.

Completely charged batteries will not freeze in winter temperatures unless the temperature is less than -75°F (-60°C).

BATTERY DISPOSAL

Lead-acid batteries are recyclable. Return discarded batteries to distributor, manufacturer or lead smelter for recycling. For neutralized spills, put any residue in acid-resistant containers with absorbent material such as sand. Dispose in accordance with local, state and federal regulations for acid and lead compounds. Contact local or state environmental authorized people for the disposal information.

VEHICLE IDENTIFICATION NUMBERS

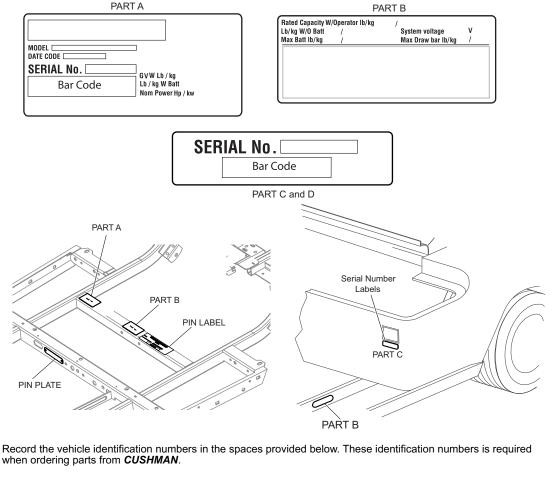

Vehicle Model Number:

Frame PIN: ______

REPAIR AND PARTS MANUALS

The following manuals can be purchased through your *CUSHMAN* dealer:

- · repair manual
- · parts manual

SAFETY LABELS

 
SAFETY LABELS

Safety and warning labels are on the vehicle for your protection. Read carefully and comply with the instructions on the labels. If any label shown in this manual is different from the label on your vehicle, always follow the instructions on the vehicle label.

If a label comes off or becomes illegible, contact your dealer for a replacement. The part number is provided in this manual, printed on the label, or can be obtained from your dealer.

Operation (P/N 614121)

Located on the dash panel.




Operation (P/N 601781)

Located on the dash panel.




Instrument Panel Labels (P/N 71127G01 / 71131G01)

 Located on the instrument panel (For CE vehicles only)

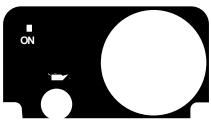





71131G01

Engine Warning CE (P/N 74093G01)

Located on the truck bed closeout.

NO TAMPERING DO

DO NOT EXPOSE TO FLAME GROUND FUEL PUMP NEGATIVE GROUND BATTERY SHORTING BATTERY TERMINALS CAN CAUSE EXPLOSION



DO NOT SPILL FUEL ON HOT ENGINE CLEAN GASOLINE SPILLS WITH WATER BEFORE STARTING ENGINE

Governor Warning (P/N 608527)

Located on the throttle-rod guard.



DO NOT TAMPER WITH OR ATTEMPT TO CHANGE THE ADJUSTMENT OF THE GOVERNOR. GOVERNOR TAMPERING CAN RESULT IN SERIOUS PERSONAL INJURY AND WILL VOID THE VEHICLE WARRANTY.

Governor Warning CE (P/N 608822)



Direction Selector CE (P/N 73317G01)


Located at the direction selector on the front seat pod.



Load Bed (P/N 74821G01)

Located on the truck bed.


WARNING READ THE MANUAL SECURE LOAD MAX BED WEIGHT 500 LBS or 227 KG NO PASSENGERS IN LOAD BED HIGH CENTER OF GRAVITY MAY CAUSE TIP OVER

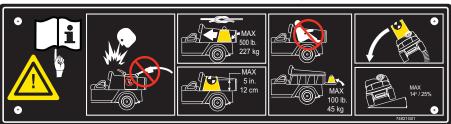

DO NOT FILL GAS CAN IN LOAD BED MAX CENTER OF GRAVITY HEIGHT 5" (12 CM) ABOVE FLOOR

MAX TAILGATE LOAD 100 LBS OR 45 KG

MAX SIDE SLOPE 14°

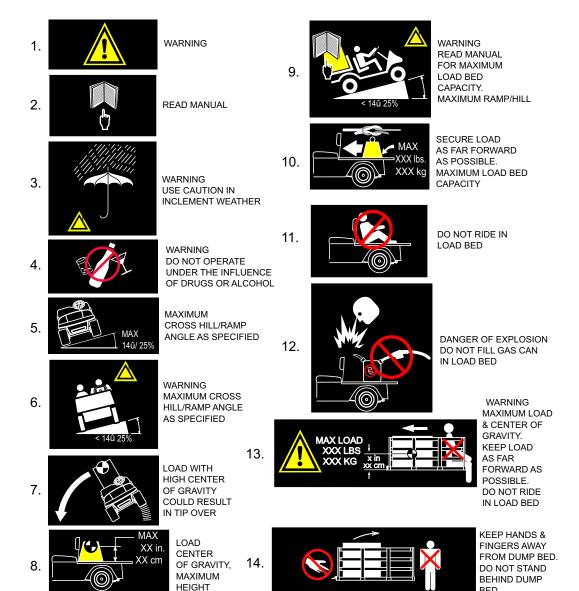

BED

15.		H ₂ O	CLEAN UP GASOLINE SPILLS WITH WATER BEFORE STARTING ENGINE	28.		DO NOT DISPOSE OF BATTERIES
16.		UNLEADED GASOLINE			- •	IN LANDFILL
17.		DO NOT SPILL FUEL ON A HOT ENGINE		29.		DO NOT DRIVE ON HIGHWAY
18.		GROUND FUEL PUMP		30.	30	WINDSHIELDS DO NOT PROVIDE PROTECTION
19.		LOW OIL PRESSURE				FROM FLYING OBJECTS
20.	/// - +	NEGATIVE GROUND BATTERY		31.		BATTERIES ARE HEAVY. USE CARE LIFTING
21.	m - A m	DO NOT CONNECT POSITIVE BATTERY TERMINAL TO GROUND		32.	Onnun C	USE INSULATED TOOLS
22.		SHORTING BATTERY TERMINALS MAY CAUSE EXPLOSION NO		33.		WEAR EYE PROTECTION
23.	×	TAMPERING. KEEP HANDS OUT			4/	
24.		WARNING CORROSIVE		34.		NO SMOKING
25.		WARNING EXPLOSIVE		35.		HOT SURFACE
26.		WARNING LETHAL VOLTAGE			Å	OPERATE
27.		DO NOT EXPOSE TO FLAME		36.		FROM DRIVERS SIDE ONLY

For questions about the vehicle or the material in this manual, see the contact information on page 1 or the back of this publication.

Certain replacement parts can be used independently and/or in combination with other accessories to modify a TSV manufactured vehicle to permit the vehicle to operate at or in excess of 20 mph. When a TSV-manufactured vehicle is modified in any way by the Distributor, Dealer or customer to operate at or in excess of 20 mph on public streets or roads, UNDER FEDERAL LAW the modified product will be a Low Speed Vehicle (LSV) subject to the strictures and requirements of Federal Motor Vehicle Safety Standard 571.500. In these instances, pursuant to Federal law the Distributor or Dealer MUST equip the product with headlights, rear lights, turn signals, seat belts, top, horn and all other modifications for LSVs mandated in FMVSS 571.500, and affix a Vehicle Identification Number to the product in accordance with the requirements of FMVSS 571.565. Pursuant to FMVSS 571.500, and in accordance with the State laws applicable in the places of sale and use of the product, the Distributor, Dealer or customer modifying the vehicle also will be the Final Vehicle Manufacturer for the LSV, and required to title or register the vehicle as mandated by State law.

Information on FMVSS 571.500 is found at Title 49 of the Code of Federal Regulations, section 571.500. For information on-line, go to www.ecfr.gov.

TSV will NOT approve Distributor, Dealer or customer changes that change a TSV product into a Low Speed Vehicle (LSV).

This vehicle meets the current applicable standard for safety and performance requirements.

MAXIMUM CARGO LOAD / MAXIMUM WEIGHT CAPACITY



Exceeding the weight capacities can cause the loss of vehicle control and possible injury or death.

Maximum Cargo Load Capacity	400 lbs. (181 kg)	
Maximum Vehicle Weight Capacity	1200 lbs. (545 kg)	

- · Do not exceed the maximum cargo load capacity.
- Do not exceed the maximum vehicle weight capacity (includes weight of operator, passenger, cargo, and accessories).

TIRE PRESSURE



Improper tire pressure or uneven tire pressure can cause the loss of vehicle control and possible injury or death.

Maintaining the correct tire inflation pressure is essential for safe vehicle operation. The inflation pressure can vary within the recommended range to suit the condition of the terrain.

TIRE PRESSURE RANGE	RANGE TERRAIN CONDITIONS RECOMMENDATION	
18 - 22 psi (124 - 152 kPa)	Hard surfaces or pavement	Inflate to higher pressure within the range; never exceed maximum pressure indicated.
10 - 22 psi (124 - 132 KFd)	Soft terrain or turf	Inflate to lower pressure within the range to reduce potential damage to the terrain or turf.

OPERATOR SAFETY

Safe and responsible use of this vehicle is necessary to prevent dangerous conditions for the operator, passengers and other people in the area of operation. This section of the manual provides information on the safe operation of the vehicle. Make sure to read, understand and comply with all of this information to decrease the risk of personal injury or death.



Serious injury or death can occur if you do not follow the instructions and procedures shown in this owner's manual.

Read this entire manual and all product labels carefully. Follow the safety information and operating procedures
described.

SAFFTY

- · Operate your vehicle responsibly to prevent dangerous conditions for the operator, passengers and other people in the area of operation
- Operate the vehicle responsibly and keep the vehicle in safe condition of operation.
- A damaged vehicle or a vehicle that is not functioning properly is dangerous and must not be operated until repairs are made.
- Do not carry a passenger until you have a minimum of two hours driving experience on this vehicle.
- Keep feet, legs, hands, and arms inside the vehicle at all times.
- The driver must keep both hands on the steering wheel and both feet on the floor or pedals.
- Inspect the vehicle before each use to make sure it is in safe operating condition. Perform the pre-ride inspection described in this manual. See page 25.
- Always have the vehicle checked by an authorized dealer if it is involved in an accident.
- Always put the direction selector in forward (F) and engage the parking brake before you exit the vehicle.
- Remove the ignition key when the vehicle is not in use to prevent accidental starting, unauthorized use by someone below the age of 16, or someone without a driver's license and proper training.
- Drive the vehicle at appropriate speeds for the terrain and conditions. Be aware of environmental conditions that change the terrain and your ability to control the vehicle.
- Do not drive on excessively steep hills. Evaluate the terrain before descending a hill. Drive slowly and deliberately. Use the brake to limit speed and maintain control. Sudden braking or turning can cause the loss of vehicle control. Drive straight down the hill. Do not drive across the hill.
- Operate only in approved areas. Follow all applicable safety rules for the area.
- Avoid driving on terrain that is too rough for your vehicle's capabilities and your driving skills.
- Before you drive in the reverse direction, make sure the area behind the vehicle is clear. Accelerate slowly and avoid making sharp turns.
- Make sure the direction selector is in the correct position before pressing the accelerator pedal.
- Decrease the speed before and during turns.
- Decrease the speed when driving on wet or slippery surfaces.
- Bring the vehicle to a complete stop before moving the direction selector.
- Do not exceed the cargo or vehicle weight capacities. Do not exceed the occupant capacity. See SPECIFICA-TIONS on page 55 for the vehicle load and seat capacity.
- If there is a risk of lightning, leave the vehicle and look for a safe location to wait until the lightning has stopped.

Additional information about safety is included throughout this manual or can be obtained from your dealer.



Failure to operate this vehicle as instructed can cause collision, loss of control, or rollover resulting in severe injury or death. Follow all safety warnings in this section of the owner's manual. See the OPERATION section of the owner's manual for operating procedures and additional safety information.

Unauthorized Operation



This vehicle is for adult use only. Any person below the age of 16 is not permitted to operate the vehi-

Any person who does not have a valid driver's license is not permitted to operate the vehicle.

Any person who is below the height of 59 in. (150 cm) is not permitted to operate the vehicle.

Leaving the keys in the ignition allows unauthorized operation of the vehicle by someone under 16 years of age, an unlicensed driver or someone who does not meet the height requirement. Always remove the ignition key when the vehicle is not in operation.

Operating without Instruction



Operation of this vehicle without proper instruction increases the risk of an accident. The operator must understand how to operate the vehicle correctly in different situations and on different types of terrain.

All operators must read, understand, and comply with the owner's manual and all warning and instruction labels before operating the vehicle.

Alcohol or Drugs



Operation of the vehicle during or after consuming alcohol or drugs can adversely affect operator judgment, reaction time, balance and perception.

Never drink alcohol or use drugs or medications before or during operation of the vehicle.

Passenger

All passengers must be at least 59 in. (150 cm) tall. Passengers must be able to sit with their back against the seat, and both feet on the floor.

For additional safety and operational information, see Driving with a Passenger on page 28.

Before Operating

Perform the PRE-RIDE INSPECTION on page 25 before each use to make sure the vehicle is in safe operating condition. Failure to inspect and confirm that the vehicle is safe to operate increases the risk of an accident.

Follow all inspection and maintenance procedures and schedules described in this owner's manual. See SCHED-ULED MAINTENANCE on page 35.

Load Operation

The weight of cargo and occupants affects vehicle operation. Carefully calculate how the vehicle is loaded and how to safely operate it. Follow the instructions in this manual for loading guidelines and tire pressure.

Do not exceed weight capacities specified for your vehicle. Capacities are listed in *Maximum Cargo Load / Maximum Weight Capacity* on page 15 of this manual, and also on the label affixed to the truck bed. As passenger weight increases, cargo weight needs to be adjusted to ensure the maximum vehicle weight capacity is not exceeded.

Tire pressure must be adjusted to accommodate the load being carried. See *Tire Pressure* on page 15 for pressure specifications.

Verify tire pressure, and drive slowly and carefully to maintain control of the vehicle if driving under any of the following conditions:

- · passenger and/or cargo exceeds half the maximum weight capacity
- · driving over obstacles
- towing
- · climbing a hill

Fuel Handling Guidelines

Gasoline is flammable and can be explosive in some conditions. Use the following guidelines when handling fuel:

- · Always use caution when handling gasoline.
- · Refuel in a well-ventilated area.
- · Turn off the engine before refueling.
- · Use an approved gasoline container to store fuel.
- Remove portable gasoline containers from the vehicle and place on the ground before filling to prevent ignition caused by electrical static discharge.
- Do not smoke or allow open flames or sparks in or near the area where refueling is done or where gasoline is stored
- · Do not overfill the tank. Do not fill the tank neck.
- If any gasoline contacts skin, immediately wash with soap and water. If any gasoline gets on clothing, change immediately.

For refueling procedure, refer to Fuel on page 26.

Carbon Monoxide Exposure

Carbon monoxide is an odorless gas that is formed as a natural part of the combustion of hydrocarbon fuels.

Carbon monoxide is poisonous, and can cause loss of consciousness or death in a short period of time. Never start the engine or allow it to run in an enclosed area.

If you experience any of the following symptoms, stop the engine and get fresh air immediately:

- · dizziness
- intense beedeebe

vomiting

intense headache

- · muscular twitching
- · weakness and sleepiness
- · throbbing in temples

Operate this vehicle outdoors or in well-ventilated areas only.

SAFFTY

Driving in Reverse

Make sure the area behind the vehicle is clear before operating in reverse. After making sure it is clear and safe to operate in reverse, accelerate slowly. Avoid making sharp turns in reverse. Refer to *Driving in Reverse* on page 30 for operational information.

Driving a Damaged Vehicle

Driving a damaged vehicle is not safe.

If the vehicle has been involved in any type of accident, have it inspected by a qualified service dealer to verify that it is safe for operation.

Driving at Maximum Speeds

Maximum speed operation increases the risk of loss of control. Always drive at a speed that is appropriate for the terrain, visibility, operating conditions, and your skill and experience level. Use the brake to control speed and maintain control of the vehicle.

Driving on Pavement

Driving the vehicle on paved surfaces can affect handling characteristics and increase tire wear.

If possible, avoid driving on paved surfaces. If unavoidable, drive slowly, travel short distances, and avoid sudden turns or stops.

Driving on Public Roads

Driving this vehicle on public streets, roads or highways could result in a collision with another vehicle. Never drive this vehicle on any public street, road, or highway, including dirt and gravel roads, unless they are designated for off road use. Most areas prohibit the operation of this vehicle on public streets, roads, or highways and can result in traffic violations and fines.

Turning

Improper or careless turning can cause loss of traction, loss of control, accident, or rollover. Do not turn quickly or at sharp angles. Do not turn at high speeds. Practice turning at slow speeds before attempting to turn at faster speeds.

Driving Uphill

Do not climb hills that are too steep for the vehicle or your driving abilities. Loss of vehicle control or rollover can result from climbing hills incorrectly. Refer to *Driving Uphill* on page 29 for operational information.

Driving Downhill

Inspect the terrain before descending a hill. Avoid driving across hills. Use the brake to limit speed and maintain control. Loss of vehicle control or rollover can result from driving downhill incorrectly. Refer to *Driving Downhill* on page 29 for operational information.

Stalling on a Hill

A rollover can result from stalling or rolling backward while climbing a hill. Drive uphill at a constant speed. See procedure on page 30 for maintaining control of your vehicle if it stalls on a hill.

Tires

Operating the vehicle with the incorrect tires or with the incorrect or uneven tire pressure can cause loss of control or an accident. Always use the size and type of tires specified for the vehicle. See Vehicle Specification for proper tire type and size. Always maintain the correct tire pressures as specified in *Tire Pressure* on page 15.

Slippery Terrain

Driving on rough, wet, or loose terrain increases the risk of loss of traction or control and accident or rollover. Drive slowly and use the correct turning procedures when operating on slippery surfaces.

Tires that have lost traction and then regain traction suddenly can cause loss of vehicle control or rollover.

Refer to Slippery Surfaces on page 29 for operational information.

HOT EXHAUST SYSTEMS

Exhaust system components are very hot during and after use. To avoid burn injuries, do not touch hot exhaust system components. Hot components can also cause a fire. Keep combustible materials away from the exhaust system. Check for buildup around the exhaust system after driving through high and dry grass.

VEHICLE LIFTING

The vehicle must be on a firm and level surface for lifting. Remain constantly aware that the vehicle is not stable during the lifting process. Do not get under a vehicle until you verify that it is stable on the jack stands. Never get under a vehicle while it is on a jack only. Put wheel chocks in front of and behind the wheels that are not being lifted. Do not allow anyone to remain or get on the vehicle at any time during the lifting process.

Read and comply with all warnings and follow the lifting procedures described on page 39.

VEHICLE MODIFICATION

Do not install any accessory not approved by *CUSHMAN*. Do not modify the vehicle to increase the speed or power. Any modifications or installation of accessories not approved by *TSV* can create a safety hazard and increase the risk of injury.

The warranty will be terminated if the vehicle is modified to increase vehicle speed or power.

The warranty may be terminated if the original (or equivalent) replacement parts are not installed on the vehicle.

The addition of some accessories can change the handling characteristics of the vehicle. Use only CUSHMAN approved accessories, and familiarize yourself with their function and effect on the vehicle.

MAINTENANCE SAFETY

Routine and scheduled maintenance of this vehicle is necessary to keep the vehicle in safe and reliable condition. This section of the manual provides safety information for performing maintenance on your vehicle. Make sure to read, understand, and comply with all of this information to decrease the risk of personal injury or death.



Serious injury or death can occur if the instructions and procedures shown in this owner's manual are not followed.

- Read this entire manual and all product labels carefully. Follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.
- Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.
- · Remove all jewelry before servicing the vehicle.
- · Do not allow loose clothing or hair to contact the moving parts.
- · Do not touch hot objects.
- The drive wheels must be lifted and supported on jack stands before performing any service to the power-train while the motor is in operation.
- Use wheel chocks and support the vehicle on jack stands. NEVER get under a vehicle that is supported by a jack.
 Lift the vehicle following the instructions. See LIFTING THE VEHICLE on page 39.



- •When servicing the vehicle, always wear eye protection. Be careful when working around batteries, using solvents, or compressed air.
- •Use insulated tools within the battery area to prevent sparks or battery explosion.
- •To prevent the risk of battery explosion, keep all flammable materials, open flames or sparks away from the battery.
- · Hydrogen gas is produced as a battery is charged. Charge the battery only in well-ventilated areas.
- Maintain constant awareness that some components are heavy, spring loaded, corrosive, explosive, can cause
 high amperage, or get extremely hot. Battery acid and hydrogen gas can cause bodily injury. Keep your hands,
 face, feet, and body away from any area that can expose them to injury in the event that an unexpected situation
 occurs.
- After making repairs or performing maintenance, test the vehicle in a safe area that is free from vehicle and person traffic.

FEATURES AND CONTROLS


NOTICE: Some accessories continue to operate with the key in the OFF position. Leaving these accessories activated after the vehicle is shut down can cause the battery to discharge.

KEY SWITCH

- Located on the dash panel, the combination key/light switch controls the basic electrical system of the vehicle, as well as the front and rear lights. The switch has three positions; OFF, ON, and LIGHTS.
- · OFF; vehicle is disabled.
- ON; activates vehicle electronics and accessory power.
- "HEADLIGHT SYMBOL" All functions are activated and the lights are on.

FUEL GAUGE WITH LOW OIL PRESSURE INDICATOR

The fuel gauge indicates the amount of gasoline in the fuel tank. F indicates a full tank and E indicates an empty fuel tank. The fuel gauge has a low oil pressure indicator. A low engine oil pressure condition is shown with a red indicator light.

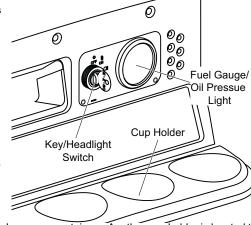

Parking Brake Pedal

CUP HOLDER

The vehicle has a center cup holder that will accommodate two beverage containers. Another cup holder is located to the left of the steering column and will accommodate a larger beverage container.

STEERING WHEEL

The steering wheel allows the driver to control the direction of travel.

TURN SIGNAL (If Equipped)

The turn signal switch is located on the steering column and is used to activate the turn signals.

FRONT HYDRAULIC BRAKES (IF EQUIPPED)

Some vehicles are equipped with optional hydraulic brakes. The master cylinder is located on the passenger side behind the front wheel.

Press the button and lower the lever to disengage the parking brake.

BRAKE PEDALS

The brake pedal on vehicles with mechanical brakes is a combination brake and parking brake pedal.

Brake Pedal

The brake pedal is the bottom left pedal on the floorboard. Press the brake pedal to slow the speed or bring the vehicle to a complete stop.

 
Parking Brake Pedal

The parking brake is the upper pedal. It allows the operator to lock the brake when the vehicle is parked to prevent accidental movement.

into place.

Brake Pedal Accelerator Pedal To engage the parking brake, press the upper pedal until it locks

Horn



FEATURES AND CONTROLS

HORN

The horn switch is on the kick panel. Activate the horn by stepping on the horn switch.

ACCELERATOR PEDAL


The accelerator pedal is the right pedal on the floorboard. It activates the engine and controls the acceleration of the vehicle.

Apply slow and steady pressure to the accelerator pedal to increase vehicle speed.

DIRECTION SELECTOR

The direction selector is on the seat panel and allows the operator to select F (forward) or R (reverse) to control the direction of travel.

The direction selector has a reverse warning buzzer that activates when in the R position.

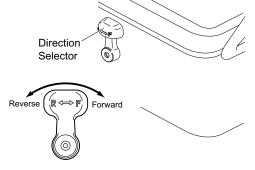


EFI MALFUNCTION INDICATOR LIGHT (MIL)

The MIL is located on the rear of the seat frame. The MIL is located under the rear forward facing seat. The MIL can be used to diagnose a problem and whether a technician will be required to service the vehicle. See MALFUNCTION INDICATOR LIGHT (MIL) on page 57.

CHOKE

This vehicle is equipped with Electronic Fuel Injection and does not require a choke.

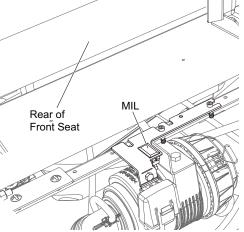

HIP RESTRAINTS

The hip restraints are designed to help keep the occupants properly positioned in the event of a sudden vehicle position change. Make sure that all passengers are seated and holding onto the hip restraint.

SEAT BOTTOM

Each bench seat is designed for two occupants.

Lift up on either hip restraint on the rear forward facing seat to pivot the seat bottom forward and access the components underneath. Pivot and lift up on the seat to completely remove it from the vehicle before operating the vehicle. On the front seat pod, the two T-knobs must be removed prior to pivoting the seat bottom.

GLOVE BOX / STORAGE COMPARTMENTS

The glove box provides storage space for small items. Glove boxes may be equipped with optional shelf and/or glove box doors.

FUEL FILL

The fuel fill is located under the rear seat.

CANOPY TOP AND WINDSHIELD



The canopy top does not provide protection from rollover or falling objects.

The windshield does not provide protection from tree branches or moving objects.



To prevent damage to the vehicle, do not hold on to the canopy top struts.

The canopy top and windshield provide some protection from the elements, but do not keep the operator and passenger dry in heavy rain.

This vehicle is not equipped with seat belts, and the canopy top is not designed to provide rollover protection. In addition, the canopy top does not protect against falling objects, nor does the windshield protect against flying objects and tree limbs.

TRUCK BED


To prevent injury and property damage, follow all warnings, procedures, and weight capacities described on the label in the truck bed as well as the ones in this owner's manual. See *HAULING CARGO* on page 31 and *DUMPING THE TRUCK BED* on page 32.

The tailgate can be opened for loading and unloading cargo.

Open the tailgate latches and lower the tailgate. Lift the tailgate and secure the latches to close the tailgate.

Manual Bed Release Lever

can be tilted by lifting up the release lever on either side of the vehicle. See *DUMPING THE TRUCK BED* on page 32.

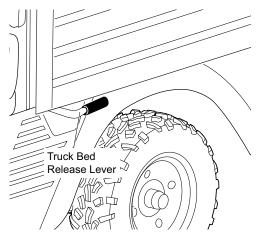

FEATURES AND CONTROLS

SAFETY



Failure to operate the vehicle correctly can result in a collision, loss of control, accident or rollover, and cause serious injury or death. Follow all operation procedures in this section of the manual. Read and comply with all safety warnings in the safety section of

this owner's manual.

BEFORE INITIAL USE

To prepare the new vehicle for operation, complete the following:

- · Remove the protective plastic from the seats.
- · Check for possible leaks that may have developed during shipment of the vehicle.
- Charge the battery.
- · Fill the tank with the correct fuel.
- · Perform the following pre-ride inspection.

PRE-RIDE INSPECTION

Inspect and verify that the vehicle is in safe operating condition before each use to decrease the risk of an accident. Check the items in the table to help ensure safe and reliable operation.

Item	Check	Page
Brake system/pedal travel	Check for proper operation.	50
Hydraulic brakes (if equipped)	Check for brake fluid level.	
Parking brake	Ensure vehicle does not roll when the parking brake is engaged.	
Front suspension	Inspect. Lubricate if necessary. Check for loose or missing hardware.	
Rear suspension	Inspect. Lubricate if necessary. Check for loose or missing hardware.	
CV boots	Inspect for damage. Replace if necessary.	
Steering	Check for smooth and free operation.	
Tires	Check condition and pressure.	40
Wheel hardware	Check for loose or missing hardware.	
Frame hardware	Check for loose or missing hardware.	
Fuel and engine oil	Check for correct levels.	38
Fluid leakage	Inspect vehicle for leaks.	
Switches	Check operation.	
Reverse warning alarm	Check operation.	
Air filter	Inspect; clean or replace if necessary.	47
Headlights	Check operation.	42
Brake light / taillights	Check operation.	42
Starter / generator belt	Check condition.	46

ENGINE BREAK-IN

Correct operation of the engine during the break-in period is essential to the performance, reliability, and life of the engine.

The engine break-in period is:

- the first 50 operating hours of a new engine
- the first 50 operating hours of an engine that has been completely disassembled
- the first few minutes until the engine is warm at each operation

During these break-in periods, operate the vehicle in the following manner:

- · Avoid high engine speeds.
- · Avoid long periods of idle time.
- · Avoid long operating times at low engine speed.
- · Avoid long operating times at the same engine speed.
- · Avoid long operating times with a full load.
- · Vary the engine speed during operation.
- · Apply quick bursts of acceleration after the engine has warmed up.

CVT BELT BREAK-IN

The CVT belt break-in period is the first hour of operation on each new belt.

During the CVT belt break-in period, follow the same guidelines as described for engine break-in operation. See *Engine Break-In* on page 26.

FUEL

Refer to Fuel Handling Guidelines on page 17 for more information regarding handling and storage of fuel.



Refuel only in well-ventilated areas.

Do not add fuel near open flame or electrical items that can cause a spark.



Wear eye protection to protect from splashed fuel and fuel vapors.



Never use cigarettes in or near the area where refueling is done or fuel is stored.

Inspect the fuel cap, tank, and other components for leaks or damage that can cause a hazardous condition.

Do not overfill the tank. Do not fill the tank neck.

Never operate the vehicle with the fuel tank cap removed.

NOTICE: Oxygenated or reformulated gasoline, is mixed with alcohols or ethers. Excessive amounts of these blends can damage the fuel system or cause performance problems. If any performance problems occur, use gasoline with a lower percentage of alcohol or ether.

Use clean, regular grade unleaded fuel. An Ethanol blend of no more than 10% is acceptable.

- 1. Remove the fuel refill cap that is located under the front seat on the passenger side of the vehicle.
- 2. Fill the tank with clean, automotive grade gasoline. See the following chart for requirements.

Fuel Grade requirement Regular 87 octane Ethanol content 10% maximum permissible		NOTES High altitude or heavy use/load applications can benefit from higher octane gasoline.	
		Methanol content	Not permissible

3. Replace the cap when refueling is complete.

ENVIRONMENTAL AWARENESS



When driving the vehicle, be careful of potential environmental hazards like steep slopes, rocks, tree branches, etc. that could cause an incident that could result in vehicle damage, personal injury or death.



There is a risk of fire when the vehicle is operated near combustible material.

Always be respectful of the environment.

Respect all wildlife and their habitat.

Respect private property and comply with all local laws and regulations governing the use of light duty utility vehicles. Make sure you are permitted by property owners to operate the vehicle on their property.

If operating the vehicle on private property, obtain permission from the owner prior to entering their property.

STARTING AND STOPPING THE ENGINE



Unintentional roll-back of the vehicle could cause severe personal injury or vehicle damage. To reduce the possibility of vehicle roll-back, keep the brake fully pressed until the engine has started.

NOTICE: Avoid full throttle starts and fast acceleration until the engine has warmed up.

Always start the engine outdoors or in a well-ventilated space.

- 1. Sit in the driver's seat.
- 2. Press and hold the brake pedal.
- 3. Insert the key and turn the key switch to the ON position.
- 4. Move the direction selector to the appropriate position.

NOTICE: When the direction selector is moved to the reverse position, a warning alarm will activate to indicate that the vehicle is ready to run in reverse.

- 5. Slowly press the accelerator pedal to start the engine.
- 6. When the accelerator pedal is released, the ignition circuit is de-energized and the engine stops. To stop the vehicle more quickly, press the brake pedal.
- 7. Engage the parking brake and remove the key from the switch before exiting the vehicle.

Starting on a Hill



Unintentional roll-back of the vehicle could cause severe personal injury or vehicle damage. To reduce the possibility of vehicle roll-back, keep the brake fully pressed until the engine has started.

Remove the ignition key when exiting the vehicle to prevent accidental starting or unauthorized use.



To decrease the risk of permanent damage to the drive train, do not allow roll-back when you start the vehicle on a hill. Do not use the accelerator and engine to hold the vehicle at a stop on a hill.

- Press the brake pedal with your left foot when releasing the parking brake. Keep pressure on the pedal to prevent the vehicle from rolling back.
- 2. Press the accelerator pedal with your right foot as you release the brake pedal.
- 3. Press the accelerator pedal with gradual and steady pressure until the vehicle reaches the desired speed.

ACCELERATING



Accidental movement of the accelerator pedal can cause the vehicle to suddenly move and cause severe injury or death.

Make sure the key is in the OFF position and the parking brake is engaged any time the vehicle is parked.

Apply slow, steady pressure to the accelerator pedal to increase vehicle speed. When you release the accelerator pedal, the engine will stop running.

NOTICE: On mechanical brake vehicles, if the key switch is in the ON position and the parking brake is engaged, the brake releases when you press the accelerator pedal and can cause the vehicle to move suddenly. This is a feature to make sure the vehicle is not driven with the parking brake engaged. Pressing the accelerator pedal is not the recommended method to release the parking brake.

BRAKING



When carrying cargo or towing a trailer, the weight of the load will increase the braking distance required to slow or stop the vehicle. Not allowing for increased braking distance under load can cause an accident or injury.

- 1. Release the accelerator pedal completely.
- 2. Press the brake pedal to slow the vehicle speed or stop the vehicle completely.
- 3. Practice slowing and stopping using the brake to become familiar with the controls.

DRIVING PROCEDURE

- 1. Perform the pre-ride inspection. See page 25.
- 2. Sit in the driver's seat.
- 3. Check the surroundings and determine the path of travel.
- 4. Release the parking brake.
- 5. Insert the key and turn the key switch to the ON position.
- 6. Move the direction selector to the appropriate position.
- With both hands on the steering wheel, release the brake and immediately start to apply gradual and steady
 pressure to the accelerator pedal.
- 8. Practice maneuvering the vehicle using the accelerator and brake pedals. Drive slowly and cautiously until you are comfortable with the controls.
- 9. Do not drive with a passenger until you have at least two hours of experience driving this vehicle.

Coasting



Vehicle speed can increase quickly when driving downhill. Allowing the vehicle to coast downhill at high speeds can cause a loss of control and result in severe injury or death. Limit your vehicle speed by pressing the brake.

Do not allow the vehicle to coast at speeds that are above the maximum recommended speed. Apply constant brake pressure when descending a hill to control the speed of the vehicle.

DRIVING WITH A PASSENGER

- All passengers must be at least 59 in. (150 cm) tall. Passengers must be able to sit with their back against the seat and both feet on the floor.
- Do not allow more than one passenger in the vehicle with a truck bed. If equipped with a rear facing seat, do not allow more than one passenger on the front seat and two passengers on the rear facing seat.
- Do not allow a passenger to ride anywhere on the vehicle except the passenger seat.
- Travel at speeds appropriate for your skills, your passenger's skills and the operating conditions. Avoid unexpected
 or aggressive maneuvers that could cause discomfort or injury to the passenger.
- Handling characteristics can change with the added weight of a passenger. Allow more time and distance for braking.

 
SLIPPERY SURFACES



Skidding or sliding can cause a loss of control. Skidding or sliding can cause a rollover if tires have lost traction, then regain traction suddenly. When operating on slippery surfaces, travel at reduced speed to help maintain control of the vehicle.

When operating in conditions such as ice, water, muddy trails, loose gravel or freezing temperatures, follow these guidelines:

- · Do not operate on excessively rough, slippery, or loose terrain.
- · Slow down before entering potentially slippery areas.
- · Maintain a high level of alertness, carefully evaluate the path of travel, and avoid quick, sharp turns.
- · Correct a skid by turning the steering wheel in the direction of the skid. Never apply the brakes during a skid.



DRIVING UPHILL

When driving up a hill, follow these guidelines:

- · Drive straight up the hill.
- · Avoid excessively steep hills.
- · Keep both feet on the floor or a pedal.
- Check the terrain before driving up a hill. Do not try to climb hills that have excessively slippery or loose surfaces.
- · Drive at a steady rate of acceleration and speed.
- Do not drive over the crest of a hill at high speeds. An obstacle, sharp drop, another person, or another vehicle could be on the other side of the hill.
- · Do not attempt to drive up a hill that is beyond your skill level.

TRAVERSING HILLSIDES

Traversing a hillside is not recommended. Improper procedure can cause a loss of control or a rollover. Avoid crossing the side of a hill unless absolutely necessary. If traversing a hillside is unavoidable, check the terrain and determine if it can be accomplished safely. Do not proceed if the terrain is beyond the vehicle or driver's ability.

If traversing a hillside is unavoidable, follow these guidelines:

- Drive slowly.
- Use extreme caution.
- Avoid crossing the side of a hill that has a slippery surface.
- · Avoid crossing the side of a steep hill.
- When traversing a hillside that has soft terrain, it may be necessary to steer slightly uphill to keep the vehicle traveling in a straight line.
- If you feel that you are losing control of the vehicle, steer downhill if possible to regain control.

DRIVING DOWNHILL



When carrying cargo or towing a trailer, the weight of the load will increase the braking distance required to slow or stop the vehicle. Not allowing for increased braking distance under a load can cause an accident or injury.

When driving down a hill, follow these guidelines:

- · Avoid excessively steep hills.
- · Check the terrain carefully before descending any hill.
- · Never drive down hills with excessively slippery or loose surfaces.
- · Drive slowly.
- Drive straight down the hill. Avoid descending the hill at an angle that could cause the vehicle to lean sharply to one side.
- Apply light and constant pressure to the brakes to maintain slow speed and control of the vehicle.

STALLING ON A HILL

A rollover can result from stalling or rolling backward while climbing a hill. Drive uphill at a constant speed.

If your vehicle completely stalls while climbing a hill:

- Apply the brakes.
- 2. Verify that the area behind you is clear.
- 3. Put the transmission in R (reverse).
- Use steady brake pressure to control the speed, and allow the vehicle to slowly roll straight downhill.

If your vehicle begins to roll downhill:

- Do not press the accelerator.
- 2. Apply the brakes gradually until the vehicle fully stops.
- 3. Verify that the area behind you is clear.
- Put the transmission in R (reverse).
- 5. Use steady brake pressure to control the speed, and allow the vehicle to slowly roll straight downhill.

DRIVING IN REVERSE

When driving in reverse, follow these guidelines:

- Check that the area behind the vehicle is clear of obstacles and people.
- · Check left and right fields of vision before driving in reverse.
- · Do not back down a steep hill.
- · Drive in reverse slowly.
- · Press the brakes lightly for stopping.
- · Accelerate slow and steady.
- · Avoid turning at sharp angles.

PARKING THE VEHICLE

NOTICE: When parking the vehicle inside a garage or structure, the space must be well ventilated. Park the vehicle away from any source of flame or sparks, including any appliance with a pilot light.

Park the vehicle on a flat surface if possible. If parking on an incline is unavoidable, be sure to chock the wheels as shown in the following illustration to keep the vehicle from rolling.

- 1. Press the brake to stop the vehicle.
- Engage the parking brake.
- 3. Turn the key switch to OFF.
- 4. Remove the key from the key switch to prevent unauthorized use.
- 5. If parking on an incline, chock the wheels on the downhill end as shown in the following illustration.

BATTERY

NOTICE: Heavy use of accessories or leaving accessories turned on when the vehicle is not being used can drain the battery and leave insufficient reserve to start the vehicle.

The vehicle uses a starter/generator to start the engine and charge the battery. The engine does not idle; so the battery does not charge while the vehicle is stopped. Do not operate lights and other accessory items excessively while the vehicle is stopped. Turn off all accessories when the vehicle is stopped.

The generator can supply up to 35 amps. Operation of all accessories can cause the discharge of the battery even if the engine is running and the generator is operating. Discharging the battery is known as deep cycling. The battery is not a deep cycle model. It is a starting battery. Multiple deep cycling causes early failure of the battery.

If the battery discharges, charge it with a 12-volt charger that is rated at 10 amps or less and according to the instructions supplied by the manufacturer of the charger.

HAULING CARGO



Hauling cargo incorrectly can alter the vehicle handling characteristics and cause a loss of control, brake instability, and possibly lead to serious injury or death.

Never exceed the maximum weight capacity of the vehicle. The total load (operator, passenger, accessories, and cargo) must never exceed the maximum weight capacity of the vehicle. See the chart in Maximum Cargo Load | Maximum Weight Capacity on page 31.

Position the load as far forward, and as low as possible in the truck bed.

Secure all loads before operating. Unsecured loads can shift and create unstable operating conditions.



Operating the vehicle with passengers in the truck bed can result in severe injury or death. Never allow a passenger to ride in the truck bed. Passengers must always ride seated in the passenger seat.

Drive slowly and carefully.

Operate only with stable and safely arranged loads. When handling loads that are impossible to center in the truck bed, make sure the load is secured as tightly as possible and oper-

ate the vehicle with extra caution.

Always attach a tow load to the rear hitch of the vehicle.

Reduce speed and allow greater distances for braking when hauling cargo.

Heavy loads affect braking and handling characteristics. Use extra caution when applying brakes with a heavily loaded vehicle. Avoid terrain or situations that may require reverse downhill travel.

Use extra caution when operating with loads that extend over the truck bed sides. Stability and maneuverability can be affected and increase the risk of a rollover.

This vehicle is designed to carry or tow specific capacities. Read and comply with the load distribution warnings on the warning label affixed to the bed. The total load (operator, passenger, accessories, cargo and load on hitch) must never exceed the maximum weight capacity of the vehicle.

Maximum Cargo Load / Maximum Weight Capacity

	Maximum Cargo Load Capacity	400 lbs. (181 kg)	
Maximum Vehicle Weight Capacity		1200 lbs. (545 kg)	

- Do not exceed the maximum cargo load capacity.
- Do not exceed the maximum vehicle weight capacity (includes the weight of the operator, passenger, cargo and accessories).

TRUCK BED OPERATION




Failure to follow these instructions can cause personal injury, damage the vehicle or cause the vehicle to tip over. Be aware of the load when operating the vehicle. Read, understand and follow the warning label attached to the front of the truck bed.

Do not allow passengers to ride in the truck bed. A sudden move or stop can cause severe injury or death to passengers in the truck bed.

Before operating, make sure the area behind the vehicle is clear.

Load Bed (P/N 74821G01)

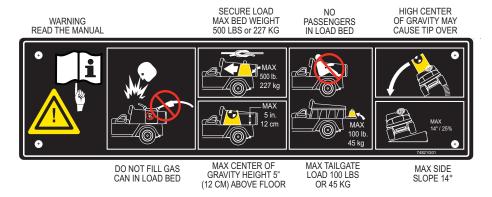

A truck bed warning label is attached to the inside front of the truck bed. Understand and comply with the warnings on this label for safe operation of the vehicle.

- · See the truck bed warning label for maximum load.
- Position the load in the truck bed as far forward as possible.
- Make sure the center of gravity of the load is within the height limit shown on label.
- Secure the load to the truck bed.
- · Be aware of the load when you operate the vehicle.
- Do not allow passengers to ride in the truck bed. Do not drive the vehicle with the truck bed lifted or with the tailgate unsupported.



Never fill a gas container in the truck bed. Static discharge can ignite gasoline vapor and cause an explosion.

Always put the gasoline container on the ground before filling. Never fill a gasoline container in the truck bed. Static electricity is built up during the fueling process and can discharge and cause the gasoline vapor to ignite.

DUMPING THE TRUCK BED



If the bulk of the cargo weight is at the rear of the bed, the bed may unexpectedly dump when the release lever is pulled and cause serious injury to anyone close by. Never pull the release lever unless the load is positioned evenly or located at the front of the truck bed.

Never leave the truck bed in the upright position after emptying the cargo. The bed can unexpectedly close and cause serious injury. Never drive the vehicle with the truck bed in the raised position.

- 1. Select a level location to dump the truck bed load. Do not attempt to dump or unload the vehicle if it is on an incline
- 2. Apply the brakes and engage the parking brake on vehicles with mechanical brakes.

- 3. Put the direction selector in forward (F).
- 4. Exit the vehicle.
- Make sure the cargo is positioned evenly or located at the front of the truck bed.
- 6. Release the tailgate latches.
- Manual bed lift vehicles:
 - Stand clear and pull the release handle. Lift up on the truck bed to dump the cargo.
 - b. When the truck bed is empty, lower the bed back into place.
 - c. Push down to latch the bed.

Electric lift vehicles:

- a. Press the top of the switch to activate the electric lift and raise the bed.
- b. Press the bottom of the switch to lower the bed back into place.
- 8. Close and latch the tailgate.

VEHICLE LOADING	MAX. WEIGHT
Cargo Capacity	800 lbs. (226.8)
Vehicle Rated Capacity = Occupant + Cargo	1200 lbs. (544 kg)
VEHICLE WEIGHT	
Curb Weight (includes fuel)	926 lbs. (420 kg)
Gross Weight = Curb Weight + Rated Capacity	2126 lbs. (964 kg)

- The total capacity of the vehicle, operator, passenger, load bed contents, and accessories must be reduced to compensate for the trailer and load.
- · Drive slowly and carefully.
- · Hauling a load increases braking distances required for slowing or stopping the vehicle.
- · Avoid parking on an incline.
- Do not operate on a grade exceeding 20%.
- · Always secure the cargo.



VEHICLE MAINTENANCE

MAINTENANCE SAFETY



To prevent serious injury or death, follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.

Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.

Remove all iewelry before you service the vehicle.

Do not allow loose clothing or hair to contact the moving parts.

Do not touch hot objects.

The drive wheels must be lifted and supported on jack stands before performing any service to the powertrain while the motor is in operation.

Chock the wheels and support the vehicle with jack stands. NEVER get under a vehicle that is supported by a jack alone. Lift the vehicle according to the manufacturers instructions.



When servicing the vehicle, always wear eye protection. Be careful when working around batteries, using solvents, or compressed air.

Use insulated tools within the battery area to prevent sparks or battery explosion.

Maintain constant awareness that some components are heavy, spring loaded, corrosive, explosive, can cause high amperage, or get extremely hot. Battery acid and hydrogen gas can cause bodily injury. Keep hands, face, feet and body away from any area that can expose them to injury if an unexpected situation occurs.

After performing maintenance, test the vehicle in a safe area that is free from vehicle and person traffic.

NOTICE: To decrease the risk of engine damage, do not operate the vehicle at full throttle for more than 5 seconds if the drive wheels are lifted off the ground.

SCHEDULED MAINTENANCE

Consistent inspection, adjustment, and lubrication of some components are necessary to maintain the *vehicle* so that it remains in safe and reliable condition. Refer to the *SCHEDULED MAINTENANCE CHART* on page 36 for detailed requirements.

Inspect, clean, lubricate, adjust, and replace parts as necessary. Use *CUSHMAN* or equivalent replacement parts. Record the maintenance items performed along with details in the *MAINTENANCE LOG* beginning on page 57.

NOTICE: Service and adjustments are important for safe and reliable vehicle operation. If not familiar with safe service and adjustment procedures, have a certified dealer perform the operations.

Initial Service Requirements

Perform the additional inspection or maintenance at the initial service interval indicated, in addition to regular intervals. See *SCHEDULED MAINTENANCE CHART* on page 36. The initial service is required for optimum performance and reliability.

- · engine oil and filter
- · starter/generator belt

Severe Use Conditions

Vehicles subjected to heavy or severe use must be inspected and serviced more frequently than those of normal use patterns. The following conditions are considered severe use:

- frequent or prolonged use in a dusty environment
- · prolonged low speed operation
- · prolonged heavy load operation

- · frequent use in mud, water or sand
- · short trips in cold weather

SCHEDULED MAINTENANCE CHART

Perform all services at the maintenance interval reached first.

- **S** Indicates operations that need to be performed on vehicles subjected to severe use.
- E Indicates emission-related services (Failure to do this maintenance will not void the emissions warranty but may affect emissions).
- **D** Indicates services that must be performed by an authorized dealer.

Item		Interval (perform at interval that comes first)		Remarks	Page
		Hours	Calendar		
	Steering	Pr	e-ride	Check for smooth and free operation.	
	Front suspension	Pr	e-ride	Inspect. Check for leaks and loose or missing hardware.	
	Rear suspension	Pr	e-ride	Inspect. Check for leaks and loose or missing hardware.	
	CV boots	Pr	e-ride	Inspect. Replace as needed.	
	Tires	Pr	e-ride	Check condition and pressure.	15, 43
	Wheel lug nuts	Pr	e-ride	Check for loose or missing.	41
	Accelerator	Pr	e-ride	Check for smooth operation.	
	Brake system	Pr	e-ride	Check for proper operation.	50
	Frame hardware	Pr	e-ride	Check for loose or missing.	
	Fuel and engine oil level	Pr	e-ride	Check for correct level.	38
	Air filter	Pr	e-ride	Inspect. Clean as needed.	47
	Headlights and taillights	Pr	e-ride	Check operation. Replace bulbs as needed.	42
	Reverse warning alarm	Pr	e-ride	Check operation.	
	Switches	Pr	e-ride	Check operation.	
	Fluid leakages	Pr	e-ride	Inspect entire vehicle for leaks	
	CVT belt	Pre-ride Initial Service Initial Service		Check condition.	
	Engine oil and filter			Replace oil and filter at first 50 hours of operation.	44
	Starter/generator belt			Check between first 15 and 20 hours.	
	Wheels	W	eekly	Check condition of rims, missing or loose lug nuts.	
S E	Air filter	w	eekly	Inspect. Clean as needed.	47
s	Cooling fan	w	eekly	Check for build-up of dirt inside blower housing and fins; clean as necessary.	
s	Engine oil	W	eekly	Check level; add as necessary.	
	Starter/generator belt	W	eekly	Check condition.	
s	Brake pads	10	Monthly	Inspect. Replace as needed.	
	Parking brake	20	Monthly	Conduct brake performance test; adjust as necessary	
	Hydraulic brakes (if equipped)	Мо	onthly	Check brake fluid.	
	Controller	20	Monthly	Check operation of controller braking force.	
	Wiring	20	Monthly	Inspect for loose connections, broken or missing insulation.	
	Direction selector	20	Monthly	Inspect attachment and mechanism; adjust as necessary.	
	Steering	20	Monthly	Check for excess play, loose or missing hardware.	
s	Tie rods	20	Monthly	Check for excess play, bent rods, loose or missing hardware.	
	Engine	20	Monthly	Check for unusual noise, vibration, acceleration, oil leaks.	
	Rear axle	20	Monthly	Check for leakage; add oil as required.	

ltem		Interval (perform at interval that comes first)		Remarks	Page
			Calendar		
s	General lubrication	50	3 Months	Lubricate all fittings, pivots, cables, etc. where required.	38
	Throttle/governor linkage	50	3 Months	Check operation and governed speed.	
E	Fuel system	50	3 Months	Check for leakage at tank, cap, lines, filters, pump, fuel rail.	
	Front axle	50	3 Months	Check for damage, loose or missing hardware.	
	Parking brake	50	3 Months	Inspect linkage rods, latch arm, catch bracket. Lubricate with light oil (Do not lubricate cables or brake latch).	
s	Engine electrical system	50	3 Months	Check coil/spark plug wires for cracks or loose connections.	
s	Rear suspension	50	3 Months	Inspect shocks for leaks, worn bushings, loose or missing hardware.	
s	Front suspension	50	3 Months	Inspect strut for leaks. Check hubs and kingpins, for excessive play, worn bushings, loose or missing hardware.	
	Front wheel alignment	50	3 Months	Inspect for unusual tire wear; align if necessary.	
s	Battery	125	6 Months	Inspect terminals. Clean as needed.	51
	King pins	125	6 Months	Check for excessive play and tightness of retaining nuts.	
	Rear axle	125	6 Months	Check for unusual noise, loose or missing hardware.	
S E	Air filter	125	6 Months	Inspect; clean as necessary.	
	CVT belt	125	6 Months	Inspect for cracks, fraying and excessive wear.	
	Direction selector	125	6 Months	Check for wear and smooth movement; lubricate shaft with light oil if necessary.	
	Steering	125	6 Months	Inspect bellows and pinion seal for damage and leakage.	
	Rack end ball joint	125	6 Months	Check for noise and loose or missing hardware.	
s	Air Filter	250	Yearly	Replace.	
s	Oil filter	250	Yearly	Replace (with oil change).	
s	Engine oil	250	Yearly	Replace. See RECOMMENDED LUBRICANTS AND FLUIDS on page 38 for type and capacity.	38
s	Rear axle	250-300	Yearly	Check fluid level; add if required.	
s	Front wheel bearings	250-300	Yearly	Check and adjust as necessary.	
s	Brakes	250-300	Yearly	Clean and adjust. Check brake shoe linings; replace if necessary.	
s	Muffler/exhaust system	250-300	Yearly	Check hardware. Inspect for leaks at head and muffler gaskets.	
	Valves - intake/exhaust	250-300	Yearly	Check cold.	
S E	Spark plug	250	Yearly	Replace and gap new.	48
	Cylinder head and piston	500	5 years	Remove carbon.	
	Cylinder head and piston	500	5 years	Check valve seats for carbon buildup; clean if necessary.	
	Rear axle	500	5 years	Replace fluid.	

RECOMMENDED LUBRICANTS AND FLUIDS

Check and lubricate all components at the intervals shown in the SCHEDULED MAINTENANCE CHART beginning on page 36.

Item	Capacity	Lubricants/Fluids		Notes
	1.3 qt. (1.25 L)	10W-30	Light duty use engines	
Engine oil		10W-30	Heavy duty use in air temperatures below 40° F (4° C)	See page 44.
		10W-40	Heavy duty use in air temperatures above 40° F (4° C) after 100 hour break-in period	
Brake fluid	DOT 3			
Fuel	6.0 gal. (22.7 L)	L) Unleaded; 87 octane min 10% ethanol content max.		See page 26.
Rear axle oil	51 oz. (1.5 L)	MOBIL 424		
Rear axle friction modifier	2 oz. (60 ml)			
Grease fittings		Universal joint grease or equivalent		Do not exceed 3 pumps of grease in each fitting.

REPLACEMENT OF MAINTENANCE ITEMS

These items or their equivalents can be purchased through an authorized dealer, directly from *CUSHMAN* or any other qualified source.

Item	Part Number
Oil Filter	607454
Air Filter	28463G01
Spark Plug (NGK BPR2ES)	607462
Starter/Generator Belt	26414G1
Clutch Belt	618630
15A Fuse	636455G13
10A Fuse	636455G12
Fuel Pump Relay	663593
LED Headlight Assembly	651411G03
Headlight Bulb	619100
Turn Signal Bulb	619102
Taillight Bulb	611242

LIFTING THE VEHICLE



Read and comply with all of the following warnings and lifting procedures to prevent the possibility of the vehicle falling and causing serious injury or death.

For some maintenance procedures, it is necessary to lift the vehicle. Comply with the following warnings and follow the lifting procedure to ensure the safety of you, your vehicle and surroundings.



The vehicle must be on a firm and level surface for lifting.

Remain constantly aware that the vehicle is not stable during the lifting process.

Place the jack and jack stands only in the areas indicated in the following illustration.

Do not get under a vehicle until it's stability on the jack stands is verified; never get under a vehicle while it is on a jack alone.

Put wheel chocks in front and behind all wheels that are not being lifted.

Do not allow anyone to remain or get on the vehicle at any time during the lifting process or when the vehicle is lifted.

When performing any service to the drive train, lift the drive wheels off the ground.

Tools

- iack
- jack stands (4)
- · wheel chocks

Lifting Front


- Chock the rear wheels to keep the vehicle from rolling backward.
- 2. Put a jack under the center of the front axle.
- 3. Raise the vehicle with the jack.
- Install jack stands under the front frame cross member as shown.
- 5. Lower the vehicle until it rests on the jack stands.
- 6. Remove the jack.
- Confirm that the vehicle is stable on the jack stands before proceeding with any service.

Lifting Rear

- Chock the front wheels to keep the vehicle from rolling forward
- 2. Put a jack under the center of the rear frame cross member.
- 3. Raise the vehicle with the jack.
- 4. Install jack stands under each end of the rear axle.
- 5. Lower the vehicle until it rests on the jack stands.
- 6. Remove the jack.
- Confirm that the vehicle is stable on the jack stands before proceeding with any service.

Lowering Vehicle

- Make sure chocks are still in place on any wheels that remain on the ground.
- Put the jack in the same location that was used to raise the vehicle.
- 3. Raise the vehicle enough to remove the jack stands. Remove the jack stands from underneath the vehicle.
- 4. Slowly lower the vehicle to the ground and remove the jack.

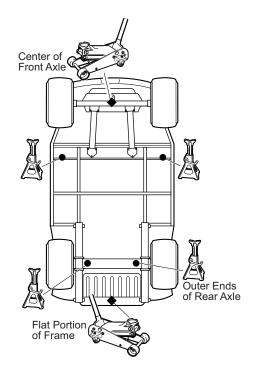

VEHICLE CLEANING AND CARE

Keeping your vehicle clean is not only beneficial to its appearance, but can also help extend the life of various components.

Washing the Vehicle

NOTICE: Do not use a pressure washer to wash the vehicle. High water pressure can damage components.

Some products, including insect repellents and chemicals, will damage plastic surfaces. Do not allow these types of products to contact the vehicle.

- Do not use a pressure washer to clean the vehicle.
- Use an automotive type cleaner or mild soap to wash the vehicle. Harsh cleaners can scratch the finish.
- Use clean or new cloths and pads for washing. Reused cloths and pads can contain dirt particles that will scratch
 the finish.
- Inspect all grease fittings for dirt intrusion or lack of grease after washing. Apply grease as required to maintain proper function.
- · Use a sponge or soft brush and a soap/water solution to clean the vinyl seats. Rinse with clean water.
- Use an automotive type wash cloth to wash the body of the vehicle. To prevent the soap from drying on the vehicle, rinse with clean water frequently.
- Clean the windshield with water and a clean cloth. Remove small scratches with a plastic polish.
- Clean the bottom of the vehicle where mud or dirt can collect. Loosen any packed sediment to help with removal.
 Be careful not to damage the paint.
- Dry the vehicle with a chamois before the water dries to prevent water spots.

Polishing the Vehicle

- Do not use medium to heavy duty compounds on the finish. Use wax that is for clear coat automotive finishes only.
 Do not apply wax or polish to matte finish surfaces.
- Use clean or new cloths and pads for polishing. Old or reused cloths and pads can contain dirt particles that will scratch the finish.

TIRES

Follow the tire maintenance procedures as instructed in this manual and on the labels on the vehicle.

Always use the approved size and type of replacement tires. See Vehicle Specifications for the proper tire type and size.



Worn, improperly inflated, improper sized, or incorrectly installed tires will affect vehicle handling and could cause an accident resulting in severe injury or death.

Inflate all tires to the same pressure. Operating with unequal or incorrect pressure can adversely affect steering and handling and could cause an accident resulting in severe injury or death.

To decrease the risk of tire explosion, do not exceed the tire inflation rating on the tire sidewall. Make sure the tires are properly inflated at all times of operation. See *Tire Pressure* on page 15.

To decrease the risk of tire explosion, inflate small amounts of air into the tire at intervals to allow the bead to seat properly. Because of the low volume of the small tires, over inflation can occur in seconds. Never exceed the tire inflation pressure rating on the tire sidewall when seating a bead. Protect your face and eyes when you remove a valve core.

When you remove the wheels, use only sockets made for impact wrenches to decrease the risk of injury by a broken socket.

Do not use tires with a low rated pressure. Do not use tires that have a recommended tire inflation pressure less than the tire inflation pressure recommended in the owner's manual.

Do not over inflate the tires. Excess pressure can cause the tire to separate from the wheel or cause a tire explosion.

Tire Pressure

Maintaining correct tire inflation pressure is essential for safe vehicle operation. You can vary the inflation pressure, within the recommended range to suit the condition of the terrain.

TIRE PRESSURE RANGE	TERRAIN CONDITIONS	RECOMMENDATION	
18 - 22 psi (124 - 152 kPa)	hard surfaces or pavement	Inflate to higher pressure within the range; never exceed maximum pressure indicated.	
10 - 22 psi (124 - 132 kFa)	soft terrain or turf	Inflate to lower pressure within the range to reduce potential damage to the terrain or turf.	

Tire Repair

Tools

lug wrench, 3/4"impact wrench

· impact socket, 3/4"

· torque wrench, ft.lbs.

NOTICE: Tire plug tools and plugs are available at automotive outlets. The tire does not have to be removed from the wheel to install the tire plug.

Use a tire plug to repair small holes in the tread part of the tire. For large holes or holes/cuts in the tire sidewall, the tire must be replaced.

- 1. Remove the wheel from the vehicle. See Wheel Removal on page 41.
- Locate the leak in the tire.
 - a. If the tire is very low or flat, fully inflate the tire.
 - b. Brush soapy water over the surface of the tire. Air bubbles will be visible where the air is leaking from the tire.
 - c. Mark the hole with chalk.
- 3. Install the plug according to the manufacturer's instructions.
- 4. Install the wheel on the vehicle. See Wheel Installation on page 42.
- 5. Fully inflate the tire. See *Tire Pressure* on page 15.

Tire Replacement

Tire replacement requires a tire mounting machine, and must be done by a qualified tire center or an authorized CUSHMAN dealer.

WHEELS



Worn, improperly inflated, improper sized, or incorrectly installed tires will affect vehicle handling and could cause an accident resulting in severe injury or death.



To decrease the risk of component damage, do not tighten the lug nuts to more than the torque specified below.


Check the lug nuts for tightness at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.

Wheel Removal

Tools

· lug wrench, 3/4"

- · impact socket, 3/4"
- impact wrench
 torque wrench, ft.lbs.
- 1. Lift the vehicle. See LIFTING THE VEHICLE on page 39.
- Remove the lug nuts.
- Remove the tire from the vehicle.

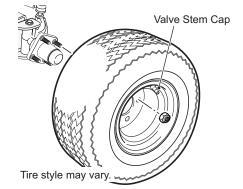

Wheel Installation


Lug Nut Torque	65 - 85 ft.lbs. (88 - 115 Nm)
3	,

NOTICE: To decrease the risk of component damage, do not tighten the lug nuts to more than the specified torque.

Always install lug nuts using a cross sequence pattern to ensure the even seating of the wheel against the hub.

- Install the wheel on the hub with lug nuts. Make sure the valve stem is to the outside.
- 2. Finger tighten the lug nuts.
- 3. Using the cross tightening pattern shown to the right, tighten the lug nuts to 65 85 ft.lbs. (88 115 Nm). Tighten in increments of 20 ft. lbs. (27 Nm).

 Lug Nut Tightening Pattern



LIGHTS

- · Clean the lights frequently to maximize visibility.
- · Replace burned out bulbs promptly.



Do not operate this vehicle at night or in low light if any bulbs are burned out. Poor lighting reduces visibility that could cause an accident resulting in severe injury or death.

NOTICE: Replacement bulbs are available from a local Distributor, an authorized Branch or the Service Parts Department.

Halogen Headlight Bulb Replacement



Light components can get hot if they have been in operation. Allow the lights to cool before servicing to prevent burns to the skin.


NOTICE: Do not touch a halogen bulb with bare fingers.

Oil from skin leaves a residue that causes a hot spot and will diminish the life of the bulb.

- 1. Disconnect the headlight harness from the headlight.
- Rotate the bulb 1/4-turn to remove the headlight bulb from the housing.
- 3. Insert and rotate the new bulb to lock into place.
- 4. Connect the harness to the bulb.

LED Headlight Assembly Replacement

- 1. Disconnect the headlight harness from the headlight.
- 2. Remove the screws securing the headlight assembly to the headlight bezel.
- Remove the headlight assembly and install the new one with screws.
- Connect the harness to the headlight assembly.

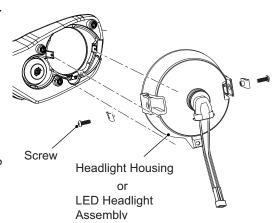

Taillight

- Roll the rubber bezel from around the edge of the taillight and remove the lens
- 2. Install the new bulb.
- 3. Replace the lens.



Roll rubber bezel

FUSE REPLACEMENT

The fuse block is under the driver seat.

NOTICE: Have the vehicle inspected by an authorized dealer if fuses continue to blow after they have been replaced.

- 1. Lift the seat bottom to access the fuses.
- 2. Remove the old fuse and replace with a new fuse of the same type and size.
- 3. Fuses are available from a local Distributor, an authorized Branch, or the Service Parts Department.

FOUR CYCLE ENGINE

The engine is an air cooled, 4-stroke, OHV, single cylinder gasoline engine. It has a pressure fed lubrication positive displacement oil pump with a cartridge type full flow oil filter and a counter rotating balance shaft.

NOTICE: The engine uses more oil during the first hours of operation, than after the internal parts are run-in.

As the run-in process occurs, oil use will gradually decrease until it stabilizes.

Engine Specifications

Engine Model	EFIA-1
Type	Four cycle, OHV
Number of Cylinders	1
Displacement	401 cc
Rated Horsepower	13.5 hp
Spark Plug Type	NGK BPR2ES
Spark Plug Gap	.028" - 031" (.7080 mm)
Cooling	Forced Air Cooled
Oil Filter	Cartridge Type Full Flow Filter
Oil Pump	Positive Displacement Pump

CHECK THE OIL LEVEL

Check the engine oil at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.

Tools

- funnel
- · clean lint-free cloth

 


Wear protective gloves to prevent scalding from hot engine oil.

Check the engine oil level when the engine is warm and the vehicle parked on level surface.

- 1. Turn key switch to the OFF position and engage the parking brake.
- 2. Allow oil to drain into crankcase.
- 3. Wipe the top of the engine clean with a cloth to remove debris that could fall in the engine.
- 4. Remove the dipstick and wipe off the entire length with a clean lint-free cloth.
- 5. To get an accurate level reading, wipe oil from the dipstick and insert back into the opening.
- Remove the dipstick again and check the level. The oil level must be in the area between L and H (in the crosshatch) on the dipstick.
- 7. The engine can be operated safely as long as oil is within the safe operating range as indicated on the dipstick.

NOTICE: The lack of oil or low oil level can damage the engine. Do not operate vehicle if oil level is below the safe area indicated on the dipstick.



8. If the oil level is below the L line, add engine oil into the dipstick hole until the level is between L and H.

NOTICE: Excessive oil can damage the engine. Oil expands as it gets hot, so do not overfill.

- 9. If the oil level is above the H line, pump out the excessive oil with a siphon pump.
- 10. Replace the dipstick.

NOTICE: The oil dipstick/fill cap must be in place before operating the engine. Failure to install the dipstick/fill cap will result in oil contamination or oil being discharged into the engine compartment.

See RECOMMENDED LUBRICANTS AND FLUIDS on page 38 for oil capacity and grade. The use of an incorrect grade of engine oil can damage the engine. Always use the recommended grade. Do not mix engine oils of different grades or viscosity.

Do not overfill. Excessive oil can damage the engine. Add oil in small quantities with repeated level checks.

11. When the level is correct, replace the dipstick.

CHANGE THE ENGINE OIL

Change the engine oil at the initial service and then intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.

Tools

- · ratchet
- · socket, 19 mm
- · Extension, 8"

- · universal strap wrench
- funnel
- · drain pan

NOTICE: See RECOMMENDED LUBRICANTS AND FLUIDS on page 38 for oil capacity and grade. The use of an incorrect grade of engine oil can damage the engine. Always use the recommended grade. Do not mix engine oils of different grades or viscosity.

Do not overfill the oil tank. Excessive oil can damage the engine. Add oil in small quantities with repeated level checks.

If vehicle is to be stored over winter months, it can be stored with old oil left in engine. The oil should be changed as part of spring maintenance to remove any moisture that has accumulated during storage.

Remove the Engine Oil



Wear protective gloves to prevent scalding from hot engine oil.

Change the engine oil when the engine is warm and the vehicle is parked on a level surface.

- 1. Turn the key to OFF and engage the parking brake.
- 2. Wipe the top of the engine clean with a cloth to remove debris that could fall in the engine.
- 3. Remove the oil fill cap.
- 4. Place a drain pan under the oil drain plug at the rear of the engine base.
- Remove the drain plug and allow the oil to completely drain into the pan.

NOTICE: At the first oil change, small metal chips and lint may be found. This is normal, resulting from the break-in period. Inspect the filter at every oil change. The presence of large metal chips could indicate possible damage to the engine.

- 6. Before installing the drain plug, clean the area around the drain hole with a lint free cloth
- Inspect the drain plug and o-ring for damage; replace if necessary.
- 8. Tighten the drain plug to 62 in. lbs. (7 Nm) torque.


Change the Oil Filter

- Clean the area around filter.
- 2. Place a drain pan below the oil filter.
- Remove the filter from the engine and allow the oil to drain.
- 4. If the filter o-ring remains on the engine surface, remove it and discard it along with the filter (7).





- 5. Inspect the new oil filter for any defects.
- 6. Apply engine oil to the oil filter o-ring (5).
- Install the oil filter onto the engine until the o-ring contacts the mounting surface of the engine. Turn the filter 2/3 to 3/4 rotations by HAND(S).

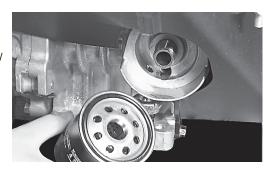

Refill Oil

NOTICE: See RECOMMENDED LUBRICANTS AND FLUIDS on page 38 for oil capacity and grade. The use of an incorrect grade of engine oil can damage the engine. Always use the recommended grade. Do not mix engine oils of different grades or viscosity.

Engine oil must be high quality oil that meets or exceeds API SF, SG, CC standards.

Do not overfill. Excessive oil can damage the engine. Add oil in small quantities with repeated level checks.

- To allow for possible residual oil left in the engine, add slightly less than the rated engine capacity (RECOM-MENDED LUBRICANTS AND FLUIDS on page 38) into the fill hole.
- 2. Check the oil level on the dipstick. The oil should be slightly below the H level and within the crosshatch to allow for expansion.
- 3. Add oil in small quantities with repeated level checks to make sure you are not overfilling the engine.
- 4. When the level is correct, replace the dipstick.
- 5. As a final check, check the oil level again with the vehicle on level ground.

Oil increases in volume when warm. The H mark on the dipstick is calibrated for an engine at operating temperature. When the engine is cold, the oil will be below the full mark. The engine can be operated safely as long as the oil is within the safe operating range as indicated on the dipstick. Do not operate the vehicle if the oil level is below the safe area indicated on the dipstick.

STARTER/GENERATOR BELT

Check the starter/generator belt at the initial service and then intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.

Tools

Belt Tension Gauge

CAUTION

- Wrench, 3/4"
- Wrench, 9/16"


- Ratchet
- Socket, 3/4"

Never allow the tension to exceed 160 lbs (73 kg) while installing the belt.

At the time of installation, the belt must not be rolled over the installed edges of the starter/generator or drive clutch pulleys. Excessive stretch in the belt can cause cord failure.

NOTICE: A loose belt can cause audible vibration and squeal.

- 1. New belt:
 - Tighten a new starter/generator belt to 25 30 lbs. (110 -130 N) tension when a gauge is applied half way between the two pulleys.
 - A new belt may be checked manually. A maximum deflection of 3/8" (10 mm) is acceptable.
- 2. Existing belt:
 - Tighten an existing belt to 17 18 lbs. (75 80 N) tension using the same technique.
 - Inspect for cracks or wear. A maximum deflection of 1/2" (13 mm) is acceptable.

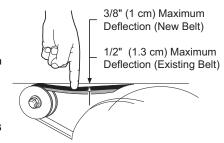

Adjusting the Belt

- 1. Loosen the starter/generator pivot bolt.
- 2. While holding the lower adjusting nut with a wrench, loosen the upper jam nut with another wrench. Move the lower nut up or down the adjustment bolt until the correct belt tension is achieved.
- 3. Hold the lower nut in place and tighten the upper jam nut against it.
- 4. Tighten the starter/generator pivot bolt.

AIR INTAKE AND COOLING FINS

 


Keep the engine cooling components clean to reduce the risk of overheating and the possible igni-

tion of accumulated debris.

Dirt and debris can clog the engine air cooling system. Allow the engine to cool and use the following guidelines after every off-road use:

- Check for a build up of dirt and debris in the air intake and cooling fins.
- Clean the areas shown to prevent engine damage.
- · Make sure the linkages, springs and controls are clean.
- Make sure the area around the muffler is free of any combustible material.



Clean the cooling system at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.



The rear axle has an oil level check/fill plug located on the driver side at the rear of the housing. Unless leakage of axle oil is evident, an annual check is sufficient.

Change the axle oil at the intervals indicated in the SCHEDULED MAINTE-NANCE CHART on page 36. The drain plug is located at the bottom of the rear axle housing.

Checking the Axle Oil Level

Tools


- · Socket, 13 mm
- Ratchet
- Funnel
- 1. Clean the area around the check/fill plug.
- Remove the plug. The correct axle oil level is just below the bottom of the threaded hole.
- If axle oil is low, slowly add oil with a pump until it starts to seep from the check/fill hole. Install the plug.

AIR FILTER

Inspect and replace the air filter cartridge at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.


NOTICE: The filter is a dry filter. Do not apply oil.

- 1. Unlatch the cover to access the air filter cartridge.
- 2. Remove the filter from the housing.
- 3. Inspect the cartridge.

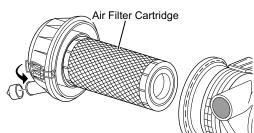



Using compressed air to clean the filter cartridge will damage the filter which can cause engine damage.

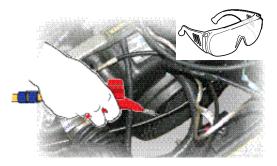

Check/Fill Plug

Drain Plug

- A lightly soiled filter can be cleaned by tapping out dust. Do not use compressed air on the filter. If the filter is heavily soiled, it must be replaced.
- 5. Reinstall or replace the filter, making sure it is fully seated in the housing.
- 6. Replace the housing and secure with the latches on the air cleaner cover.

LUBRICATION




Do not use more than three pumps of grease in a grease fitting at any one time. Excess grease can cause grease seals to

fail, or allow grease into areas that could damage components.

Pumping more than three pumps of grease in a grease fitting could damage grease seals and cause premature bearing failure.

Lubricate components at the intervals indicated in the SCHED-ULED MAINTENANCE CHART on page 36.

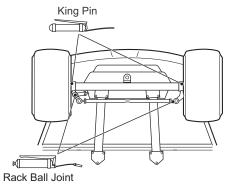

View from Underside of Vehicle

SPARK PLUG

Tools

- · spark plug socket, 13/16"
- · ratchet
- · anti-seize compound


- · torque wrench, ft. lbs
- · feeler gauge



Do not over tighten the spark plug. Over tightening the plug can cause damage to the aluminum cylinder head threads.

- 1. Remove the spark plug when the engine is cold.
- 2. Inspect and replace the spark plug at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.

INSPECT	CONDITION OF SPARK PLUG	ACTION
Electrode	Sooty	Clean carefully with a wire brush.
Electrode	Worn or damaged	Replace spark plug.
	Fouled (indicated by a wet, black appearance) possibly caused by:	
	dirty air filter element or other restrictions in the air intake system	Clean air system. Replace spark plug.
Condition of plug	incorrectly adjusted valves	Adjust valves. Replace spark plug.
	park plug wire in poor condition	Repair or replace wire. Replace spark plug.
	poor fuel quality	Change fuel. Replace spark plug.
Porcelain insulator	Visible cracks	Replace spark plug.
Gap	Correct gap (see illustration at right)	Reinstall spark plug.
Gap	Incorrect gap (see illustration at right)	Adjust to correct measurement.

 

- 3. Apply a light coat of anti-seize compound to the spark plug threads.
- 4. Tighten to 16 ft. lbs. (22 Nm) torque.

MALFUNCTION INDICATOR LIGHT (MIL)

The EFI system uses Diagnostic Trouble Codes to report issues. Both active and stored faults are reported by the Engine Control Module (ECM).

- Active Faults These are faults that have been triggered since the key switch was last turned to the ON position.
- Stored Faults These are faults that are no longer active. These faults have not been triggered since the key
 switch was last turned to the ON position. They were active at one time but were stored when the key switch was
 turned to the OFF position sometime in the past.

These faults can be read from the MIL located on the rear of the vehicle's seat frame. The MIL can be viewed through the opening between the rear of the center console and the refresher unit. A series of flashes indicates each fault code. A description of how to read codes from the MIL is detailed below. More information about each fault can be obtained from a service technician with the proper equipment.

Follow the below procedure to read active and stored vehicle faults from the MIL:

- 1. Lock the vehicle's direction selector in Neutral.
- 2. View the MIL under the rear forward facing seat.
- 3. Turn the key switch to the ON position
- 4. Observe the sequence of flashes. Each code is separated by five seconds of solid illumination.
 - a. Single-digit fault codes display as a sequence of one-second flashes, with the number of flashes matching the code value (e.g. 8 flashes for MIL code 8).
 - b. Double-digit fault codes display as a combination of 0.3-second flashes for the tens place and 1-second flashes for the ones place.
 - c. Active faults are displayed first, then stored faults are displayed.
 - d. Active faults are displayed whether the engine is running or not. Stored faults only display when the engine is not running.

If there are no active or stored faults, the MIL will illuminate continuously (no flashes) to demonstrate functionality. The ECM will enter sleep mode after 60 minutes of inactivity. If the key switch is in the ON position and the MIL is not illuminated, press and release the accelerator pedal to wake the system and reveal any active fault codes.

MIL Flash Code	Fault	Recovery Steps
1	Temp Sensor Disconnected / Failure	Check that the sensor is connected. If connected, contact an authorized service rep.
2	Throttle Position Sensor Failure	Contact an authorized service rep.
4	O ₂ Sensor Disconnected / Failure	Check that the sensor is connected. If connected, contact an authorized service rep.
5	High Battery Voltage	Verify battery voltage is between 10-16 VDC. If voltage is over 16 VDC, contact an authorized service rep.
5	Low Battery Voltage	Verify battery voltage is between 10-16 VDC. If the voltage is below 10 VDC, replace the battery. If the fault persists, contact an authorized service rep.
SOLID	Safeties Active	Press and release the accelerator pedal. If the fault is still present while the accelerator pedal is pressed, contact an authorized service rep.
8	Engine Running Rich / Lean	Verify that the air filter is not clogged. If the fault persists, contact an authorized service rep.
22	Limp Home	Contact an authorized service rep.

BRAKES



Always inspect the pedal travel before operating a vehicle to confirm some brake function is present.

All driving brake tests must be done in a safe location with regard for the safety of all personnel.

NOTICE: Over time, a subtle loss of performance may take place. It is, therefor, important to establish the standard with a new vehicle.

Test and service the brake system at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36.

Periodic Brake Test

The *Periodic Brake Test* must be performed initially and regularly as an evaluation of your vehicle's brake system performance. It is a method of identifying a subtle loss of braking performance over time.


Establish the 'acceptable stopping distance' when your vehicle is new and the brakes are at their peak of performance. As your vehicle is used, a subtle loss of braking performance may be detected, so it is important to establish the standard with a new vehicle.

Actual stopping distances are influenced by weather conditions, terrain, road surface condition, vehicle weight and speed. No specific braking distance can be reliably specified, so it is important to establish a base to test with.

The test is conducted by engaging the park brake instead of the brake pedal to eliminate different pedal pressures, to include affects of linkage mis-adjustment and provide a more accurate test.

NOTICE: You must have enough space to accelerate to maximum speed before engaging the parking brake. Use a marker to indicate the predetermined line to engage the parking brake that you will use for the performance test.

- On a dry, level, clean, paved surface, accelerate the vehicle to maximum speed.
- Engage the parking brake at the predetermined and marked line.
- Mark the line where the vehicle comes to a complete stop.
- If the vehicle stops in a significantly greater distance than the established distance in future tests, or pulls to one side, it should be tested again.
- If the vehicle fails the second test, discontinue use until it can be inspected and determined safe for operation by a qualified mechanic.

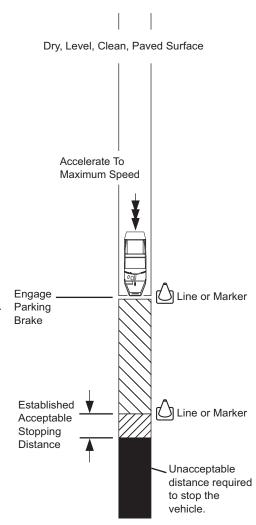

Brake Fluid (If Equipped w/ Hydraulic Brakes)



When adding or changing brake fluid, always use brake fluid from an unopened bottle. After opening a bottle of brake fluid, always discard the unused portion. Do not store or use from an opened bottle. Brake fluid rapidly absorbs moisture from the air. The mois-

ture causes the boiling temperature of the brake fluid to drop. This can lead to premature brake fade and the possibility of an accident that can result in severe injury or death.

The brake fluid reservoir is under the cowl at the passenger's side front wheel.

In addition to the scheduled maintenance interval for changing the brake fluid the brake fluid must also be changed in the following conditions:

- · the fluid becomes contaminated
- · the fluid level falls BFI OW the MIN mark
- the type and brand of the fluid in the reservoir are unknown replace the brake fluid according to the instructions in the vehicle repair manual.

Check Brake Fluid Level

- 1. Park the vehicle on a level surface.
- Check the brake fluid level at the reservoir. The fluid level should be between the upper MAX and lower MIN lines.
- 3. If the level is below the upper MAX line, add brake fluid:
 - a. Clean any dirt and debris from around the reservoir cap.
 - b. Remove the cap.
 - c. Add fluid until it reaches the upper MAX line.
 - Reinstall the cap.
 - e. Clean any spilled brake fluid from the area.
 - f. Dispose of the unused portion of the brake fluid.
- Press and hold the brake pedal fully down for a few seconds.

Check for fluid leakage around the fittings.

BATTERY

The vehicle has a sealed battery, which requires no maintenance except to keep it corrosion-free, and to test for functionality.

The sealed battery is filled with electrolyte and sealed at the factory. Never pry the seal strip off, or add fluid to the battery.

Inspect the battery terminals at the intervals indicated in the SCHEDULED MAINTENANCE CHART on page 36. Clean and tighten as needed.



Use insulated wrenches to prevent direct contact of a wrench with the battery terminals. Direct contact of a bare wrench with battery terminals can cause an explosion resulting in severe injury or death.

To prevent the risk of battery explosion, keep all flammable materials, open flames or sparks away from the batteries.



The electrolyte in a battery is an acid solution which can cause burns to the skin and eyes. Completely clean all electrolyte spills that contact the body and eyes with clear water. Contact a physician immediately.

Neutralize electrolyte spills with a solution of 2 teaspoons (10 ml) sodium bicarbonate (baking soda) mixed in 1 quart (1 liter) of water. Clean with water.

Battery Cleaning



To decrease the risk of damage to the vehicle or floor, neutralize any acid before you spray the battery with water.

Always wear eye protection when cleaning the battery.

NOTICE: To decrease the risk of damage to the electrical components surrounding the battery while cleaning, do not use a pressure washer.

- 1. Remove corrosion with a wire brush.
- 2. Wash the top and sides of the battery with a solution of:
 - 1 tsp. (5 ml) baking soda
 - 1 cup (236 ml) water

Wash all metal components near the battery.

- 3. Rinse with tap water and dry with shop towels.
- 4. After the battery is clean and dry, coat with a commercially available battery terminal spray.

Battery Charging



Hydrogen gas is produced as batteries are charged. Charge batteries only in well-ventilated areas.

Do not overcharge the battery. Overcharging the battery can cause overheating and possible explosion, resulting in severe injury or death.

NOTICE: Use a battery charger that is designed for charging sealed batteries.

Keep battery fully charged.

Heavy use of accessories can drain the battery and leave insufficient charge to start the vehicle.

The sealed battery is a 12 V starter battery that supplies power to the starter and accessories. A starter starts the engine and an internal generator charges the battery while the engine is running. Due to heavy use of accessories, the battery can become discharged even if the engine is running and the generator is operating.

It is important to keep the battery fully charged. Since the battery is sealed, a voltmeter or multimeter is required to check voltage.

- 1. Check the battery voltage with a voltmeter or multimeter.
 - · If the voltage measured is 12.8 V or higher, the battery is fully charged and requires no further action.
 - If the voltage measured is less than 12.8 V, recharge the battery.
- Charge the battery with a charger designed for sealed batteries. Follow the instructions supplied from the manufacturer of the charger.

Discharged Battery



To decrease the risk of severe injury or death from accidental movement, do not use jumper cables to start a vehicle.

The vehicle has a starter/generator and does not idle. When you start the engine, the starter/generator functions as a starter and with the engine running, it functions as a generator.

The generator can keep the battery charged with short run times, but the generator will not charge a discharged battery.

When the engine starts, the clutches engage and cause the vehicle to move making jump starting both dangerous and impractical.

If the battery has discharged, charge it with a 12-volt charger that is rated at 10 amps or less and according to the instructions supplied by the manufacturer of the charger.

Battery Disposal

Return used batteries to the manufacturer or lead smelter for recycling purposes. For neutralized spills, put any residue in acid-resistant containers with absorbent material such as sand. Dispose in accordance with state and federal regulations for acid and lead compounds. Contact authorized environmental agencies for information about disposal.

Battery Storage

NOTICE: A battery will self-discharge over time. The rate of discharge varies depending on the ambient temperature, age, and condition of the battery. Check the battery each month during storage and charge as needed to maintain a full charge.

A full charge will prevent the battery from freezing in winter conditions.

If the vehicle is going to be out of operation for three (3) months or longer, do the following:

- 1. Remove the battery from the vehicle.
- 2. Make sure the battery is fully charged.
- 3. Store it out of the sun, in a cool, dry place.
- 4. Check the battery voltage each month during storage and recharge as needed to maintain a full charge.

TRANSPORTING THE VEHICLE



Do not ride or allow other people on a vehicle being transported on a trailer or being towed with another vehicle.

Hauling the Vehicle



Loose cargo or vehicle components can fly off when the vehicle is being transported. Secure or remove all cargo. Inspect the vehicle for loose components prior to transport.

Do not allow any people on a vehicle being transported on a trailer.

Remove the windshield before you transport a vehicle on a trailer.

Maximum speed with canopy top installed is 50 mph (80 kph).

- If the vehicle is being hauled on a trailer or truck at highway speeds, the canopy top must be removed.
- If the vehicle is being hauled on a trailer or truck below highway speeds, check that canopy top hardware is tight and there are no cracks in the canopy top at the mounting points.
- The rated capacity of the hauling trailer or truck must be more than the weight of the vehicle and load plus 1000 lbs. (454 kg). See GENERAL SPECIFICATIONS for the weight of the vehicle.
- 1. Drive the vehicle onto the trailer or truck.
- 2. Engage the parking brake. Leave the direction selector in F (forward).
- 3. Turn the key switch to the OFF position.
- 4. To prevent the loss of the key, remove it from the key switch.
- 5. Make sure the fuel cap is tight.
- 6. Make sure the seats are secured.
- 7. Secure the vehicle to the trailer or truck with tie downs, straps or ropes.

Towing the Vehicle



Do not try to tow the vehicle with ropes, chains or any device different from a tow bar approved by the manufacturer.


Do not tow the vehicle on highways.

Do not tow the vehicle at speeds more than 12 mph (19 kph).

1. Turn the key switch to OFF.

NOTICE: The direction selector has a neutral lock to prevent the driven clutch from turning the rear wheels when the vehicle is being towed by another vehicle.

- Lock the direction selector with the neutral lock to ensure the direction selector remains locked in the neutral position.
 - a. Lift the seat to access the neutral lock.
 - Pull out and rotate the neutral lock pin handle so that the pointed portion of the handle is to the side of the direction selector cam.
 - c. Move the direction selector toward the area between F and R. During that motion the pin will snap into the hole in the direction selector mounting bracket, preventing movement.
 - When in this position, the direction selector remains locked in the neutral position.
- Attach the vehicle to the towing vehicle with a tow bar that is approved by CUSHMAN.
- 4. Release the parking brake if it is engaged.

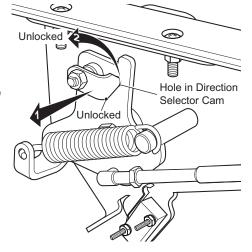

- After the vehicle has been towed, unlock the direction selector.
 - a. Pull the neutral lock pin handle out.
 - b. Rotate until the pointed portion of the handle fits into the hole in the direction selector cam.

VEHICLE STORAGE

Storing a vehicle for 30 days or more requires proper preparation to prevent a build-up of varnish and gum in the fuel system, and corrosion in the engine. The following procedure will prepare the vehicle for storage:

Store your vehicle in an area that is well ventilated. Cover the vehicle. Covers designed specifically for vehicles are recommended because they allow enough ventilation to prevent condensation and corrosion.



Store the vehicle in a clean, dry area. Do not store in an area with a stove, furnace, water heater, or other appliance that uses a pilot light, or has a device that can create a spark.

Do not handle fuel in an area that is not adequately ventilated. Do not smoke near the fuel tank or refuel near open flame or electrical items which could produce a spark.

When refueling, inspect the fuel cap for leaks or breaks that could result in fuel spillage.

Always wear safety glasses while refueling to prevent possible eye injury from gasoline or gasoline vapor.

Keep hands, clothing and jewelry away from moving parts. Use caution not to contact hot objects. Raise the rear of the vehicle and support on jack stands before attempting to run the engine.

NOTICE: The vehicle can be stored with the old oil left in the engine. The oil must be changed when the vehicle is removed from storage, before resuming operation. This removes condensation that may have accumulated in the crankcase.

Do not leave the parking brake engaged during the storage period. Use wheel chocks to prevent the vehicle from rolling.

- 1. Clean the vehicle. See VEHICLE CLEANING AND CARE on page 40.
- 2. Turn the key switch to the OFF position and put the direction selector in the NEUTRAL position.
- 3. Chock the wheels to prevent the vehicle from rolling. Do not engage the parking brake.
- Perform all required routine maintenance indicated in the SCHEDULED MAINTENANCE CHART on page 36.
- 5. Fully inflate the tires. See *Tire Pressure* on page 41.
- 6. Add fuel stabilizer (4 oz. for a full tank of fuel) to the fuel and install the cap securely.
- Remove the spark plug and pour approximately 1/2 oz. (15 ml) of SAE 10 30 weight oil or fogging oil into the cylinder.
- 8. Rotate the crankshaft by hand several times, and reinstall the spark plug.

Remove from Storage

- 1. Change the oil.
- Check the spark plug for tightness. Tighten if necessary.
- 3. Check all items in the daily pre-ride inspection. See PRE-RIDE INSPECTION on page 25.
- 4. Lubricate according to the SCHEDULED MAINTENANCE CHART on page 36.

SPECIFICATIONS

SHUTTLE 4- VEHICLE SPECIFICATIONS

Item	Specification
Overall Length	135.0 in (343 cm)
Overall Width	48.5 in (123 cm)
Overall Height (No Canopy)	48.6 in (123 cm)(Top of steering wheel)
Overall Height (With Canopy)	72.0 in (183 cm)
Wheel Base	93.5 in (237 cm)
Front Wheel Track	34.2 in (87 cm)
Rear Wheel Track	38.0 in (97 cm)
Ground Clearance (at Differential)	4.3 in (11 cm)
Turning Radius	12.8 ft (3.9 m)
Cargo Bed Width (inside)	44.0 in (112 cm)
Cargo Bed Length (inside)	68.5 in (174 cm)
Cargo Box Depth (inside)	12 in (31 cm)
Cargo Box Capacity	12 ft³ (0.34 m³)
Cargo Box Material	Roto-molded Polyethylene
Engine	Walbro 4-Cycle 24.5 in³ (401 cc)
Valvetrain	Single Cylinder OHV
Horsepower (kW)	13.5 hp (10.1 kW) Exceeds SAE J1940 Standard
Cooling System	Air Cooled
Balancer	Internal Counter Rotating Balance Shaft
Ignition	Electronic Inductive Spark / Magneto
Electrical System	Starter / Generator. Solid State Regulator
Battery	12-Volt Maintenance-Free (525 CCA, 85 minute reserve)
Key or Pedal Start	Pedal
Air Cleaner	Replaceable Dry Cartridge
Lubrication	Pressurized Oil System
Oil Filter	Spin-On
Fuel System	Closed-loop electronic fuel injection
Max Fuel Volume	5.96 Gallon (22.6 L)
Fuel Pump Operating Pressure	43.5 psi (3 bar)
Drivetrain	Automatic, Continuously Variable Transmission (CVT)
Transaxle	Differential with helical gears
Gear Selection	Forward - Reverse
Rear Axle Ratio	11.47:1 (Forward) 14.35:1 (Reverse)
Seating Capacity	
Dry Weight	896 lb (406 kg) (without battery)
Curb Weight	926 lb (420 kg)
Bed Load Capacity	500 lb (227 kg)
Vehicle Load Capacity	1200 lb (544 kg)
Outside Clearance Circle	25.5 ft (7.8 m)

SPECIFICATIONS

Speed (Level Ground)	14 mph \pm 0.5 mph (22.5 kph \pm 0.80 kph)	
Towing Capacity	N/A	
Steering	Self-compensating reduction rack and pinion	
Front Suspension	Leaf springs with hydraulic shock absorbers	
Rear Suspension	Leaf springs with hydraulic shock absorbers	
Brakes	Dual rear wheel mechanical self-adjusting drum	
Parking Brake	Self-compensating, single point engagement	
Front and Rear Tires	18 x 8.5 - 8 (4 Ply Rated)	
Frame	Welded steel with DuraShield TM powder coat	
Front Body and Finish	Injection Molded TPO	
Rear Body and Finish	Injection Molded TPO	
Standard Color	Jacobsen Orange	
Noise	Sound pressure; continued A-weighted equal to or less than6db(A)	
Vibration, WBV	Highest RMS value of weighted acceleration is less than 2.5 m/s².	
Vibration, HAV	Highest RMS value of weighted acceleration is less than 2.5 m/s².	
	The uncertainty of measurement is 0.69 m/s².	
	Measurement methods were applied per the ISO 2631 and ISO 5349 standards under conditions of typical vehicle surfaces.	
Some items shown may be optional equipment		

Record periodic maintenance in the following maintenance log.

DATE	MILES (KM) AND HOURS	TECHNICIAN	SERVICE PERFORMED COMMENTS

DATE	MILES (KM) AND HOURS	TECHNICIAN	SERVICE PERFORMED COMMENTS

DATE	MILES (KM) AND HOURS	TECHNICIAN	SERVICE PERFORMED COMMENTS

DATE	MILES (KM) AND HOURS	TECHNICIAN	SERVICE PERFORMED COMMENTS

DECLARATION OF CONFORMITY

DECLARATION OF CONFORMITY - ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ - PROHLÁŠENÍ O SHODĚ - OVERENSSTEMMELSESERKLÆRING - CONFORMITEITSVERKLARING - VASTAVUSDEKLARATSIOON - VAATIMUSTENMUKAISUUSVAKUUTUS - DECLARATION DE CONFORMITE - KONFORMITÄTSERKLÄRUNG - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ - MEGFELELŐSÉGI NYILATKOZAT - DICHIARAZIONE DI CONFORMITÀ - ATBILSTĪBAS DEKLARĀCIJA - ATITIKTĪES DEKLARACIJA - DIKJARAZZJONI TAL-KONFORMITÀ - DEKLARACJA ZGODNOŚCI - DECLARAÇÃO DE CONFORMIDADE - DECLARAŢIE DE CONFORMITATE - VYHLÁSENIE O ZHODE - IZJAVA O SKLADNOSTI - DECLARACIÓN DE CONFORMIDAD - DEKLARATION OM ÖVERENSSTÄMMELSE - SAMRÆMISYFIRLÝSING - KONFORMITETSERKLÆRING - 符合性声明 - SAMRÆMISYFIRLÝSING - 協合宣言 - 적합성 선언서 - UYGUNLUK BEYANI - ДЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ

Business name and full address of the manufacturer - Търговско име и пълен адрес на производителя - Obchodni jméno a pina adresa výrobce - Producentens firmanavn og fulde adresse - Bedrijfsnama en volledig adres van de fabrikant - Tootja arinimi ja tälelik aadress - Valmistajan binnimin ja tälyeliknen sosite - Nom commercial et adresse complète du fabricant - Firmaname und vollständige Adresse des Herstellers - Ertuvujulo коз тохиборик фісивнику котроксистту. Архито бизе неме se tejes cime - Ragione sociale e indirizzo completo del fabricante - Uzofmuma nosaukums un pina ražotāja adrese - Versio pavadnimas r jina spamintojo adreses - Isem kummercigli u indirizz shi hat-lafabrikant - Nazvae firmy dess producenta - Nome da empresa e endereço completo de fabricante - Denumirea comercială şi adresa completă a producătorului - Obchodný názov a úpină adresa výrobcu - Naziv podjetja in polni naslov proizvajalca - Nombre de la empresa y dirección completa def fabricante - Tilverkarens foretagarann och kompleta adress - Fyritrakishelito g full heimilisfang framielabanda - Firmanavn og diri adresse for produsenten - Migamějně z CARRYTIVIRaks log full heimilisfang framielabanda - Ragiona - Alexandres - Popousenten - Migamějně z CARRYTIVIRaks log full heimilisfang framielabanda - Ragiona - Nazve firmy descriptiona - Nazve firmy des	Textron Specialized Vehicles (aka E-Z-GO Division of Textron Inc.) 1451 Marvin Griffin Road Augusta, GA 30906 USA
Product Code • Код на продукта • Кód výrobku • Produktkode • Productcode • Toote kood • Tuotekoodi • Code produit • Produktcode • Kuðinkóς mpolóvroς • Termékkód • Codice produtto • Produkta kods • Produkto koda • Kodici tal-Prodott • Kod produktu • Codigo do Produto • Cod produs • Kód výrobku • Oznaka proizvoda • Código de producto • Produktkod • Vőrunúmer • Produktkod • Produktkod • Vőrunúmer • Produktkod • Vőrunúmer • Produktkod • Vőrunúmer • Vírun Kodu • Kód producto • Kod producto • Produktkod • Vőrunúmer • Vírunúmer • Ví	657077G01, 657078G01, 657079G01 and 657072G01 when fitted w/ CE Kit 614168.
Machine Name • Наименование на машината • Název stroje • Maskinnavn • Machinenaam • Masina nimi • Laitteen nimi • Nom de la machine • Maschinenbezeichnung • Ovoµudrig µлқұмпµштоқ • Gépnév • Denominazione della macchina • lekârfas nosaukums • Maŝinos pavadinimas • Isem tal-Magna • Nazwa urządzenia • Nome da Mâquina • Numele echipamentului • Názov stroja • Naziv stroja • Nombre de la máquina • Maskinens namn • Heiti tækis • Maskinnavn • 취용名称 • Nafn vélar • 禮樣名 • 기기 명칭 • Makine Adi • Назва машини	Personnel Shuttle vehicles w/ Walbro KEFI engine
Designation - Предназначение - Označeni - Betegneise - Benaming - Nimetus - Туурріmerkinta - Раžуmėjimas - Bezeichnung - Хорохтъріоф - Megnevezés - Funzione - Apzīmējums - Lithuanian - Denominazzjoni - Oznaczenie - Designação - Specificaçie - Označenie - Namen stroja - Descripción - Beteckning - Merking - Konstruksjon - 名称 - Útnefning - 用途 - 지정 - Талımı - Позначения	Gasoline powered Shuttle Vehicles
Serial Number - Сериен номер - Sériové číslo - Serienummer - Serienummer - Serianumber - Valmistusnumero - Numéro de série - Serienummer - Σειρίακός αριθμός - Sorozatszám - Numero di serie - Sérijas numurs - Serijos numeris - Numru Serjali - Numer seryjny - Numero de Série - Număr de serie - Sériovê číslo - Serijska številka - Número de serie - Serienummer - Raðnúmer - Serienummer - 採列号 - Raðnúmer - シリフル番号 - 일전 번호 - Seri Numarasi - Серійний номер	3350000- 3900000
Conforms to Directives • B съответствие с директивите • Splfuje podminky směrnic • Er i overensstemmelse med direktiver • Voldoet aan de richtlijnen • Vastab direktiividele • Direktiivien mukainen • Conforme aux directives • Entspricht Richtlinien • Axokouléŋcrs morá nç Ödnykç • Megfelel az direyhevekne • Conforme alle Direttive • Abbist direktivan • Aklinka direktyun erikalakinyun • Valutazjon ital-Knofromah • Dyrektyun yavazan • Cumpre os Directivas • Respecta Directivas • Pas valuda es osmernicami • Skladnost z direktivami • Cumple con las Directivas • Uppfyller direktiv • Samræmist tilskipunum • I samsvar med direktiv • 符合指令 • I samræmi við reglugerðir • 適合指令 • 司 Vonergelere Uymaktadir • Bignoelgae директиві	2006/42/EC 2014/30/EU
Conformity Assessment - Oценка за съответствие - Hodnoceni pinêní podmínek - Overensstemmelsesvurdering - Conformiteitsbeoordeling - Vastavushindamine - Vastaimustemmukaisuuden arviointi - Evaluation de conformité - Konformitaisbeurteilung - Autmicruon Συμιροφωσης - Megfeleidesg-értékelés - Valutazione della conformità - Athistifista novelénjums - Athitiste yertiminas - Livella ta-Qawa tal-Hoss Inkejiel - Ocean zgodnosci - Avaliação de Conformidade - Evaluarea conformității - Vyhodnotenie zhodnosti - Ocena skiadnosti - Evaluación de conformidad - Bedomning av overensstämmelse - Samræmismat - Konformitetsvurdering - 符合性评估 - Samræmismat - 適合性評価 - Vygunluk Değerlendirmesi - Oцинка slupnosuporcii	2008/42/EC Annex II
Harmonised standards used • Използвани хармонизирани стандарти • Použité harmonizované normy • Brugte harmoniserede standarder • Gebruikte geharmoniseerde standards • Kasutatud ühlustatud standardid • Käytety yhdenmukaiseteut standardif • Normes harmonisees utilisees • Angewandte harmonisierte Normen • Evopµюνοµένα πρότυπο του χρηοµοποήρηκαν • Harmoniziat susabvaynok • Standard armonizata igudiei • Izmantoliei saskanotie standaris • Panaudoti suderinit standardis or armonizati uzati • Normy spojne powiązane • Normas harmonizadas usadas • Standardele armonizate utilizate • Použité harmonizované normy • Uporabljeni usklajeni standardi • Estándares armonizados utilizados • Harmoniserade standarder som används • 所采用的协调标准 • Samstillitir staðlar notaðir • 整合規格 • 적용되는 조화 표준 • Kullanılan uyumlu standardiar • Використані гармонізовані стандарти	EN 61000-6-2 :2005 EN 61000-6-4 :2007 :A 1:2011 EN ISO 5349-1 :2001 EN ISO 11202 : 2010
Technical standards and specifications used • Използвани технически стандарти и спецификации • Použité technické normy a specifikace • Brughe tekniske standarder og specifikationer « Gebruikte technische standards en specificaties • Kasutatud tehnische standardid ja spetalikatsioonid • Käylerk tekniset standardit ja eritemät • Specifications et normes techniques utilisées • Angewandte technische Normen und Spezifikationen • Τεχνικά πρότυπο και προδιαγροφές που χρησιμοποτήθηκαν • Múszaki szabványok és specifikációk • Standard tecnici e specifiche applicati •	ISO 2631-1: 2010
zmantotie tehniskie standarti un specifikacijais - Panaudoti techniniai standartai ir technine informacija - Standardu su specifikazpionije teknici uzati - Normy ispecifikacije keinchici uzati - Normy ispecifikacije keinchicicze powiązana - Normas técnicas e especificações usadas - Standardele tehnice și specifikacije utilizate - Pouzité technické normy a špecifikacije - Uprabljeni tehnichi standardi in specifikacije - Standardes tehnicas stenicas sutizadas - Tekniska standardier och specifikacije - Smræmdir stadur sem notačir eru - Benyttede harmoniserte standarder - 所采用的技术形造和规范 - Tæknistadiar og -krofur notačar - 技術規格および仕棒書 - 可号되는 기술 표준 및 규격 - Kullanılan teknik standardar ve şarinameler - Benypercari revenivel ciralaparty i yvoour	130 2331-1: 2010
The place and date of the declaration • Mercro и дата на декларацията • Misto a datum prohlašeni · Stet og dato for erklæringen • Plaats sen datum van de verklæring • Deckaratison vi dijestamise koth ja kuupäev · Vakuuttussen paikka ja pakkmaära - Live u date de la dekaration · Ort und batum de Erklärung · Tromoç kra jungpouprio Ofikuung · A nyliatkozat kelte (hely és idő) · Luogo e data della dichiarazione • Deklarācijas vieta un datums • Deklaracijos vieta ir data · Il-post u d-data tad-dikjarazzjoni · Miejsce i data wystawienia deklaracji - Local e data da declaração - Locul şi data declaraţiei · Miesto a dátum vyhlássenia · Kraji in datum izjave · Lugar y fecha de la declaración · Plats coh datum for deklarationen · Taknistadion zo glacinilyinging ream notadar eru · Pentytede leteniske standarder og spesifikasjoner · Sladu og dagsetning yfirlysingar · Sted og dato for erklæringen · 河南的走去日期 · Stadur og dagsetning yfirlysingarinnar · 宣言場所および日付・包包 장소 및 일자 · Beyan yeri ve tanhi · Micue i дата уиладения декстарації	Textron Specialized Vehicles (aka E-Z-GO Division of Textron Inc.) 1451 Marvin Griffin Road Augusta, GA 30906 USA

Signature of the person empowered to draw up the declaration on behalf of the manufacturer, holds the technical documentation and is authorised to compile the technical file, and who is tablished in the Community Подпис на човека, упълномощен да състави декларацията от името на производителя, който подлъжж подили на човена, упытиошице да състава декларацията от името на произодителя, които поддържащ техническата доминативи е отгримиран да изгатота техническия файл и е регистрира в общьостта. Робрів sosby opravnéné sestavit prohišéan i měnem výrobce, drže technickou dokumentaci a osoby opravnéné sestavit technické soubory a založené v rámci Evropského společenství. Underskrift af personen, der har fudmagt til at dudarbojde erklæringen på vegne af producenten, der er indehaver ordenskrin a personen, en ma riduningt is at ubusleger einkernigen på vergine i pproducerren, der er inderaver af dokumentation og er bermydiget i tal dudbrejde den tekniske journal, og som er baserer i nærområdet. Handtekening van de persoon die bevoogd is de verklaring namens de fabrikant te tekenen, de technische dokumentatie bewaart en bevoegd is om het technische bestand samen te stellen, en die is gevestigd in het Woongeb Ühenduse registrisse kantul siku allkiri, kes on voltlatut toolga nimel deklaratsiooni koostama, kes omab tehniist dokumentatsiooni, a kelel on digus koostada tehnilier toimik. ouvalmentaskodni ja kikele oli Tugus koosataa tehtiinire toimik. Sen henkilon allekkirjoitus, jolla on valimistajan valtuutus vakuutuksen laadintaan, jolla on hallussaan teknise assakirjar, joka on valtuutettu laatimaan tekniset assakirjar ja joka on sjoittauhunty thiesioon. Signature de la personne habiliteke a rédiger la declaration au nom ul tahricant, à deteomi: Settlichtique, & compiler les fichiers techniques et qui est implantée dans la Communauté.
Unterschrift der Person, die berechtigt ist, die Erkfatrung im Namen des Herstellers abzugeben, die die technischen Unterdagen außewahrt und berechtigt ist, die technischen Unterlagen zusammenzusteller und die in der Gemeinschaft niedergelassen ist. Υπογραφή απόμου εξουσοδοτημένου για την σύνταξη της δήλωσης εκ μέρους του κατασκευαστή, ο οποίος κατέχει την τεχιική εκθεση και έχει την εξουσοδότηση να ταξνομήσει τον τεχιικό φάκελο και ο οποίος έναν διομομένος στην Κοινότητα Α gratio nevelber impelaniamenta teamley aktinek jodana all mudostalna in a prailaktzaziot, a müszaki dokumentációt őrzi, engedélhyel rendelkezik a müszaki faji összeállításához, és aki a közösségben letelepedett személy. dokumentació crz, engodélyel rendekozik a múzsaki faji Ossznállitásahoz, es aki a kozességben letelejedett szer Firma della peszon autorizzata a régelere la dichiarzone a nome del fabbicante, in possesso Della documentazione bencia ed autorizzata a costituire il fasociolo bencio, che dave essere stabilità nella Comunità. Täs personas paratisks, tura i prilavarota sagatavot fehinsiko registru un kura ir apstiprintata Kopiensa. Amuno, kuris y rapana zhomas, kurima ganitolipas subtette galarigimus sudanyfi sedenines informacija, ir, kuris ja pasirate, turi visa technine informacija ir yra jajaiciosa sudanyfi technines informacijos dokumenta. Hifma tal-persuna avotrozzata il tiskompia I-faji tetniku, u il hija stabilita fi-Komunità. Podpis sodoty povarbinonej do sporaziora ideklarizari prila in interna un prosensora prosensora dokumentacije techniczna, upowazinora, do shworzenia dokumentacji technicznej oraz wyznaczonej do sweptionotowych. Assinatura da pessac com poderes para emitir a declarizacja en nome do fabricante, que possa u documentação técnica, que está autorizada a compliar o processo técnico e que está estabelecida na Comunidade. Semnitura pessace com poderes ela elaborezes declarizajên in numele productionaliu, care define documentaja tehnica, este autorizada sa compliare o processo técnico e que está estabelecida na Comunidade. erodno, c. pose autorizad sa cumjetice udsalu telmi, si este saturilar in Cumunitaria.

Podpić sodby poverenje vjastvenim ryhlasenia v mene výrobcu, która ná technickú dokumentáciu a je oprávnená spracovať technické podklady a która je umiestnená v Spoločenstve.

Podpić sodep, opodskáčene za čadelová opiave v imenu poúrzajalca, ki ima tehnično dokumentacijo in lahko sestavlja spis tehnične dokumentacije, ter ima sedež v Skupnosti. Firma de la persona responsable de la declaración en nombre del fabricante, que posee la documentación técnica Firma de la persona responsable de la declaración en nombre del fabricante, que posee la documentación técnical y está autorizada para recopiar el rachivo técnico y que está estableción en la Comunidad.

Underfechras av den som bernyndigad att upratta deklarationen à tillverkarens vagnar, innehar den tekniska documentationen och ar bernyndigad att upratta deklarationen à tillverkarens vagnar, innehar den tekniska documentationen och ar bernyndigad att sammanstallad en tekniska indormationen och som ar etablerad i gemenskapen. Undirskrift ablians sem hefur umbod til að gera viftysinguna fyrir könd framleidandrans, hefur undir hondum kraknjögnin og hafur i vifti til að tæst samma tækniskryntuna, og er viðukrendur innan evolgska erhanagssvendisins. Signaturen til personen som har fullmakt til á ufterdiga enklæmingen på vegne av produsenten, er i bestiletise av den tekniska dokumentasjonen. har autorisasjon til á utsurbede den tekniske fen og som har tillhold EU.

获得及代表制造商程率用者的意名。此人后语技术文档并获得权编译技术文件,且是社区中获得认可靠。

2006/42/EC Annex II 1A: 2 Chris Clifford Technical Director Ransomes Jacobsen Limited Ipswich, England, IP3 9TT

2006/42/EC Annex II 1A: 10 Christopher W Spencer Vice President of Engineering 1451 Marvin Griffin Road Augusta, GA 30906 USA 13 Dec 2018 Signatory

Certificate Number • Номер на сертификат • Ĉislo osvédčení • Certifikatnummer • Certificaatnummer • Sertifikaadi number • Hyväksyntänumero • Numéro de certificat • Bescheinigungsnummer - Applyc, Chicromorphico - Hielestilesi szám - Numero del certificato - Sertifikati numurs - Sertifikati numurs - Sertifikati numurs - Applyc, Chicromorphico - Hielestilesi szám - Numero del certificato - Sertifikati numurs - Sertifikato numeris - Numur tac-Certifikati - Numero del certificato - Certifikati - Numero del certificato - Numero del c

Undirskrift starfsmanns sem hefur heimild til að rita yfirlýsinguna fyrir hendi framleiðandans, hefur umsjón með tæknigögnum og hefur heimild til að setja saman tæknilega skýrslu og sem er

lengdui min Tammelya. メーカーを代表して宣言書を起草し、技術文書を保有し技術ファイルを編集する権限を有し、地域において確固たる地位を築いている人物の署名。 제조자를 ほ신하여 선언서를 작성하도록 위임받은 서명자는 기술 문서를 보유하고 기술 자료 수업의 허가를 받았으며 지역 공동체 내에 속해 있습니다. nalatcı adına beyanı hazırlama vetkisi olan, teknik dokumantasyonu elinde bulunduran ve teknik dosyayı derleme vetkisine sahip. Topluluk içinde ver

DoC1036

(GB) (BE) (BG)(CH)(CN)(CY)(CZ)(DE) (DK)(EE) (ES) FI (FR) (GR)(HU) IS

(MT) JP (KR)LI) (LT LV) NL (NO PL PT RU) SE SI SK (RO)TR)

INDEX

A	F
accelerator pedal 22	fluids
В	brake 51
	capacities 38
battery disposal 8	recommended 38
battery maintenance 51	fuel
brakes 50 fluid 51	add 26
pedal, hydraulic 21	gauge 21
break-in	handling guidelines 17
CVT belt 26	specifications 26
engine 26	tank cap 22
	G
С	gasoline, see fuel
capacity	glove box 22
cargo load 15, 31	
fluids 38, 55	Н
hitch 55	hauling, vehicle 53
load 55	headlights 42
towing 55	horn switch 22
carbon monoxide 17	I
cargo dumping 32	initial service items 36
hauling 31	
maximum load 15, 31	L
choke 22	labels, safety 9
cleaning the vehicle 40	lifting, vehicle 19, 39
cup holder 21	low oil pressure indicator 21
CVT belt break-in 26	lubricants, recommended 38
D	M
	maintenance
direction selector 22	chart 36
driving procedures accelerating 28	fluid capacities 38
braking 28	recommended fluids and lubricants 38
downhill 29	scheduled 35
parking 30	malfunction indicator light (MIL) 49
passenger 28	N
reverse 30	neutral lock 53
slippery surfaces 29	_
stalling on hill 30	0
traversing hillsides 29	oil, engine
uphill 29	capacity 38
E	recommended 38
engine	operator safety 15
break-in 26	Р
starting 27	PIN plate 8
engine oil	pre-ride inspection 25
capacity 38	
recommended 38	R
	registration information, vehicle 7

INDEX

S
safety
carbon monoxide 17
cargo 15, 31
driving downhill 18
driving in reverse 18
driving uphill 18
driving with passenger 17
engine exhaust 17
fuel 17
hot exhaust 19
labels 9
lifting, vehicle 19, 39
operation 25
operator 15
pre-ride inspection 25
slippery terrain 18
stalling 18
tire pressure 15, 41
tires 18
unauthorized use 16
vehicle modification 19
weight capacity 15, 31
safety symbols 7 scheduled maintenance chart 36
seat bottom 22
serial number labels 8
slippery surfaces 29
spark plugs 48
specifications, vehicle 55
steering wheel 21
storage compartments 22
switches
horn 22
т
-
tires 40
pressure 15, 41
repair 41
replacement 41 towing, vehicle 53
transporting the vehicle 53
truck bed 23
dumping 32
1 0
V
vehicle
hauling 53
removing from storage 54
specifications 55
storage 54
towing 53

transporting 53 vehicle identification numbers 8

W

warranty information, vehicle 7
washing the vehicle 40
weight capacity, maximum 15, 31
wheels 41, 42
axle and wheel nut torques 41
wheel installation 42
wheel removal 41

Normal use, age, and wear on vehicle components can affect the safe operation and reliability of the vehicle. The recommended Inspection and maintenance procedures are crucial for safety, performance, reliability and maximum longevity of your vehicle.

A damaged vehicle, or a vehicle that is not functioning properly is dangerous and must not be operated until repairs are made.

NOTICE: Read the following operational warnings before driving the vehicle:



Before exiting the vehicle, turn the key switch to the OFF position and remove the key from the vehicle to prevent unauthorized use.

Drive the vehicle at appropriate speeds for the terrain and conditions. Be aware of any environmental conditions that change the terrain and your ability to control the vehicle.

Do not drive on excessively steep hills. Evaluate the terrain before descending a hill. Drive slowly and deliberately. Use the brake to limit speed and maintain control. Sudden braking or turning can cause a loss of vehicle control. Drive straight down the hill; do not drive across the hill.

Operate in approved areas.

Keep both feet, legs, hands and arms inside vehicle at all times.

Avoid driving on terrain that is too rough for the vehicle's capabilities and your driving skills.

Before driving in the reverse direction, make sure the area behind the vehicle is clear. Accelerate slowly and avoid making sharp turns.

Make sure the direction selector is in the correct position before pressing the accelerator pedal.

Decrease speed before and during turns.

Bring the vehicle to a complete stop before moving the direction selector.

See SPECIFICATIONS on page 55 for the vehicle load and seat capacity.

NOTICE: Read the following maintenance information and warnings before servicing or repairing the vehicle:

Follow the procedures and comply with the safety information in this manual while performing vehicle service or maintenance.

Use the tools shown in the tool list and wear the specified safety equipment when performing vehicle service or maintenance.



Remove all jewelry before servicing the vehicle.

Do not allow loose clothing or hair to contact the moving parts.

Do not touch hot objects.

The drive wheels must be lifted and supported on jack stands before performing any service to the powertrain while the motor is in operation.



When servicing the vehicle, always wear eye protection. Be careful when working around batteries, using solvents, or compressed air.

Use insulated wrenches to decrease the risk of a short-circuit if a wrench contacts the battery terminals. A short-circuit in a battery can cause an

explosion.

To prevent the risk of battery explosion, keep all flammable materials, open flames, or sparks away from the batteries.

Hydrogen gas is produced as batteries are charged. Charge batteries only in well-ventilated areas.

Maintain constant awareness that some components are heavy, spring loaded, corrosive, explosive, can cause high amperage, or get extremely hot. Battery acid and hydrogen gas can cause bodily injury. Keep your hands, face, feet and body away from any area that can expose them to injury if an unexpected situation occurs.



California Proposition 65



WARNING

The Engine Exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

TEXTRON SPECIALIZED VEHICLES

1451 Marvin Griffin Road Augusta, GA, USA 30906-3852

1-800-774-3946 Technical Assistance & Warranty 1-888-438-3946 Service Parts www.cushman.com

Service Parts Manuals and Repair and Service Manuals are available for purchase.