 
 


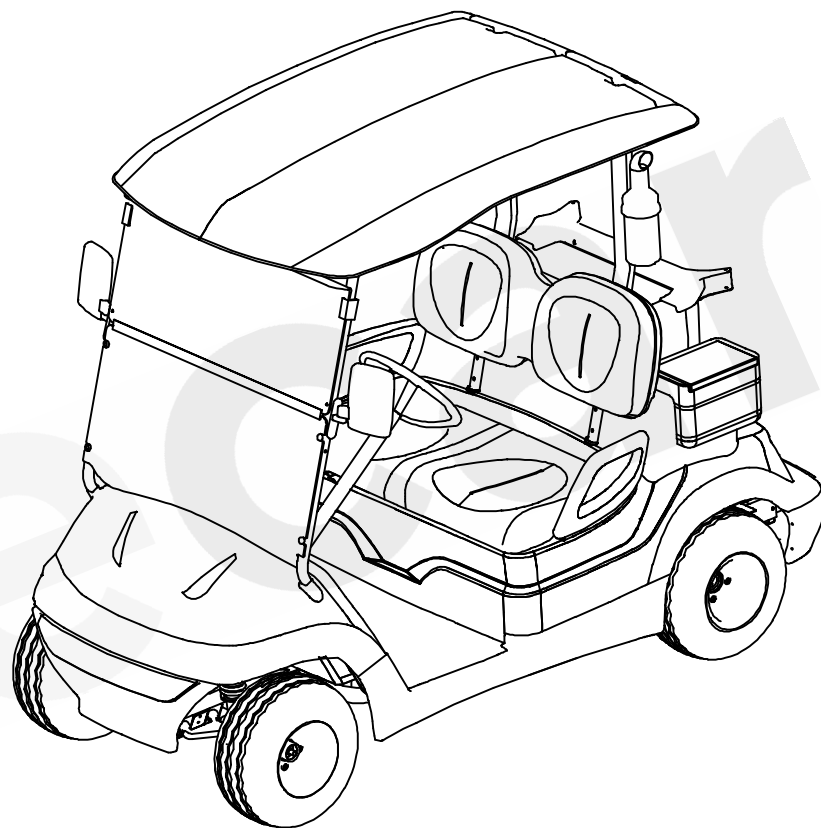


A627.2 Spare Parts

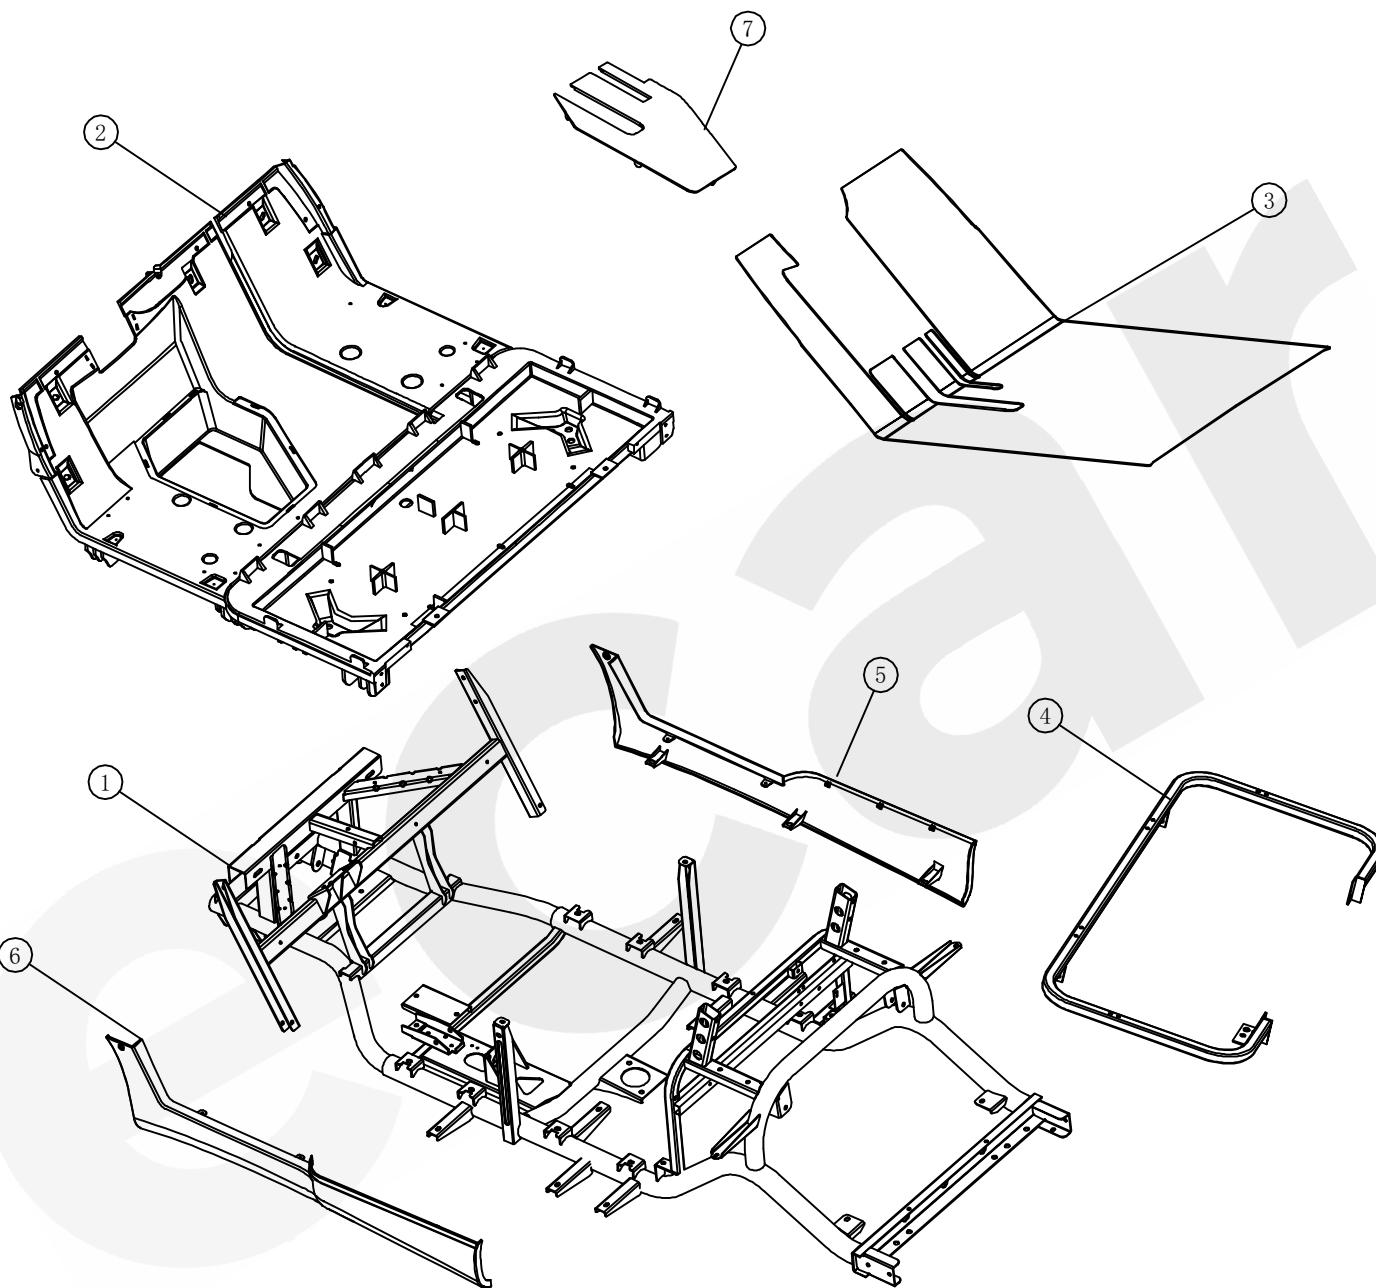


LT-A627.2 Chassis frame

NO:	Code	Name	QTY	Remark
1	2. 01. 007. 800076	A627.2 chassis frame -B	1	
2	3. 02. 011. 300080	A627 baseplate -B	1	
3	2. 02. 007. 010033	A627.2 floor plate	1	
4	2. 01. 007. 800077	A627 Seat support -B	1	
5	3. 02. 011. 300070	A627 Side Sill--R	1	
6	3. 02. 011. 300069	A627 Side Sill--L	1	
7	3. 02. 011. 300081	A627 Cover Plate	1	
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

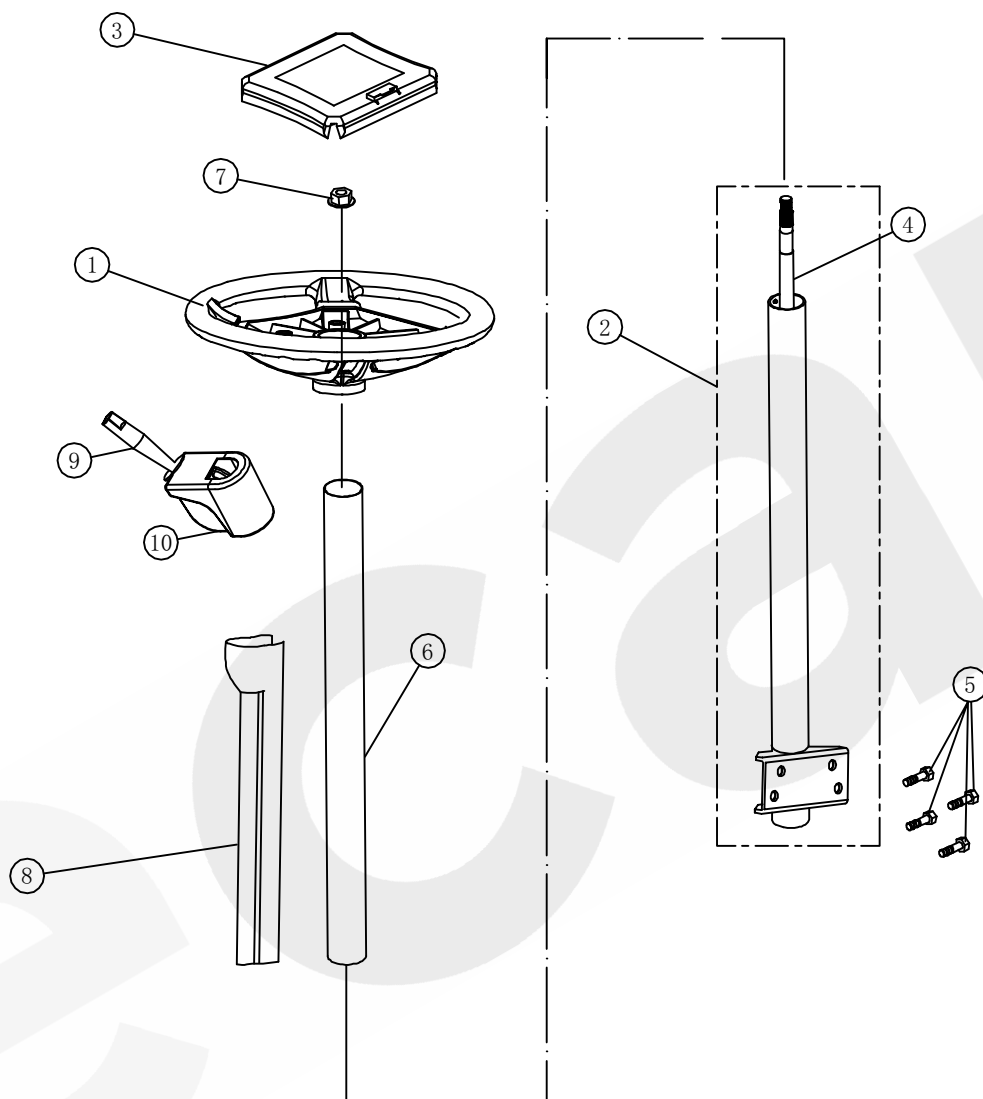 


LT-A627.2 steering system 1

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 070001	steering wheel	1	
2	3. 01. 004. 070080	A627 Steering column	1	
3	3. 02. 014. 000038	Card Holder	1	
4	3. 01. 004. 070018	rod steering	1	
5	3. 01. 003. 060006	screw	4	8*20
6	3. 02. 014. 000255	A627 Column cover	1	595mm
7	3. 01. 003. 100017	nut	1	14
8	3. 02. 011. 300051	A627 Steering switch wire cover	1	450mm
9	3. 03. 011. 000025	Single arm combination switch	1	
10	3. 03. 011. 000027	Single arm combination switch holder	1	
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

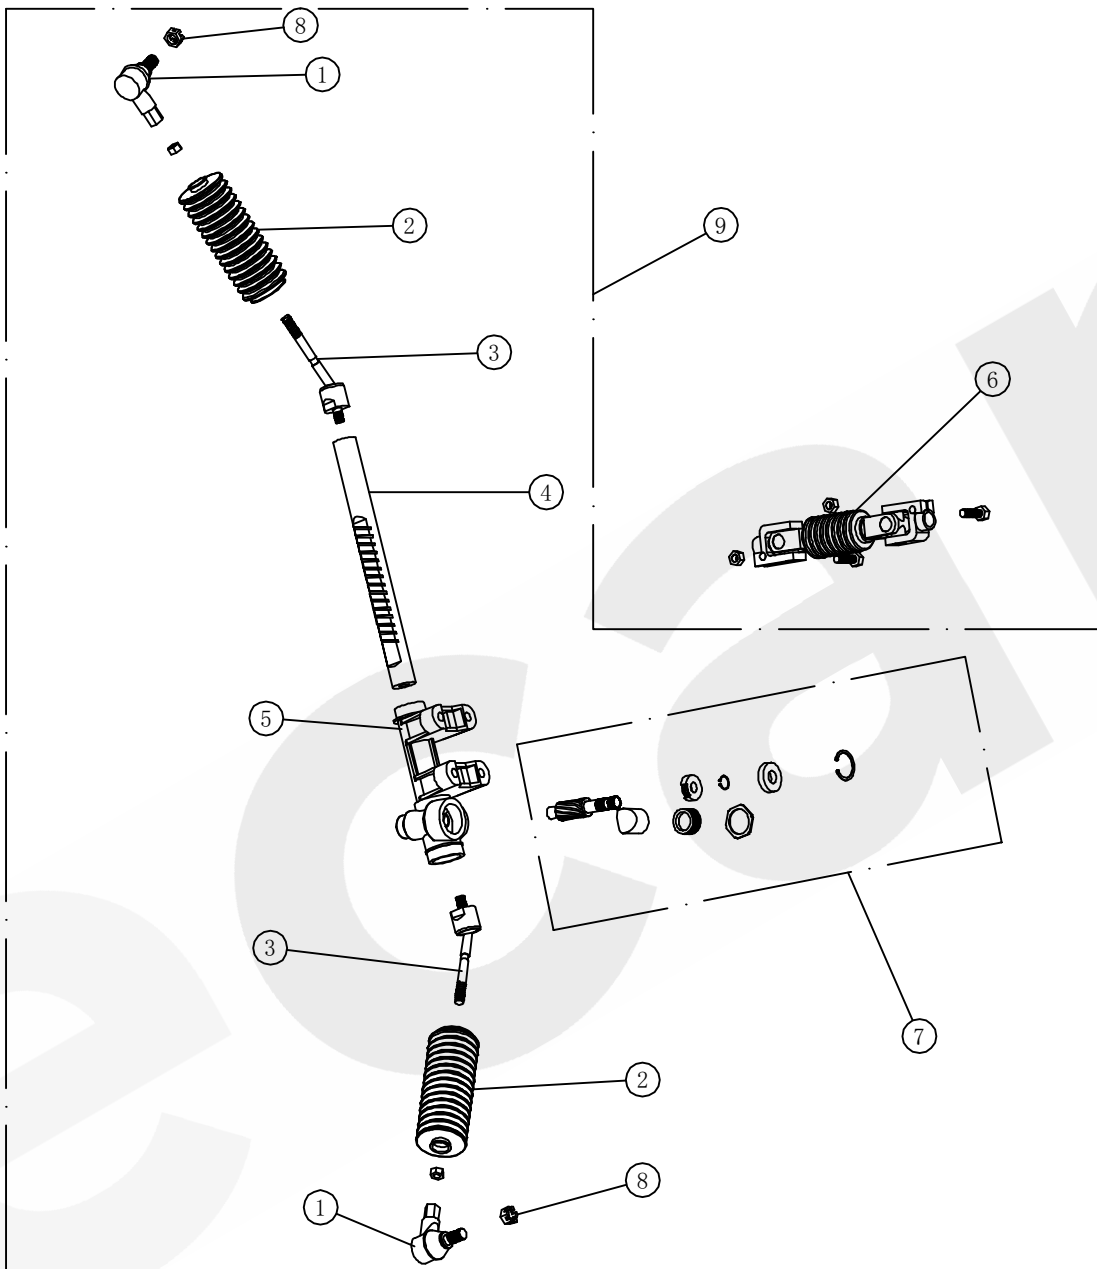 


LT-A627.2 steering system 2

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 070011	ball joint	2	
2	3. 02. 014. 000032	dust proof rubber boot	2	
3	3. 01. 004. 070010	inner ball joint	2	
4	3. 01. 004. 070093	A627 steering gear rack	1	
5	3. 01. 004. 070013	steering box housing	1	
6	3. 01. 004. 900041	universal joint	1	
7	3. 01. 004. 070012	pinion assy	1	
8	3. 01. 003. 100016	screw	2	12mm
9	3. 01. 004. 070072	Steering assy 136	1	
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

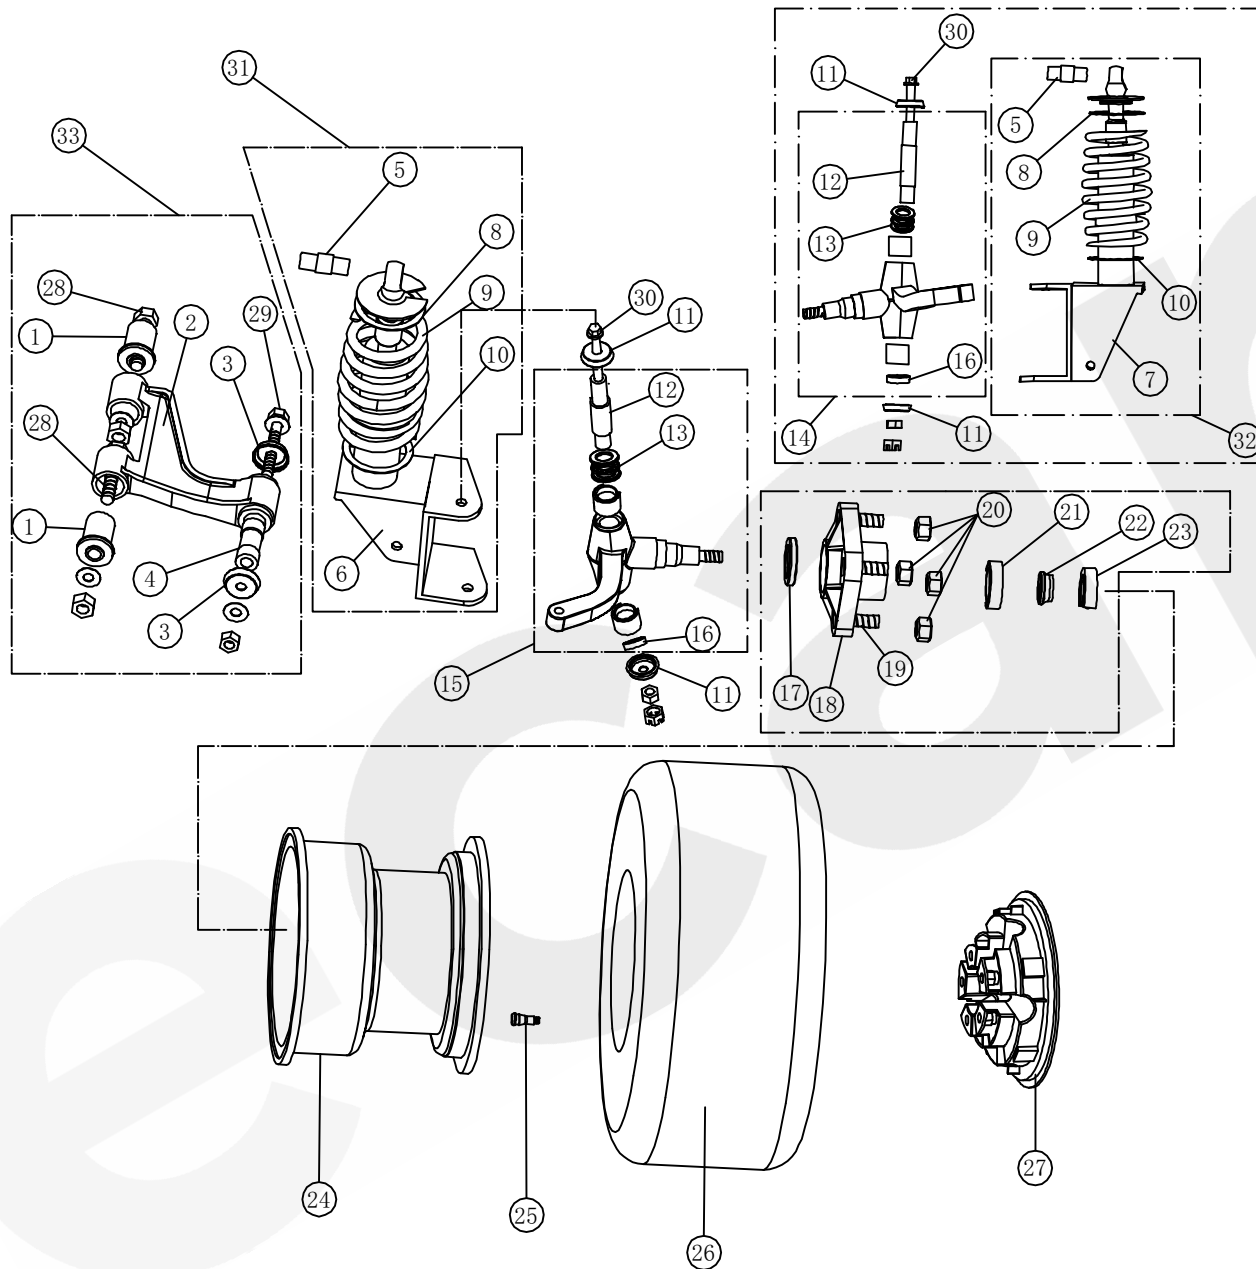 


LT-A627.2 front suspension 1

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 070021	bush	4	Ø13*50mm
2	3. 01. 005. 010008	arm	2	
3	3. 01. 004. 070024	arm seal	4	Ø12*40. 8
4	3. 01. 004. 070023	arm shaft	2	
5	3. 01. 004. 080004	front shock absorber up bush	2	
6	3. 01. 004. 080002	front shock absorbor/L	1	
7	3. 01. 004. 080001	front shock absorbor/R	1	
8	3. 02. 014. 000081	front shock absorbor up rubber	2	
9	3. 01. 004. 080013	A2 front spring	2	A-2-001
10	3. 02. 014. 000082	front shock absorbor down rubber	2	
11	3. 02. 014. 000110	knuckle shaft seal/big	4	
12	3. 01. 004. 070022	main washer	2	
13	3. 01. 004. 900019	bearing	2	51103
14	3. 01. 005. 010006	knuckle assy/L	1	
15	3. 01. 005. 010007	knuckle assy/R	1	
16	3. 01. 004. 090013	bearing	2	MKI20/20
17	3. 01. 004. 090005	bearing base seal	2	30*47*7
18	3. 01. 005. 010009	bearing base	2	
19	3. 01. 003. 070006	C wheel screw	8	
20	3. 01. 003. 100038	C wheel nut	8	
21	3. 01. 004. 090001	bearing 6005	2	
22	3. 01. 004. 090004	bearing cover	2	
23	3. 01. 004. 090002	bearing6204	2	
24	3. 01. 004. 020002	wheel rim/white	2	8*7
25	3. 02. 001. 000021	valve	2	TR414

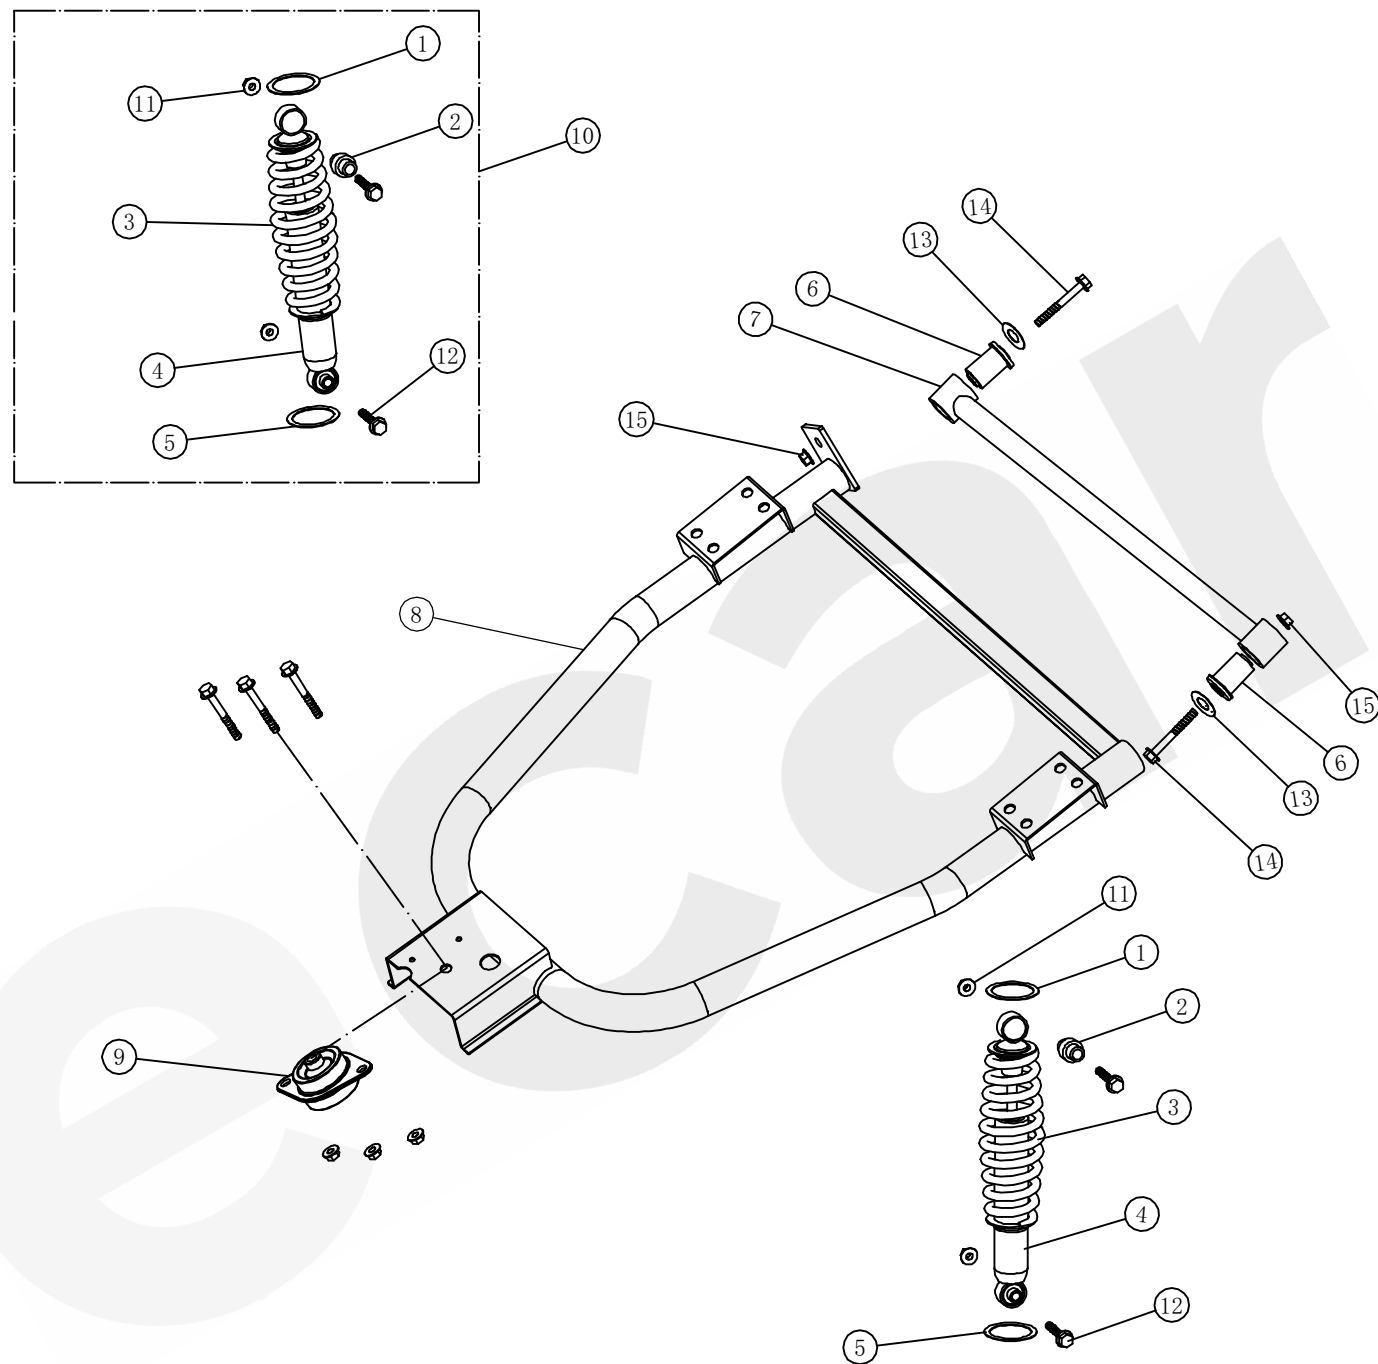 


LT-A627.2 rear suspension system

NO:	Code	Name	QTY	Remark
1	3. 02. 014. 000053	rear shock absorb up rubber rim	2	44mm 55mm
2	3. 01. 004. 080007	rear shock absorb bush	2	
3	3. 01. 004. 080012	A2 rear spring	2	A-2-002
4	3. 01. 004. 080005	rear shock absorber	2	
5	3. 02. 014. 000054	rear shock absorb low rubber rim	2	44mm 55mm
6	3. 01. 004. 070021	suspension bush	2	φ1 3*50mm
7	2. 01. 007. 800003	A627 rear balancing pole	1	
8	2. 01. 007. 800002	A627 transaxle bend pipe	1	
9	3. 02. 014. 000069	shock absorb rubber	1	
10	2. 03. 001. 000009	A2 rear shock absorb assy	2	
11	3. 01. 003. 100015	nut	4	10mm
12	3. 01. 003. 060028	screw	4	10*55
13	3. 01. 003. 080022	gasket	2	2. 0*20*37
14	3. 01. 003. 060037	screw	2	12*70
15	3. 01. 003. 100016	nut	2	12mm
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

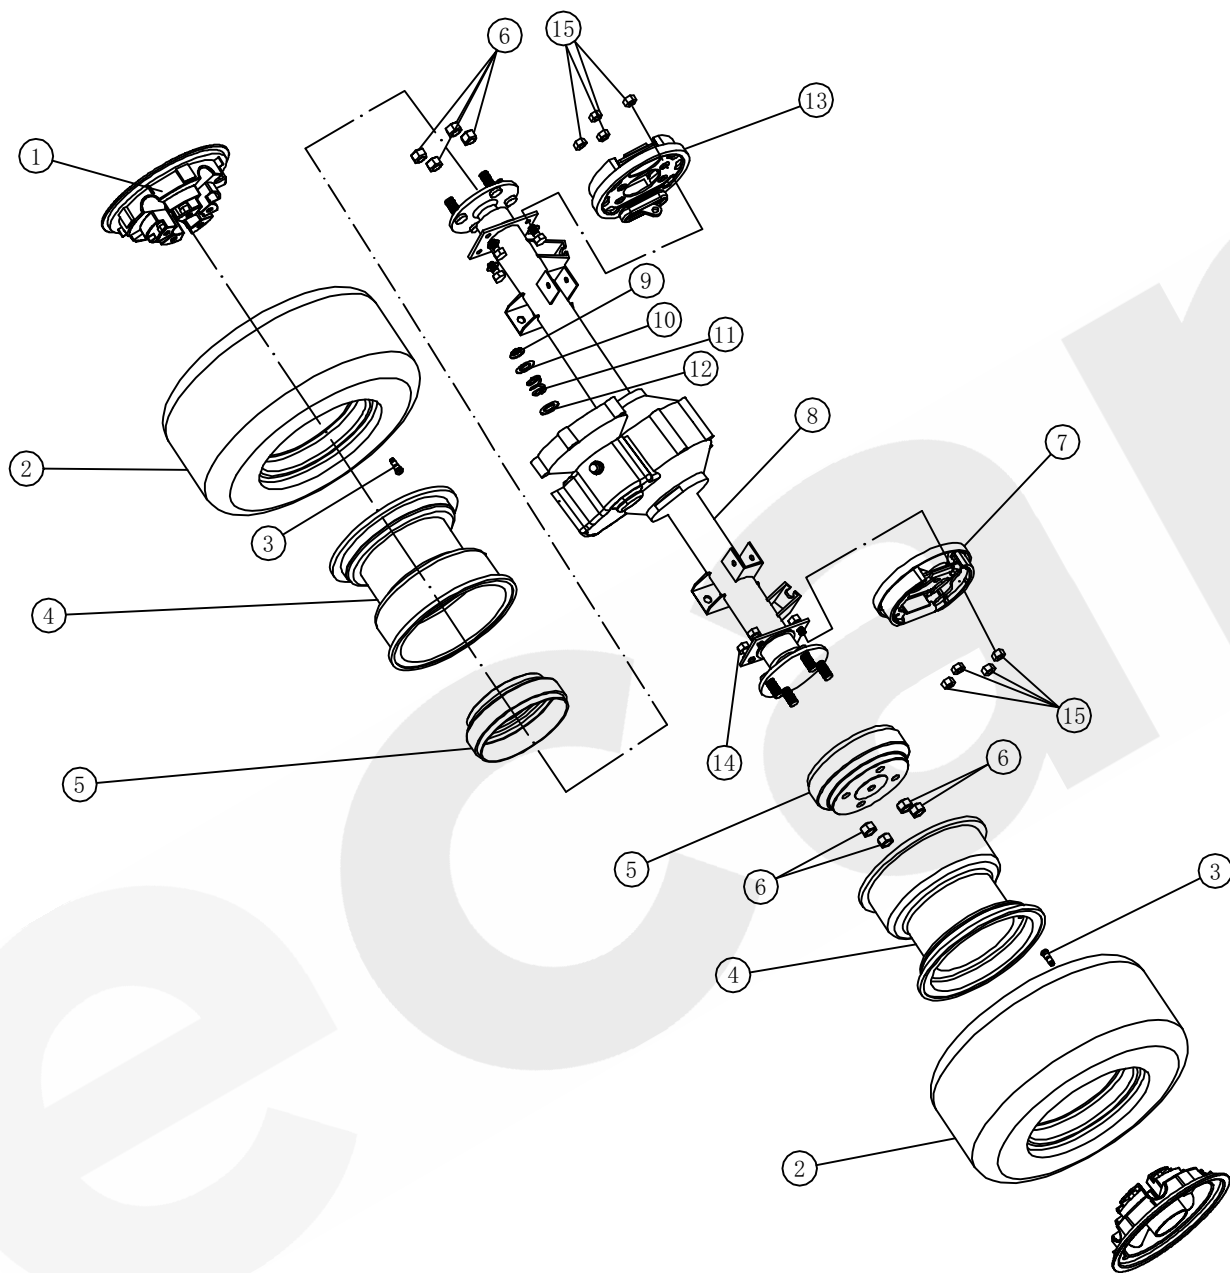 


LT-A627.2transaxle system

NO:	Code	Name	QTY	Remark
1	3. 02. 001. 000054	A627 wheel cover	2	
2	3. 02. 001. 000007	Carlisle tire	2	18*6. 5-8 (4P)
3	3. 02. 001. 000021	valve	2	TR414
4	3. 01. 004. 020002	wheel rim(white)	2	8*7
5	3. 01. 005. 010001	C brake drum	2	
6	3. 01. 003. 100038	C brake drum nut	8	
7	3. 01. 004. 050001	brake/R	1	
8	3. 01. 004. 010065	A627 transaxle	1	
9	3. 02. 014. 000094	input axle seal	1	
10	2. 01. 001. 010258	input axle gear gasket	1	
11	3. 01. 006. 000115	input axle spring	1	
12	2. 01. 001. 010259	input axle round gasket	1	
13	3. 01. 004. 050002	brake/L	1	
14	3. 01. 003. 070005	C fender screw	8	
15	3. 01. 003. 100039	C fender nut	8	
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

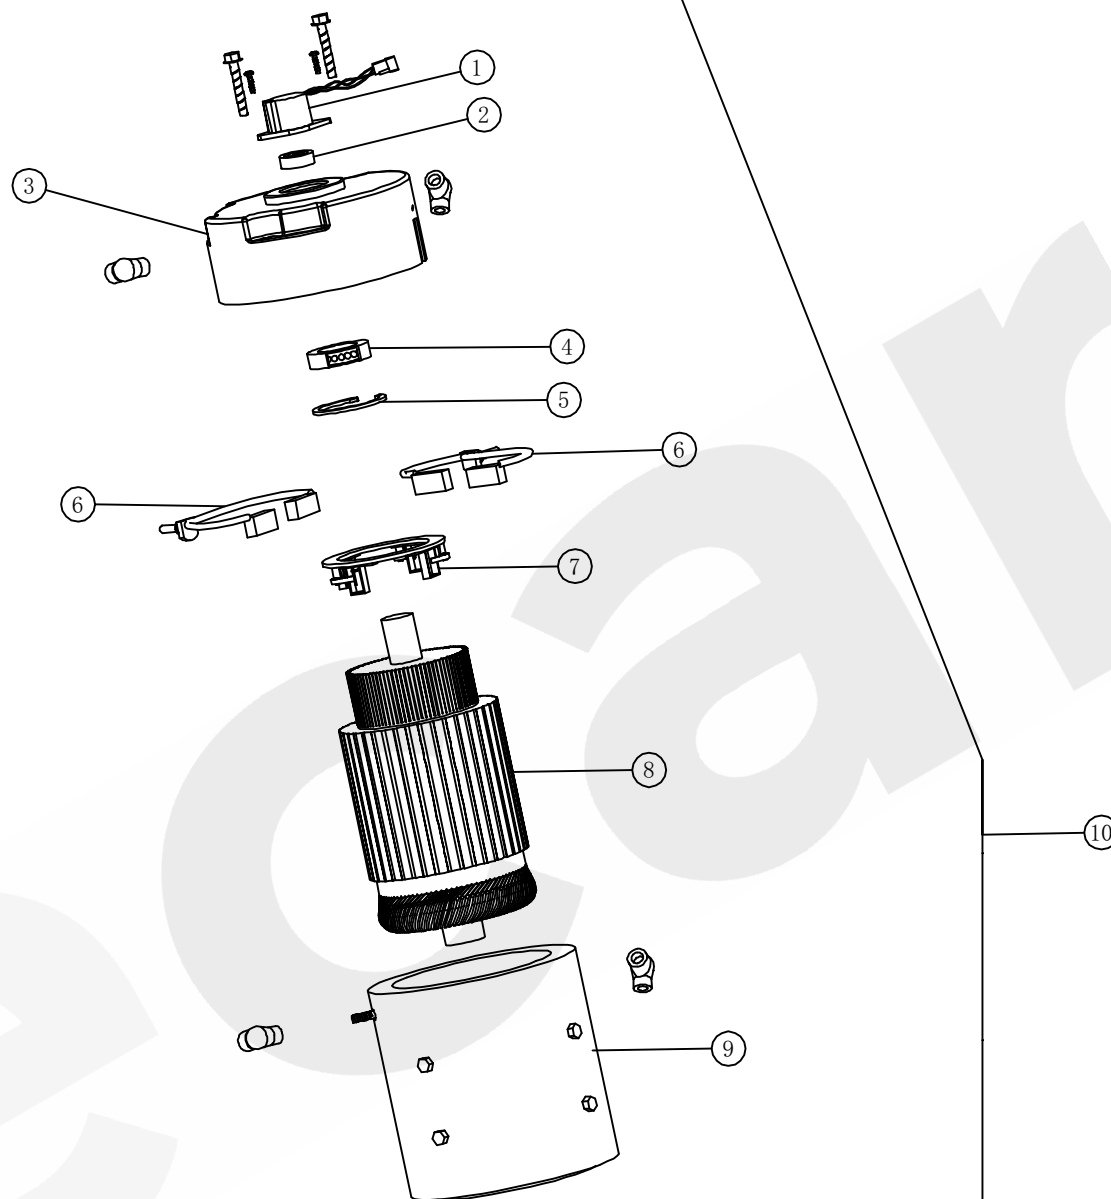 


LT-A627.2 DC motor system

NO:	Code	Name	QTY	Remark
1	3. 03. 007. 000037	speed sensor	1	3. 7KW ADC
2	3. 03. 007. 000052	magnetic ring	1	3. 7KW ADC
3	3. 03. 007. 000012	motor cover	1	3. 7KW ADC
4	3. 01. 004. 090003	bearing	1	6205
5	3. 01. 003. 070014	retainer clip	1	
6	3. 03. 007. 000005	ADC motor carbon brush	4	
7	3. 01. 006. 000119	carbon brush holder	1	3. 7KW ADC
8	3. 03. 007. 000091	amature	1	
9	3. 03. 007. 000090	stator	1	
10	3. 03. 007. 000069	KDS separately excited DC motor 3KW	1	36V
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

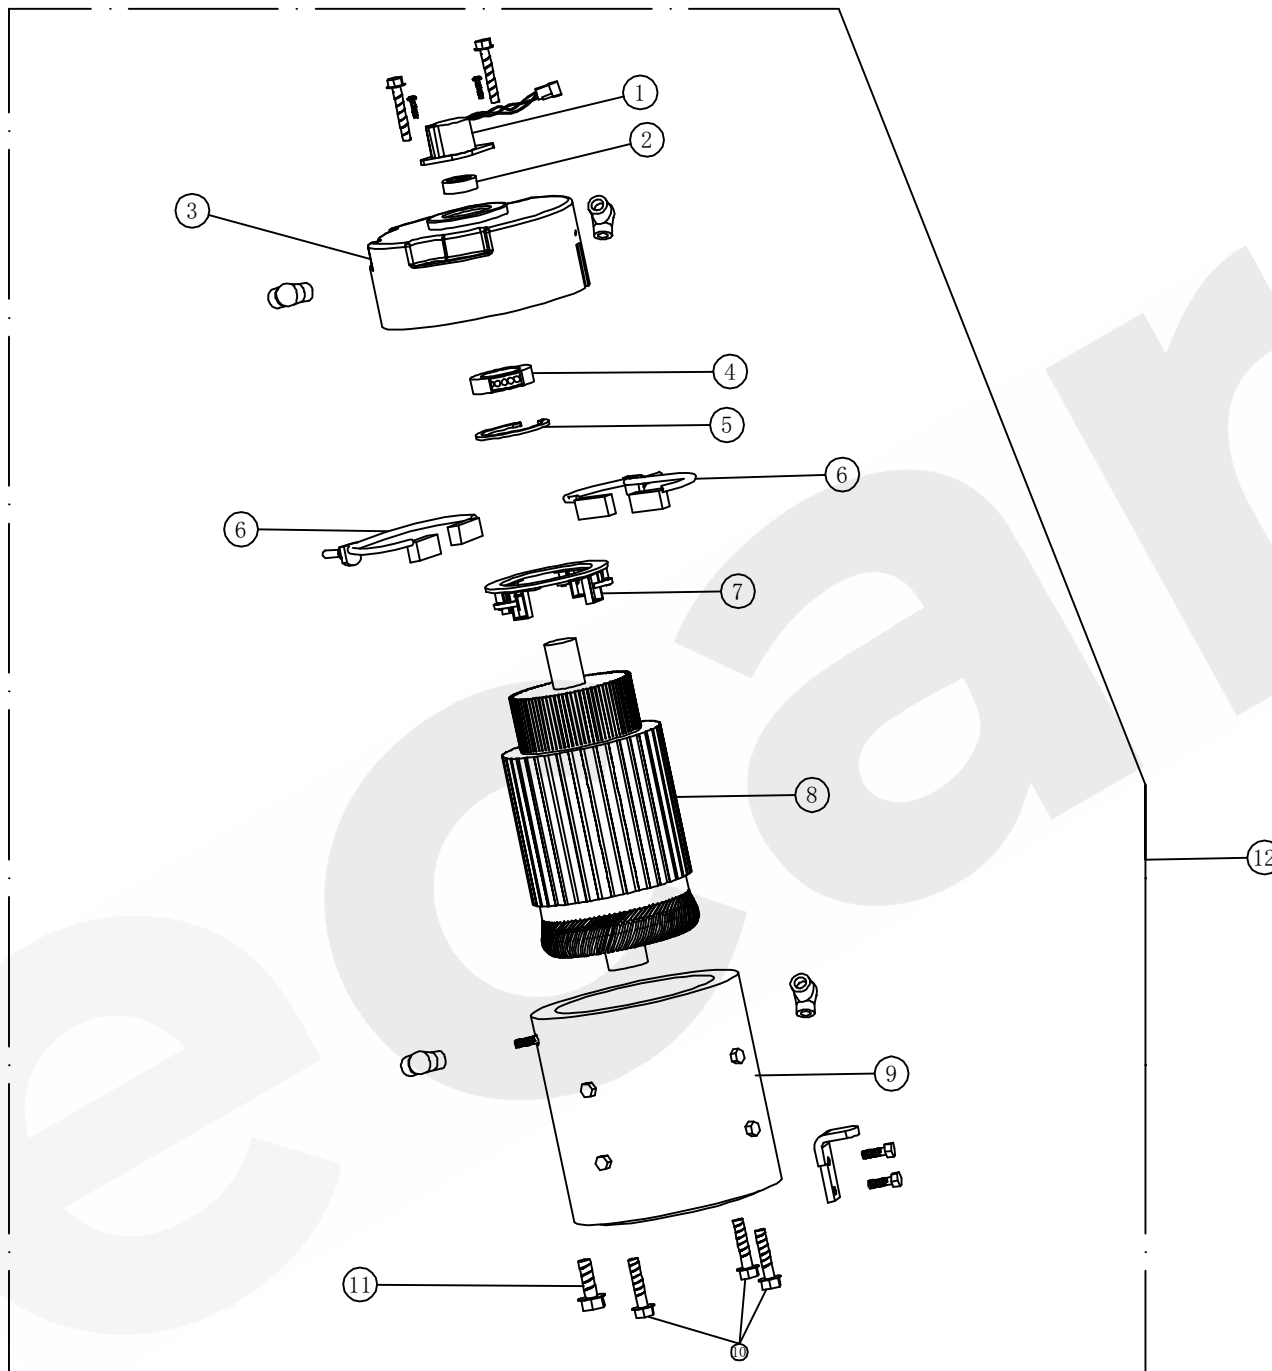 


LT-A627.2 DC motor system

NO:	Code	Name	QTY	Remark
1	3. 03. 007. 000037	speed sensor	1	3. 7KW ADC
2	3. 03. 007. 000052	magnetic ring	1	3. 7KW ADC
3	3. 03. 007. 000012	motor cover	1	
4	3. 01. 004. 090003	bearing	1	6205
5	3. 01. 003. 070014	retainer clip	1	
6	3. 03. 007. 000005	ADC motor carbon brush	4	
7	3. 01. 006. 000119	carbon brush holder	1	
8	3. 03. 007. 000013	amature	1	
9	3. 03. 007. 000011	stator	1	
10	3. 01. 003. 070015	screw	3	1/4*50 (6mm)
11	3. 01. 003. 070016	screw	1	8mm
12	3. 03. 007. 000006	ADC DC motor48V-3.7KW / Import	1	
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

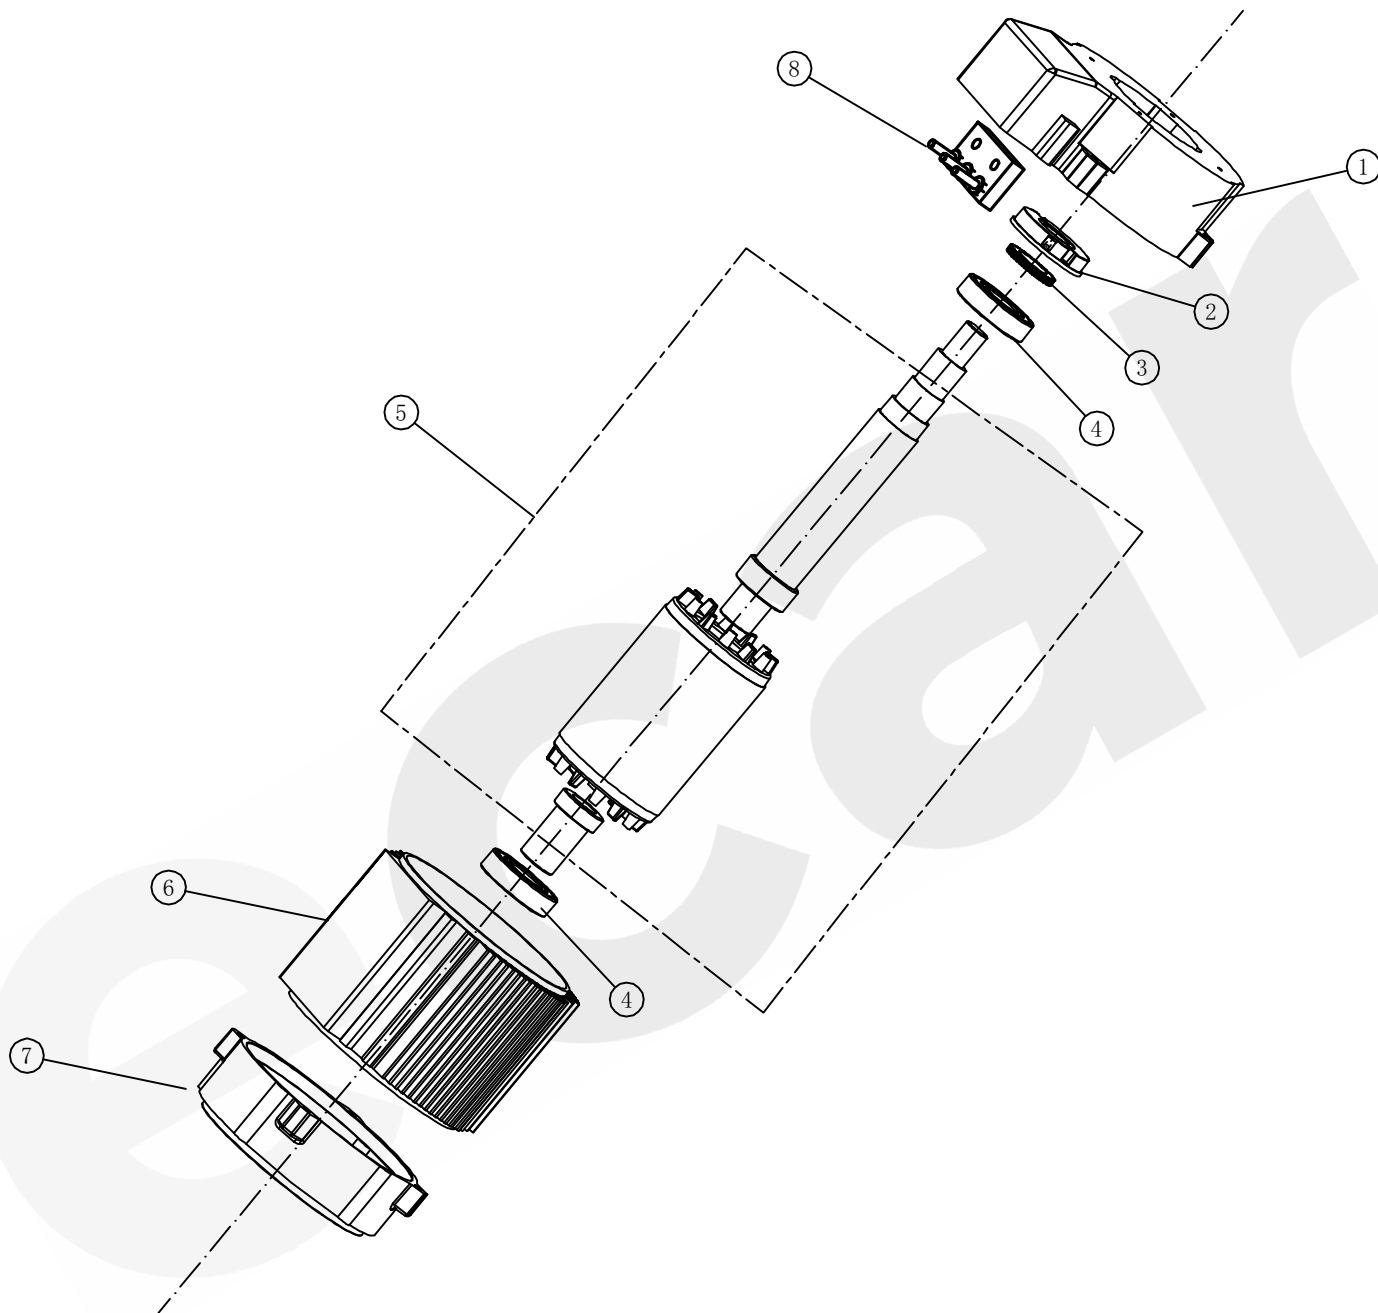 

LT-A627.2 AC motor system

NO:	Code	Name	QTY	Remark
1	3. 01. 006. 000393	rear cover	1	4KW
2	3. 03. 017. 000077	position coder	1	4KW
3	3. 01. 006. 900116	pulse wheel	1	4KW
4	3. 01. 004. 900039	bearing	2	6206ZZ
5	3. 03. 007. 000083	amature	1	4KW
6	3. 03. 007. 000084	stator	1	4KW
7	3. 03. 007. 000086	front cover	1	4KW
8	3. 01. 006. 000404	Motor Cable Borard	1	4KW
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

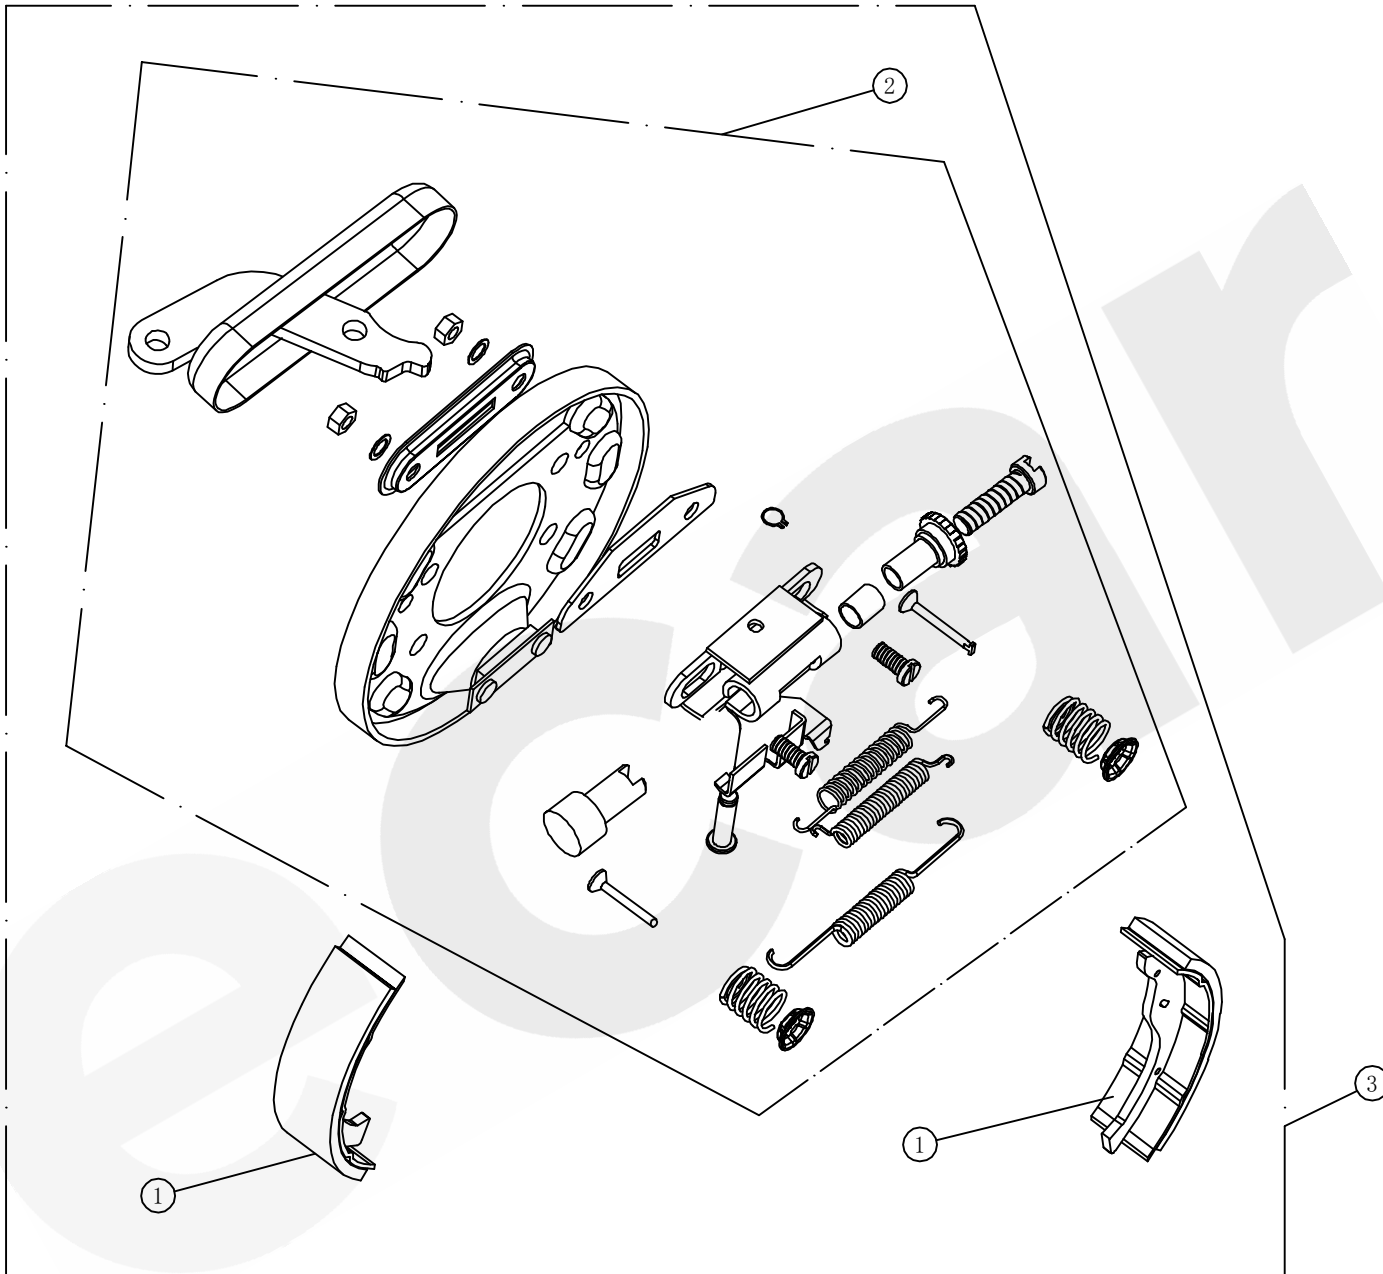 



LT-A627.2 left brake

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 050049	E brake shoe	2	
2	4. 03. 001. 000111	brake repair kit	1	
3	3. 01. 004. 050002	brake assy/L	1	
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

LT-A627.2 right brake


NO:	Code	Name	QTY	Remark
1	3. 01. 004. 050049	E brake shoe	2	
2	4. 03. 001. 000111	brake repair kit	1	
3	3. 01. 004. 050001	brake assy/R	1	
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

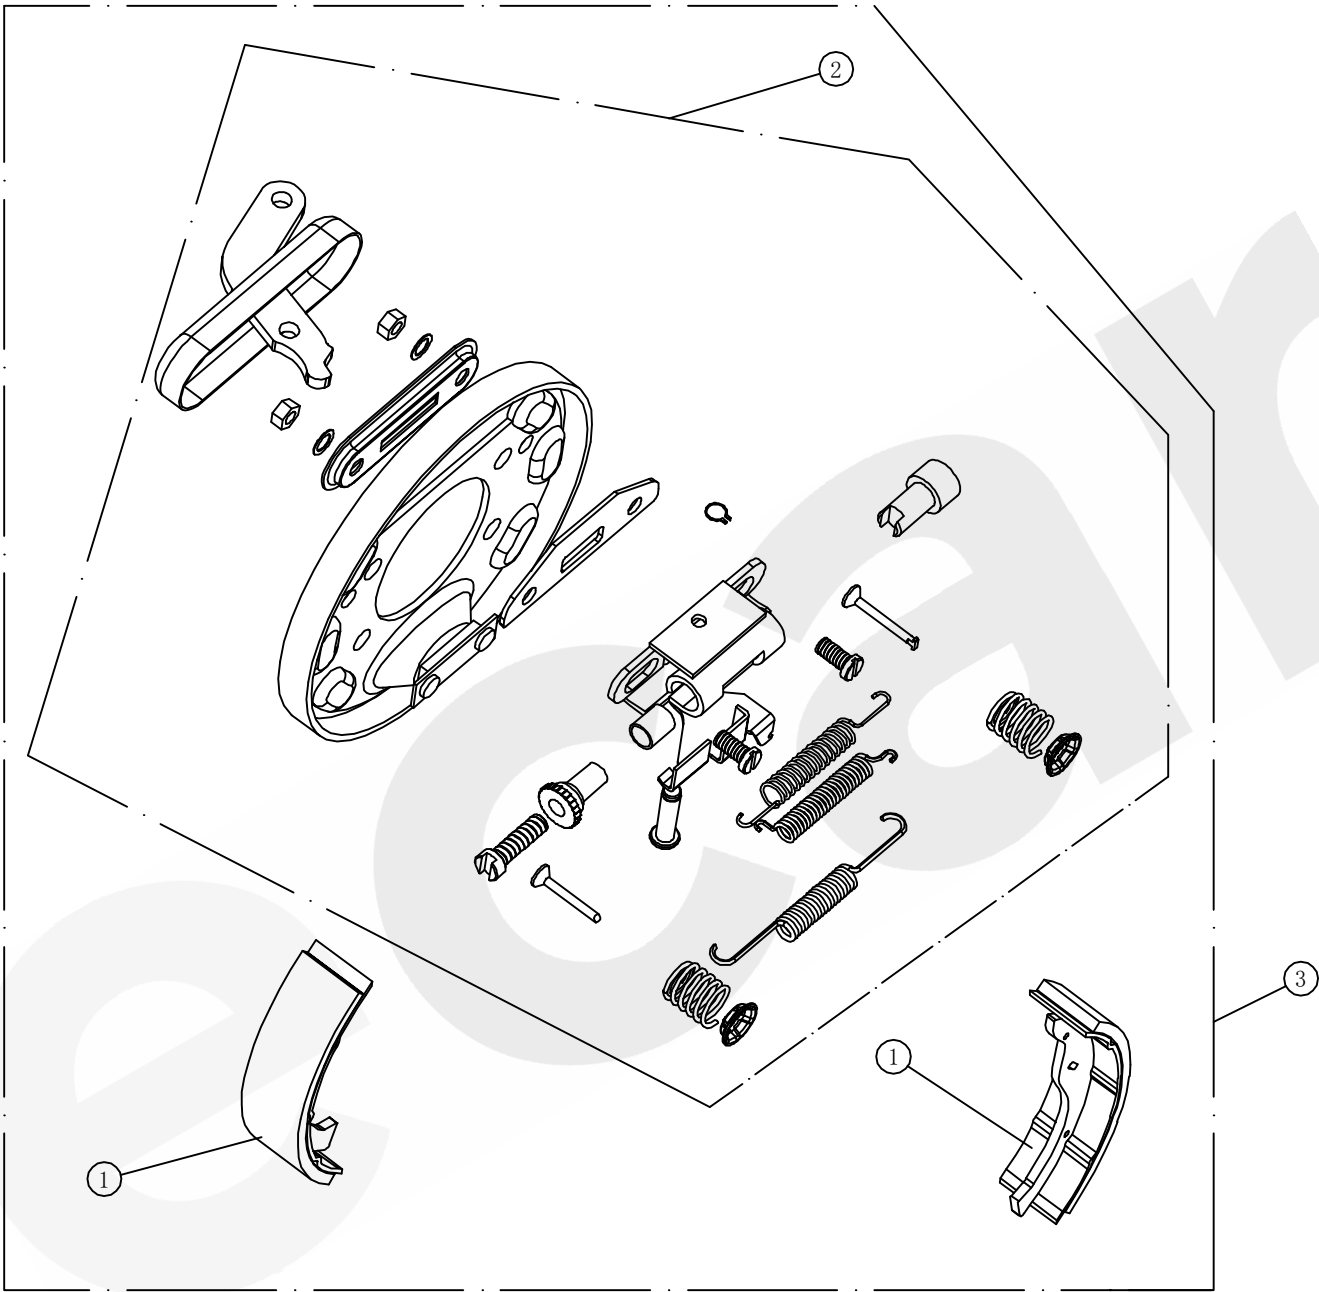 

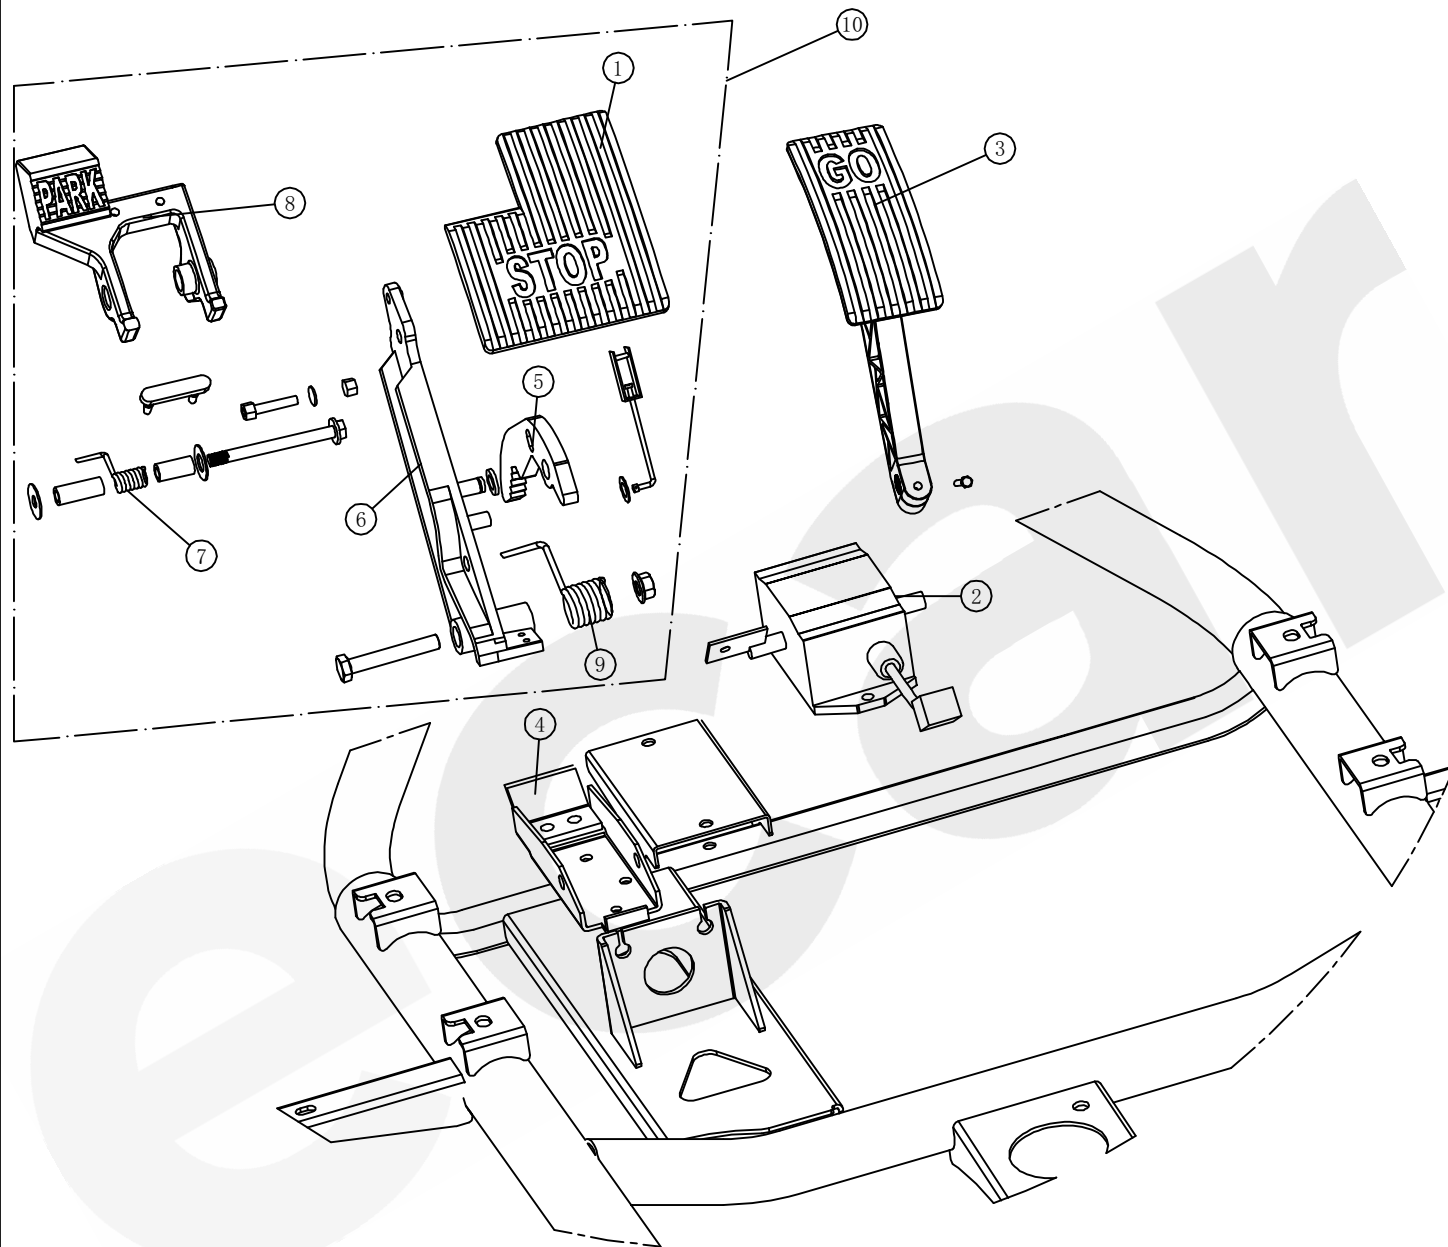 


LT-A627.2 brake system

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 050088	brake pedal	1	
2	3. 03. 005. 000001	accelerator Hall-A	1	Curtis controller
	3. 03. 005. 000009	resistance accelerator -3	1	Toyota controller
3	3. 01. 004. 900025	accelerator pedal assy	1	
4	3. 01. 004. 050033	brake pedal panel	1	
5	3. 02. 014. 200010	brake hook	1	
6	3. 01. 004. 050040	brake pedal support	1	
7	3. 01. 004. 050048	parking pedal spring	1	
8	2. 01. 004. 010337	parking pedal	1	
9	2. 01. 004. 010271	brake pedal spring	1	
10	3. 01. 004. 060004	brake pedal assy	1	
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				

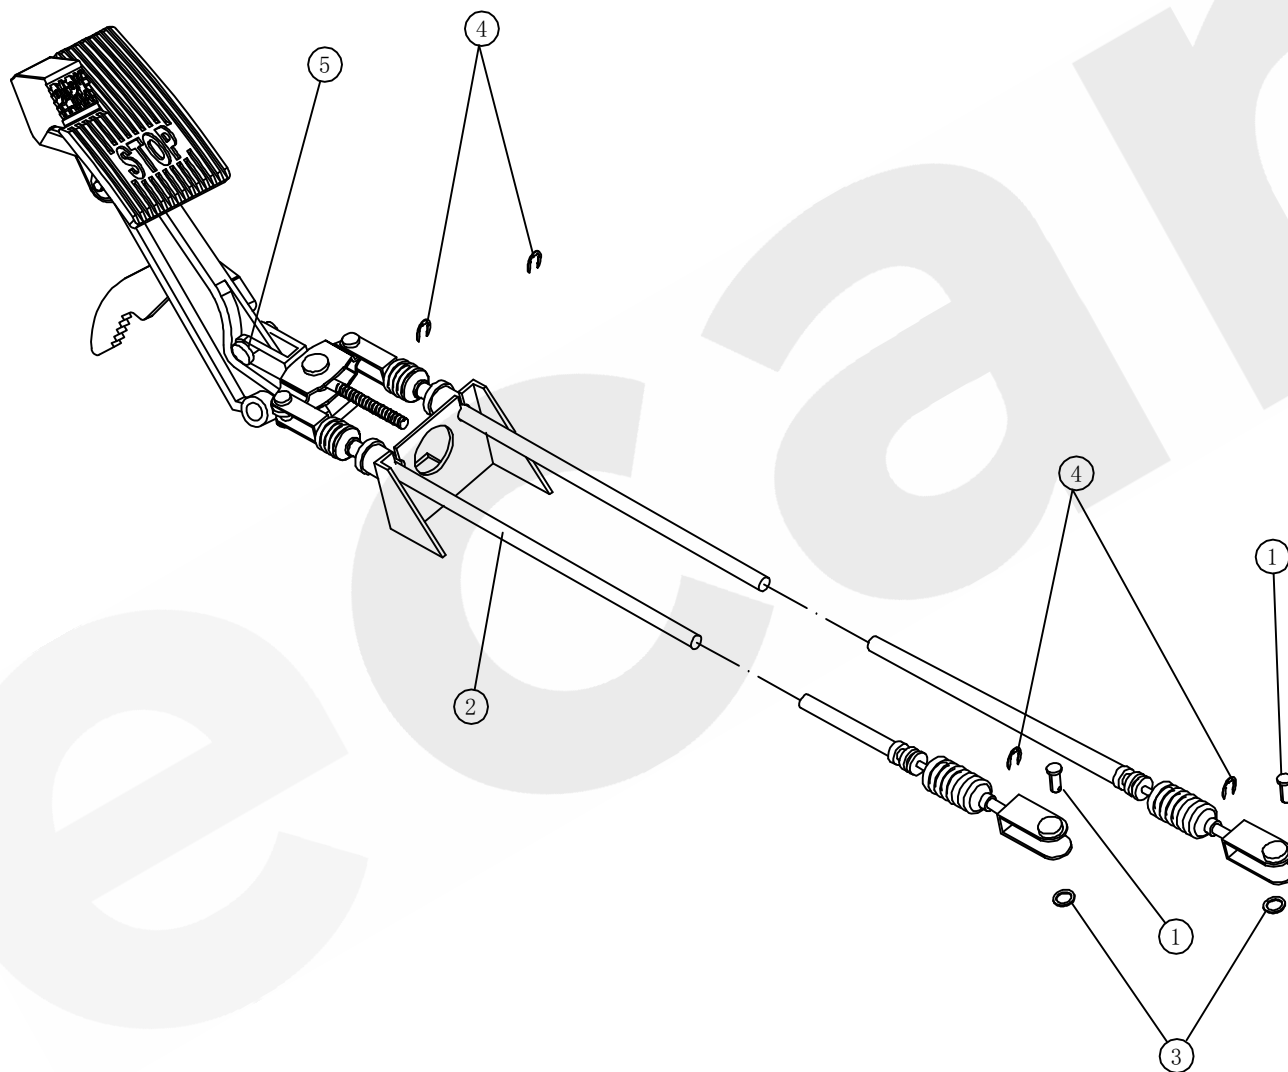 


LT-A627.2 brake pull cable

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 040021	rear nail	2	8*22
2	3. 01. 004. 040001	A2 brake pull cable	1	
3	3. 01. 003. 080004	gasket	2	1. 2*8*20
4	3. 01. 003. 070036	jump ring	4	φ7
5	3. 01. 004. 040022	front nail	1	10*25
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

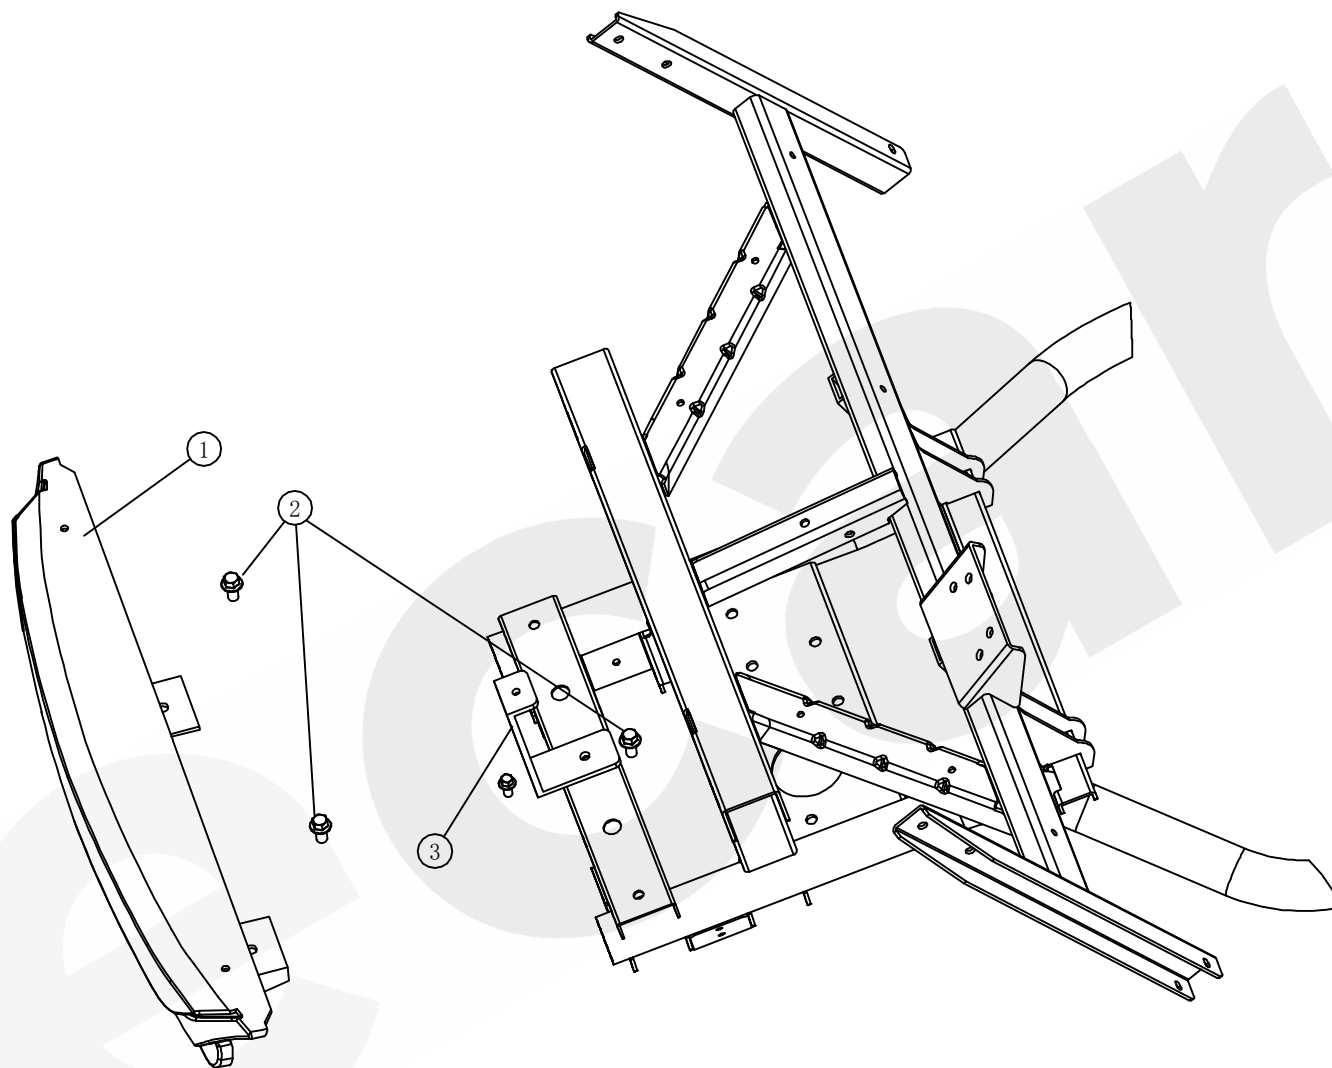 


LT-A627.2 front bumper

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300065	A627 front bumper	1	
2	3. 01. 003. 060006	screw	4	M8*20
3	2. 01. 007. 800083	A627 front bumper base	1	
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

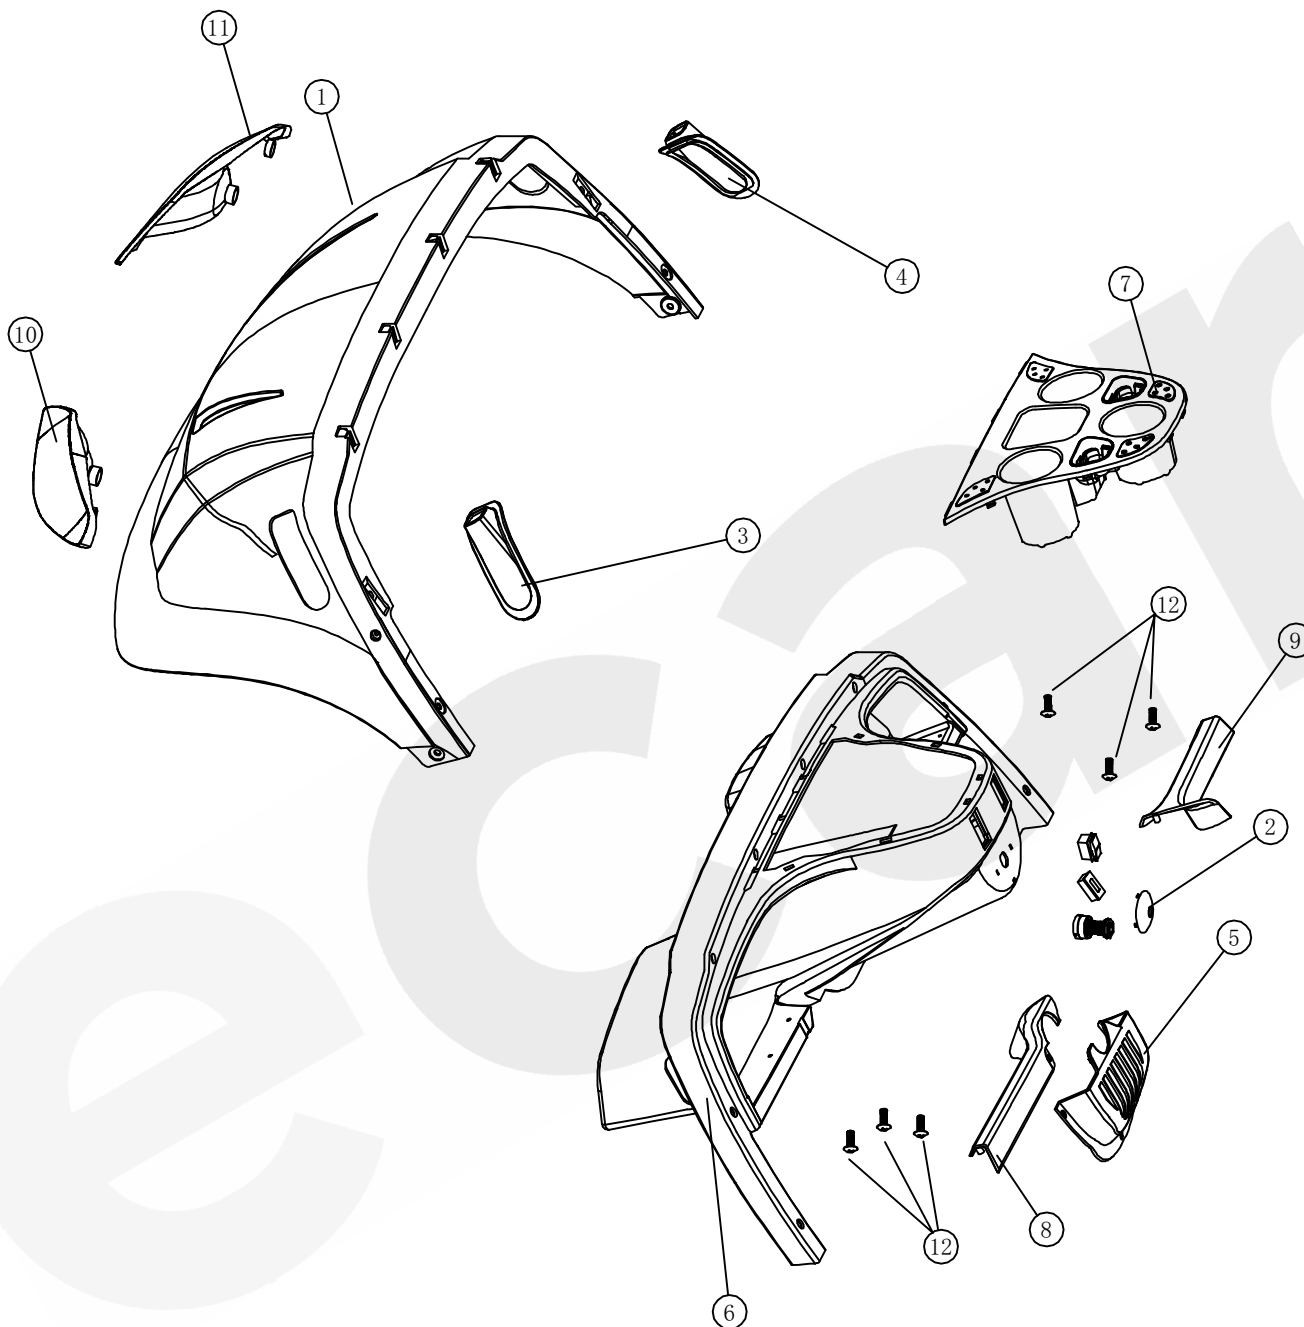 


LT-A627.2 front body cover

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300066	A627 Front Cover-B	1	
2	3. 02. 011. 300038	A627 Electric lock cover	1	
3	3. 02. 011. 300058	Front support decoration cover/ L	1	
4	3. 02. 011. 300059	Front support decoration cover/ R	1	
5	3. 02. 011. 300073	A627 steering column trim cover-B	1	
6	3. 02. 011. 300067	A627 Front dashboard-B	1	
7	3. 02. 011. 300027	A627 Cup base	1	
8	3. 02. 011. 300075	A627 Ball cabinet cover/L	1	
9	3. 02. 011. 300043	A627 Ball cabinet cover/R	1	
10	3. 03. 001. 900023	Integrated front head light/L	1	
11	3. 03. 001. 900024	Integrated front head light/R	1	
12	3. 01. 003. 110003	cross recessed flat head tapping screws	6	M5*16
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

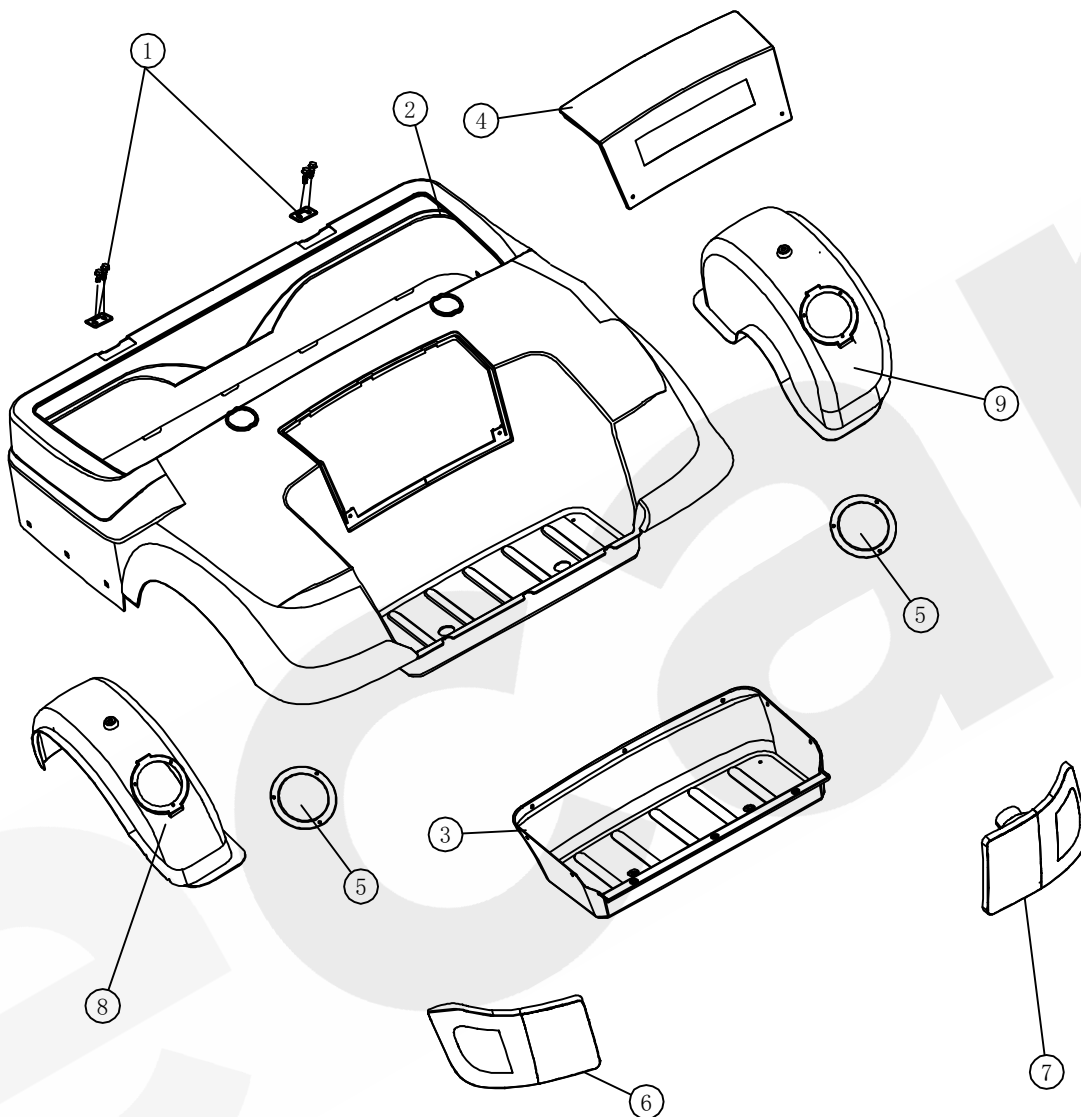 


LT-A627.2 rear body cover

NO:	Code	Name	QTY	Remark
1	2. 01. 001. 200002	A627 Seat Cushion Hinge down	2	
2	3. 02. 011. 300068	A627 Rear Body cover-B	1	
3	3. 02. 011. 300017	A627 Golf bag plate	1	
4	3. 02. 011. 300074	A627 Rear body c over board-B	1	
5	3. 02. 011. 300064	A627 Repair board for rear light	2	
6	3. 03. 001. 900025	Integrated rear light/L	1	
7	3. 03. 001. 900026	Integrated rear light/R	1	
8	3. 02. 011. 300062	A627 Rear Fender L-B	1	
9	3. 02. 011. 300063	A627 Rear Fender R-B	1	
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

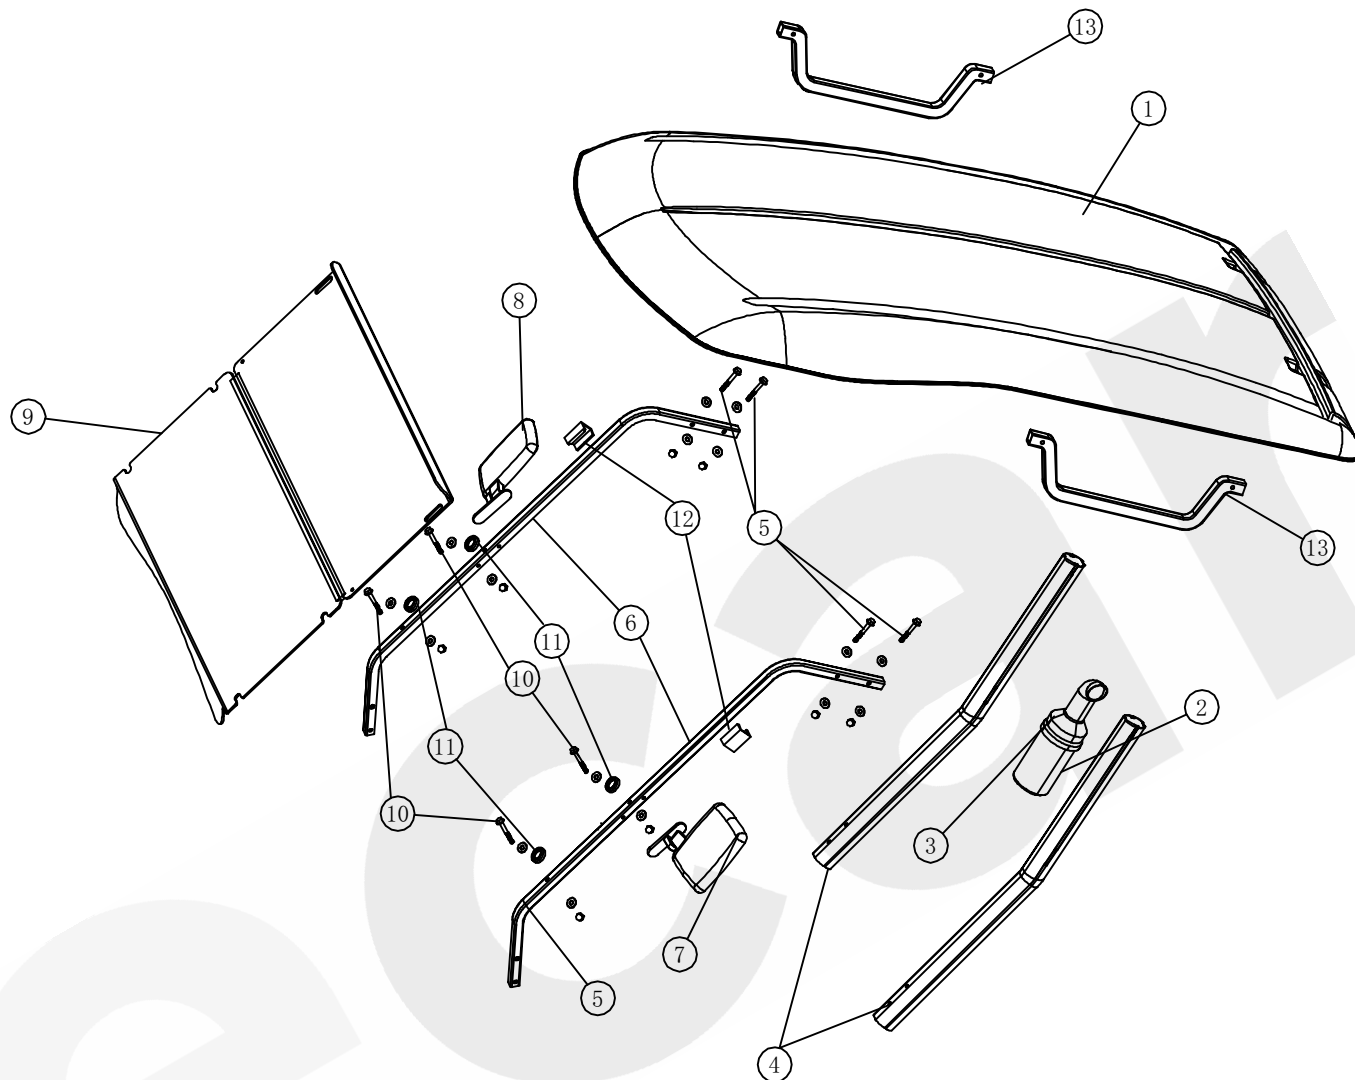 


LT-A627.2 top roof

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300023	A627 Top roof	1	
2	3. 02. 014. 000134	Sand barrels (outer)	1	
3	3. 02. 014. 000135	Sand barrels (Inner)	1	
4	2. 01. 007. 800036	A627 Top roof rear support	2	
5	3. 01. 003. 060023	screw	4	M8*45
6	2. 01. 007. 800063	A627.2 Windshield support-B	1	
7	3. 02. 013. 000049	A627 Side mirror/L	1	
8	3. 02. 013. 000050	A627 Side mirror/R	1	
9	3. 02. 012. 000153	A627.2 foldable windshield	1	
10	3. 01. 003. 060023	Screw	4	
11	3. 02. 012. 000050	Fold windshield rubber(new)	4	
12	3. 02. 012. 000051	Windshield retain rubber	2	
13	3. 02. 011. 200006	A-U Roof Handle	2	
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

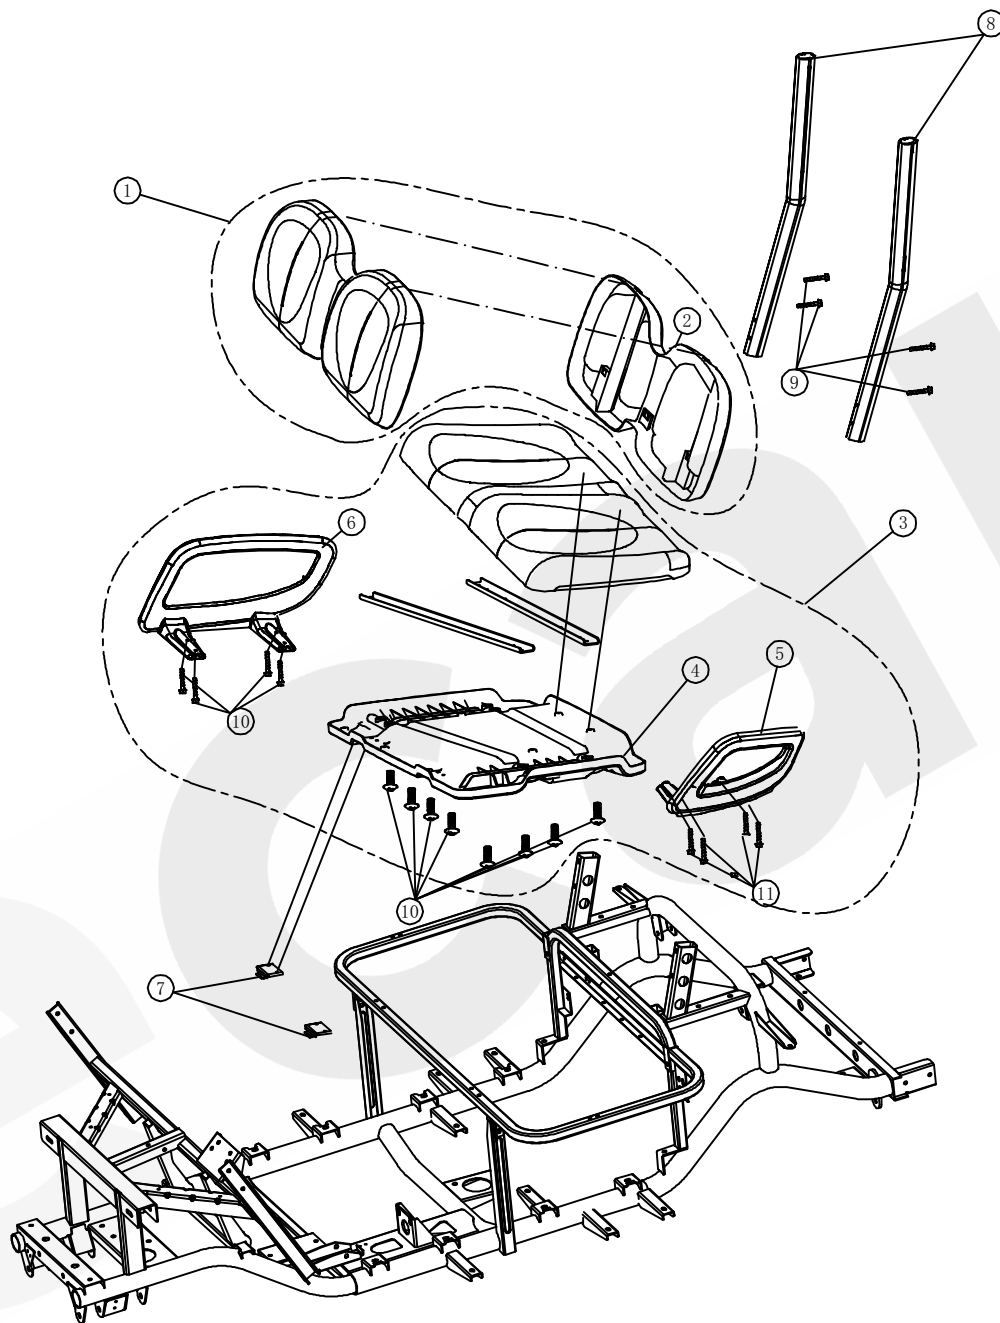 


LT-A627.2 seat

NO:	Code	Name	QTY	Remark
1	2. 02. 007. 010035	A627 Seat back	1	
2	3. 02. 011. 300076	A627 Back cover -B	1	
3	2. 02. 007. 010034	A627 Cushion	1	
4	3. 02. 011. 300078	A627 Cushion baseboard -B	1	
5	3. 02. 011. 300079	A627 Cushion armrest/L -B	1	
6	3. 02. 011. 300026	A627 Cushion armrest/R	1	
7	2. 01. 001. 200001	A627 Seat Cushion hinge up	2	
8	2. 01. 007. 800036	A627 Top roof rear support	2	
9	3. 01. 003. 060035	screw	4	M8*70
10	3. 01. 003. 060013	screw	10	M6*30
11	3. 01. 003. 060022	screw	8	M6*45
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

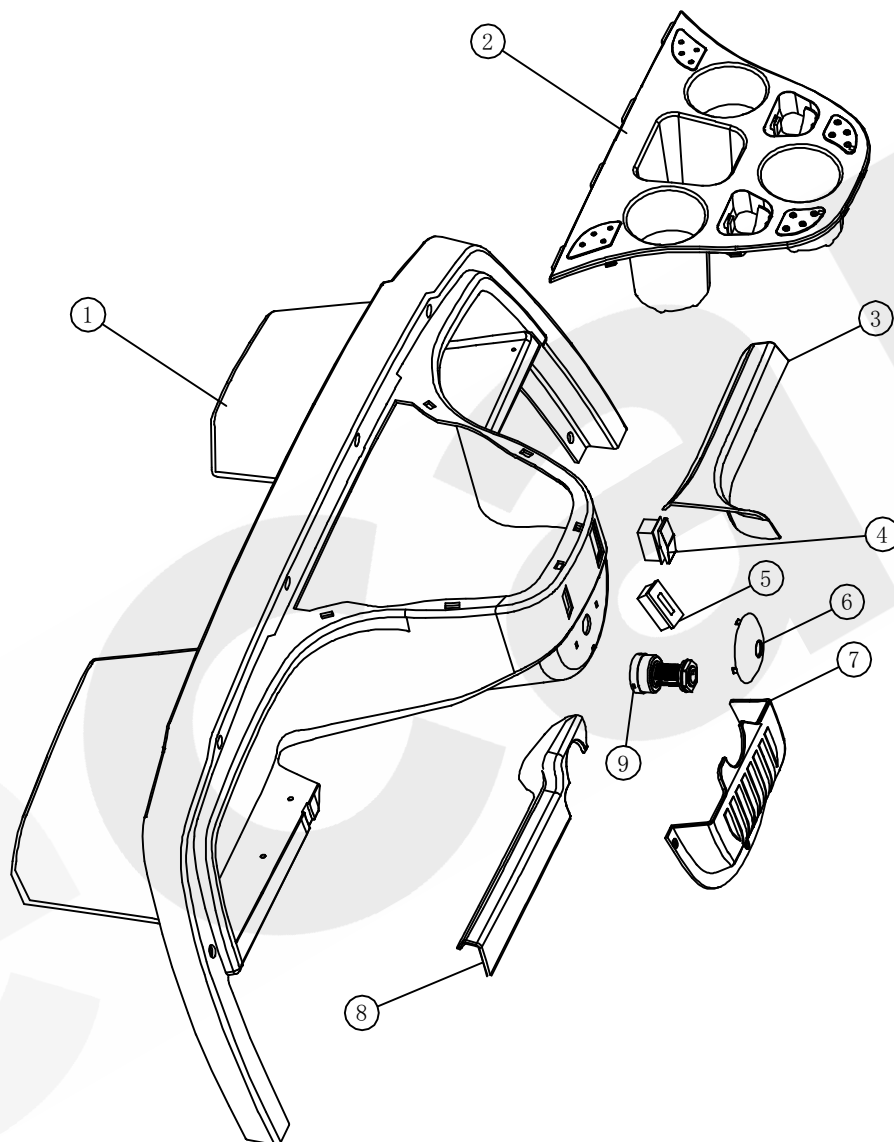 


LT-A627.2 dashboard

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300067	A627 dashboard-B	1	
2	3. 02. 011. 300027	A627 Cup base	1	
3	3. 02. 011. 300043	A627 Ball cabinet cover/R	1	
4	3. 03. 002. 000006	Switch F/R	1	
5	3. 03. 011. 000007	Power indicator 48V	1	
6	3. 02. 011. 300038	A627 Electric lock cover	1	
7	3. 02. 011. 300073	A627 rod steering cover-B	1	
8	3. 02. 011. 300075	A627 Ball cabinet cover/L-B	1	
9	3. 03. 002. 000036	S14 key switch	1	
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

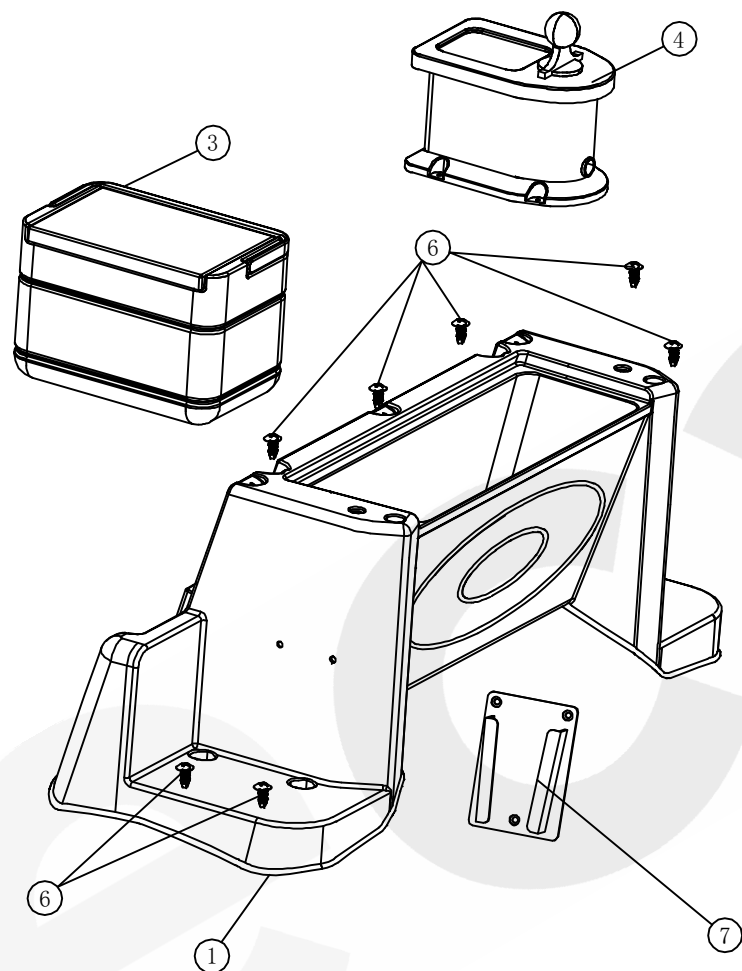 


LT-A627.2 golf bag parts

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300077	Golf bag box -B	1	
2	3. 02. 011. 300034	Golf bag support	1	
3	3. 02. 014. 000136	Cool box / C	1	
4	3. 01. 006. 000152	Ball washer	1	
5	3. 01. 003. 060005	screw	4	M6*20
6	3. 01. 003. 110007	cross recessed flat head tapping screws	9	M6*25
7	2. 01. 007. 800009	cool Box Support	1	
8	3. 02. 014. 000086	golf bag belt	1	
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

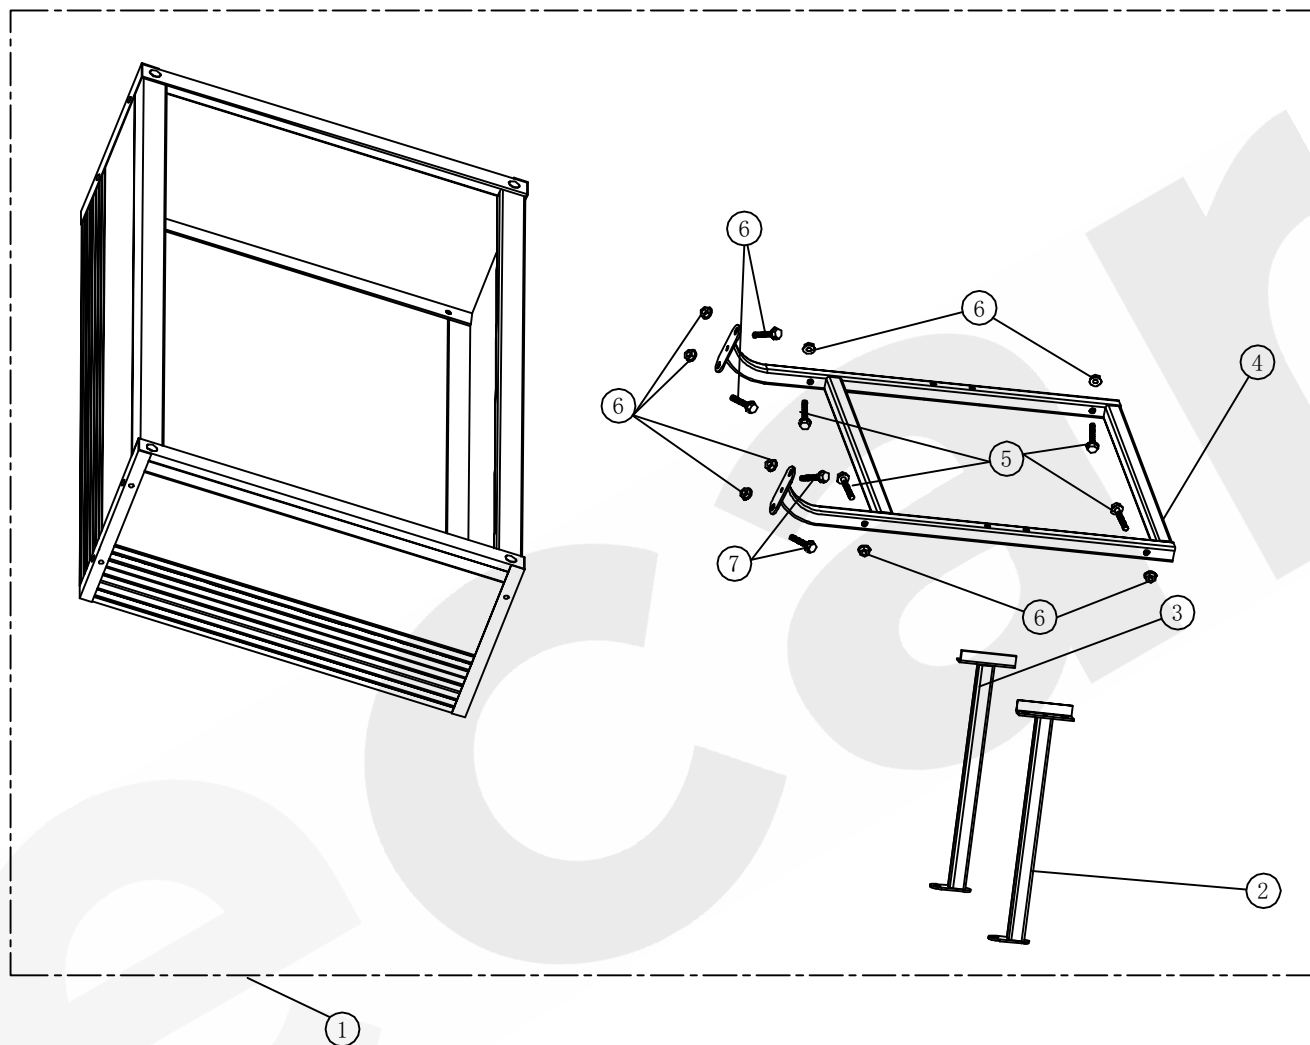 


LT-A627.2 swiss box parts

NO:	Code	Name	QTY	Remark
1	2. 03. 001. 000141	A627 Swiss box assy	1	
2	2. 01. 007. 800051	cargo holder backstay/L	1	
3	2. 01. 007. 800061	cargo holder backstay/R	1	
4	2. 01. 007. 800046	A627 Box support	1	
5	3. 01. 003. 060016	screw	4	M8*35
6	3. 01. 003. 100014	Nut	8	8mm
7	3. 01. 003. 060048	screw	4	M8*16
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

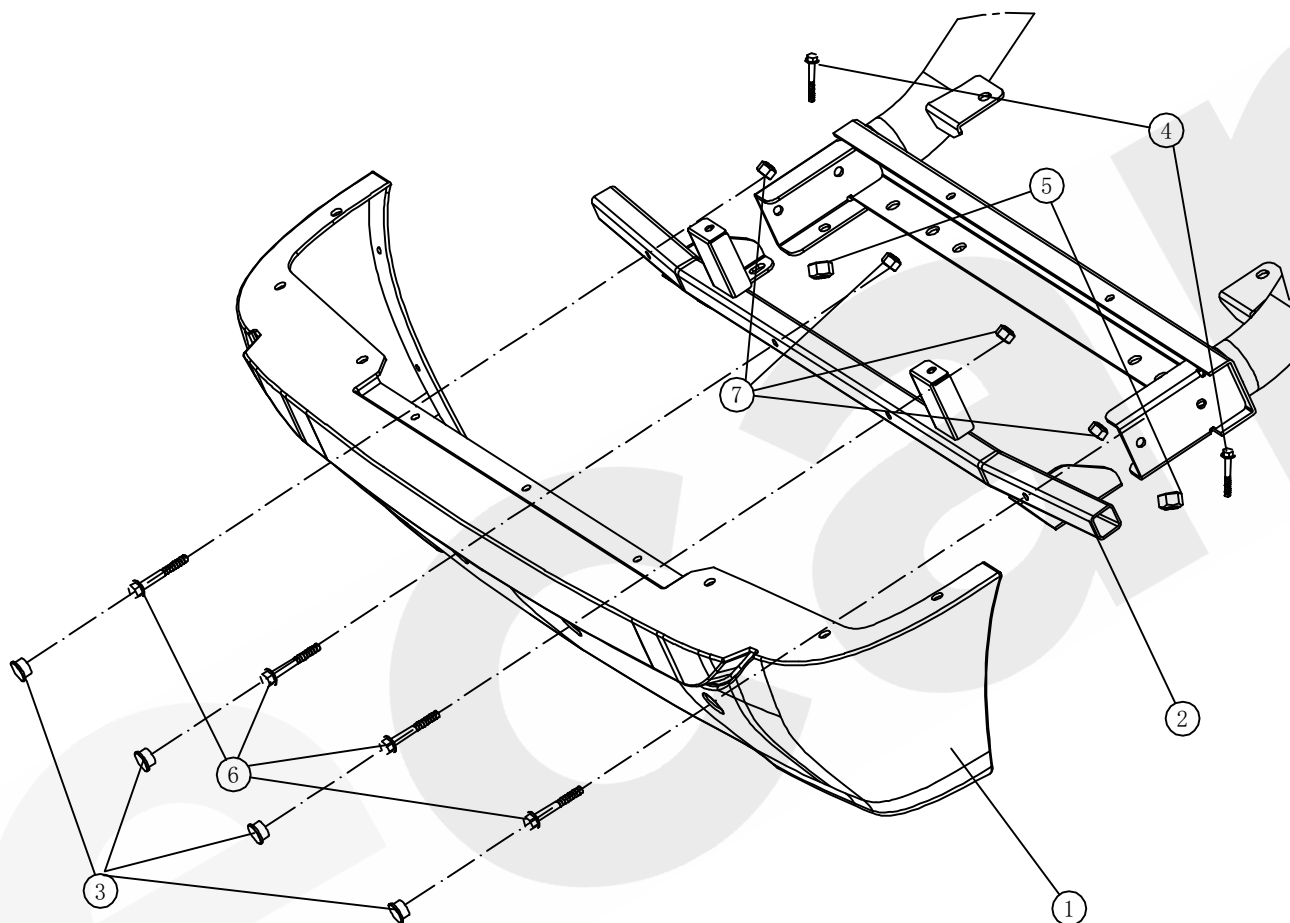 


LT-A627.2 rear bumper

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300071	A627 Rear bumper	1	
2	2. 01. 007. 800007	Rear bumper fix frame	1	
3	3. 02. 011. 300072	Rear bumper plug cover	4	
4	3. 01. 003. 060006	screw	2	M8*20
5	3. 01. 003. 100010	Hexagon nuts	2	8mm
6	3. 01. 003. 040015	screw	4	M6*40
7	3. 01. 003. 100013	screw	4	6mm
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

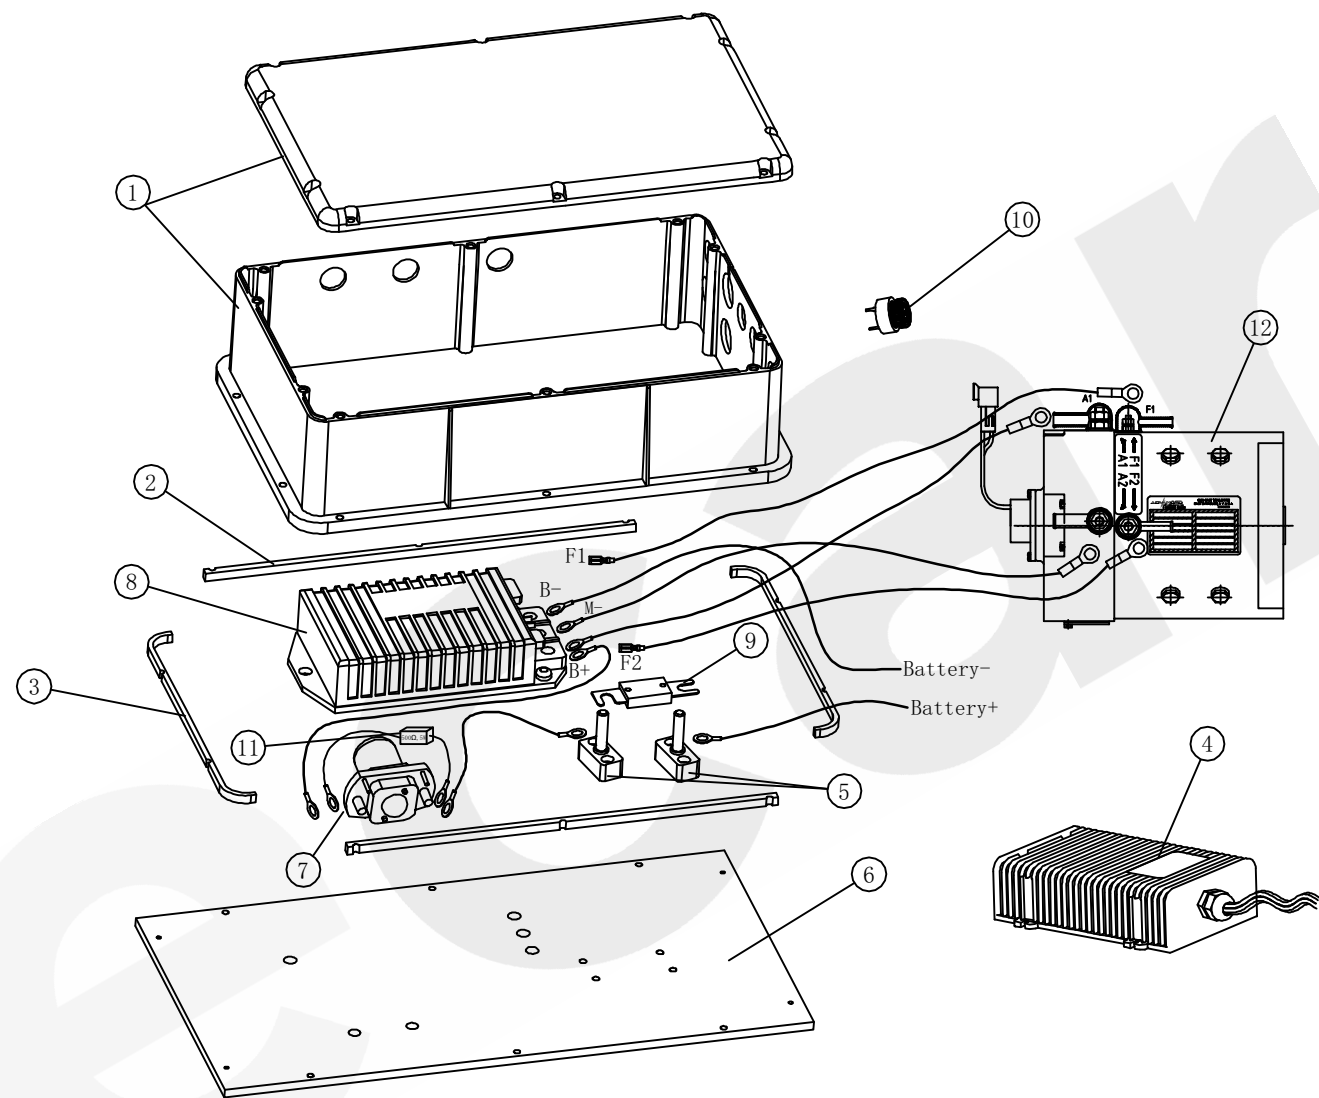 


LT-A627.2 DC system

NO:	Code	Name	QTY	Remark
1	3. 02. 014. 000101	controller cover top	1	1268/1236
2	3. 02. 014. 000102	controller cover base1	2	
3	3. 02. 014. 000103	controller cover base2	2	
4	3. 03. 016. 000009	DC convertor	1	36V
5	3. 03. 017. 000012	fuse base	2	
6	2. 02. 007. 010038	Curtis heatsink board 1266/1234	1	
7	3. 03. 015. 000010	36V sensor	1	36V
8	3. 03. 003. 000020	Curtis controller 1266 A-5201	1	48V-275A
9	3. 03. 017. 000019	fuse 200A	1	
10	3. 03. 010. 000004	buzzer(48V)	1	
11	3. 03. 017. 000022	resistance	1	500Ω 5W
12	3. 03. 007. 000069	KDS separately excited DC motor 3KW		36V
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

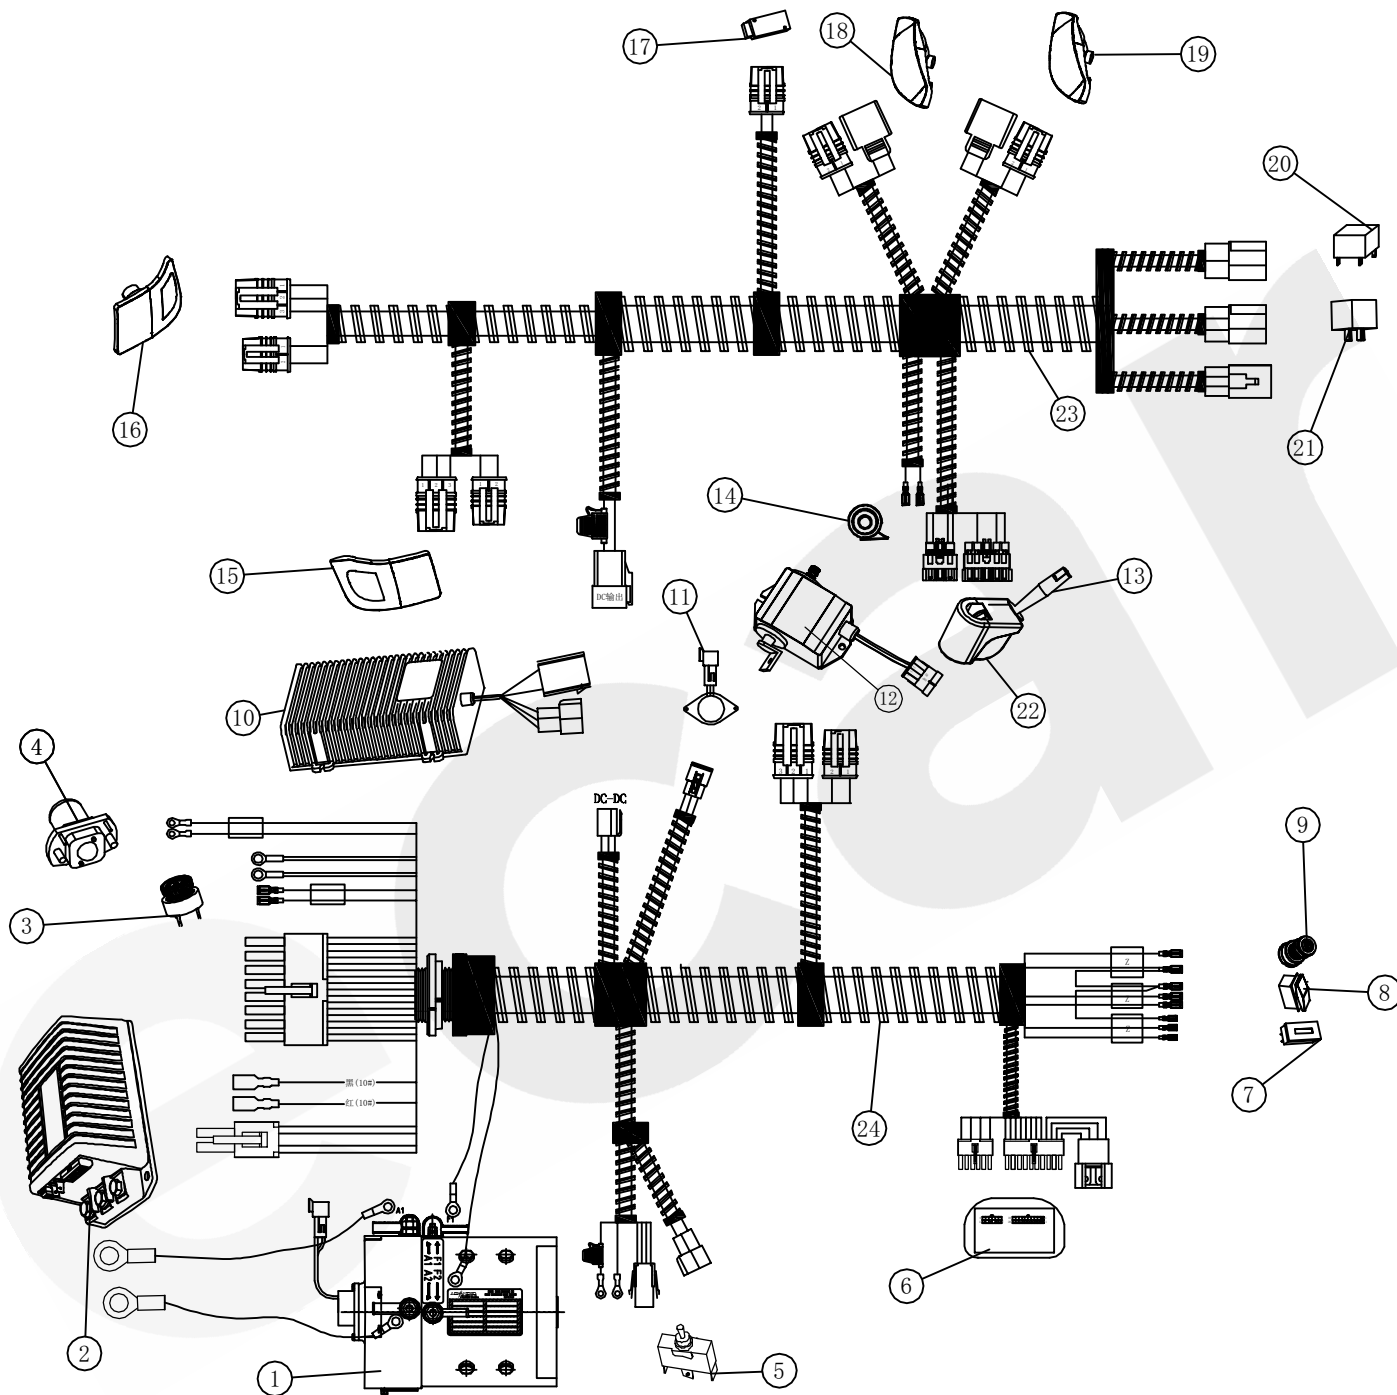 


LT-A627.2 DC wire harness diagram

NO:	Code	Name	QTY	Remark
1	3. 03. 007. 000069	KDS separately excited DC motor 3KW	1	36V
2	3. 03. 003. 000020	Curtis Controller 1266A-5201	1	
3	3. 03. 010. 000004	Buzzer(48V)	1	
4	3. 03. 015. 000010	36V DC sensor	1	36V
5	3. 03. 002. 000004	Two switch(2 level)	1	
6	3. 03. 011. 000029	36V speed meter	1	36V 10. 25:1
7	3. 03. 011. 000024	Curtis power indicator 36V	1	36V
8	3. 03. 002. 000006	Switch F/R	1	
9	3. 03. 002. 000036	S14 key switch	1	不通用
10	3. 03. 016. 000009	DC convertor 36V	1	36V
11	3. 03. 007. 000037	Motor speed sensor	1	3. 7KW
12	3. 03. 005. 000001	accelerator Hall-A	1	
13	3. 03. 011. 000025	Single-arm combination switch	1	
14	3. 03. 010. 000007	Fanfare horn	1	
15	3. 03. 001. 900025	Integrated rear light/L	1	
16	3. 03. 001. 900026	Integrated rear light/R	1	
17	3. 03. 002. 000008	Microswitch	1	
18	3. 03. 001. 900023	Integrated front head light/L	1	
19	3. 03. 001. 900024	Integrated front head light/R	1	
20	3. 03. 017. 900004	Fasher	1	
21	3. 03. 012. 000011	Relay	1	
22	3. 03. 011. 000027	Single-arm combination switch board	1	
23	3. 03. 004. 900046	A627 Light wire harness	1	
24	3. 03. 004. 900047	A627.2 Main wire harness	1	
25				

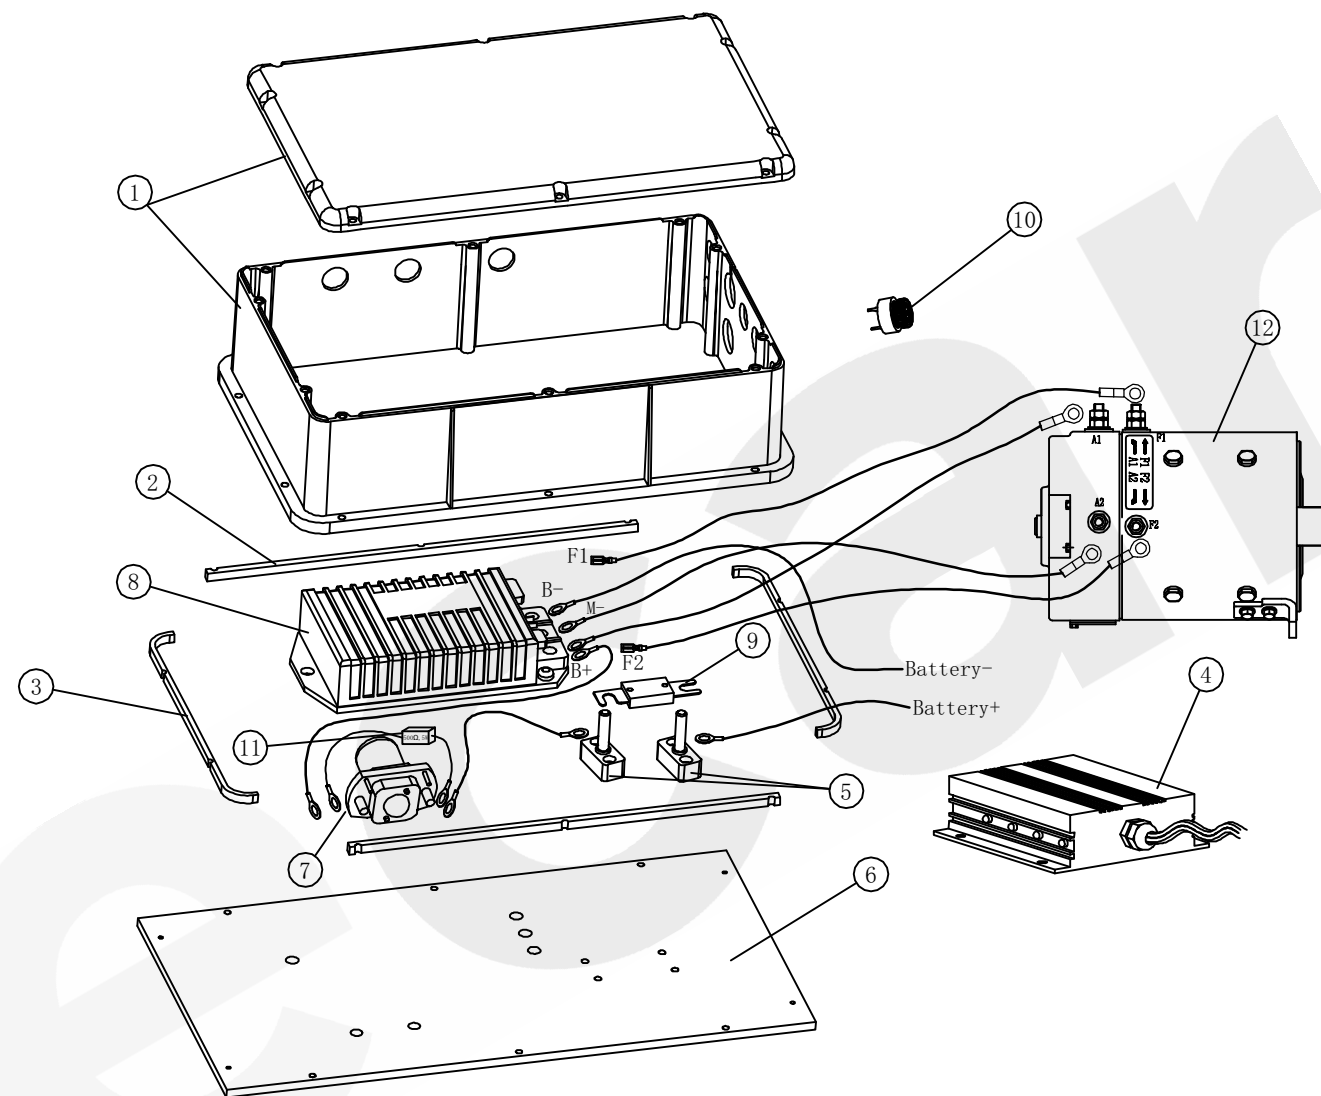 


LT-A627.2 DC system

NO:	Code	Name	QTY	Remark
1	3. 02. 014. 000101	controller cover top	1	1268/1236
2	3. 02. 014. 000102	controller cover base1	2	
3	3. 02. 014. 000103	controller cover base2	2	
4	3. 03. 016. 000001	DC/DC convertor	1	48V/300W
5	3. 03. 017. 000012	fuse base	2	
6	2. 02. 007. 010038	Curtis heatsink board 1266/1234		
7	3. 03. 015. 000001	48V sensor	1	ZJ200A
8	3. 03. 003. 000020	Curtis controller 1266 A-5201	1	48V-275A
9	3. 03. 017. 000019	fuse 200A	1	
10	3. 03. 010. 000004	buzzer(48V)	1	
11	3. 03. 017. 000022	resistance	1	500Ω 5W
12	3. 03. 007. 000006	ADC DC motor48V-3.7KW / Import	1	含测速感应器
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

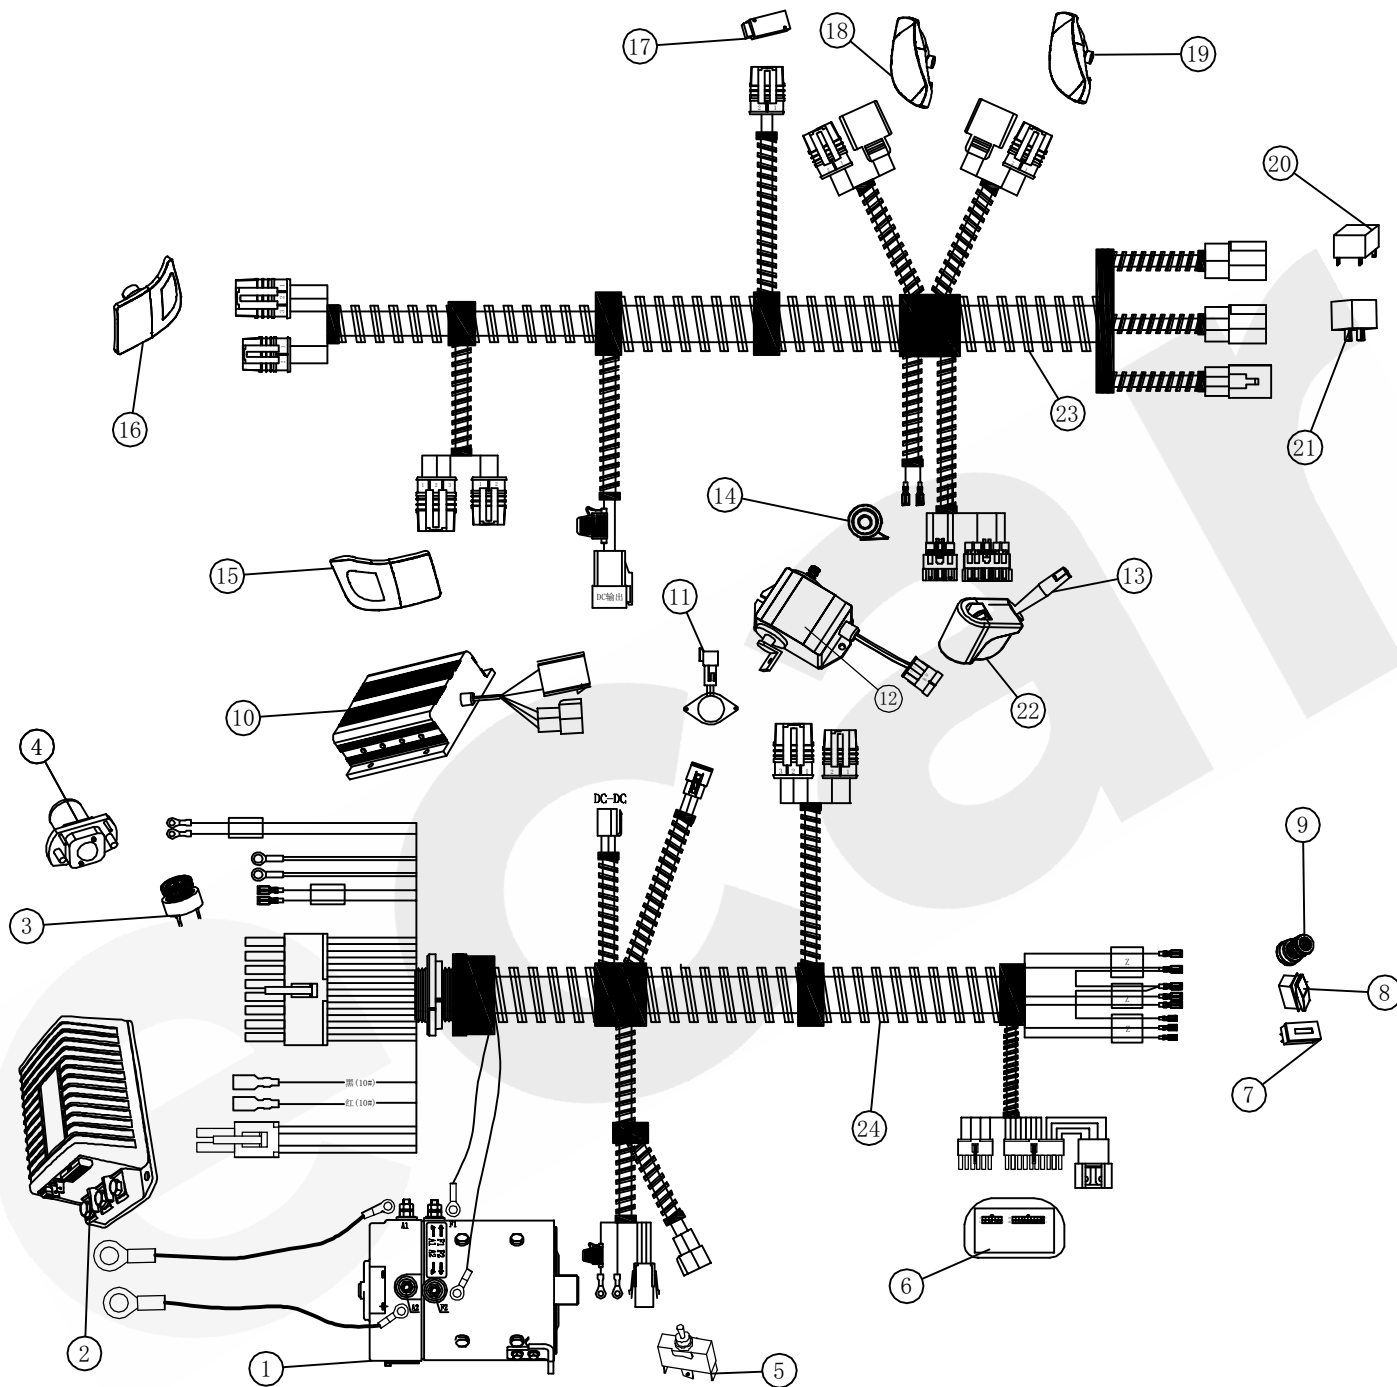 


LT-A627.2 DC wire harness diagram

NO:	Code	Name	QTY	Remark
1	3. 03. 007. 000006	ADC DC motor48V-3.7KW / Import	1	
2	3. 03. 003. 000020	Curtis Controller 1266A-5201	1	
3	3. 03. 010. 000004	Buzzer(48V)	1	
4	3. 03. 015. 000001	48V DC sensor	1	48V
5	3. 03. 002. 000004	Two switch(2 level)	1	
6	3. 03. 011. 000032	48V speed meter	1	10. 25:1
7	3. 03. 011. 000007	power indicator 48V	1	48V
8	3. 03. 002. 000006	Switch F/R	1	
9	3. 03. 002. 000036	S14 key switch	1	
10	3. 03. 016. 000001	DC convertor 48V	1	48V/300W
11	3. 03. 007. 000037	Motor speed sensor	1	3. 7KW ADC
12	3. 03. 005. 000001	accelerator Hall-A	1	
13	3. 03. 011. 000025	Single-arm combination switch	1	
14	3. 03. 010. 000007	Fanfare horn	1	
15	3. 03. 001. 900025	Integrated rear light/L	1	
16	3. 03. 001. 900026	Integrated rear light/R	1	
17	3. 03. 002. 000008	Microswitch	1	
18	3. 03. 001. 900023	Integrated front head light/L	1	
19	3. 03. 001. 900024	Integrated front head light/R	1	
20	3. 03. 017. 900004	Fasher	1	
21	3. 03. 012. 000011	Relay	1	
22	3. 03. 011. 000027	Single-arm combination switch board	1	
23	3. 03. 004. 900046	A627 Light wire harness	1	
24	3. 03. 004. 900047	A627.2 Main wire harness	1	
25				

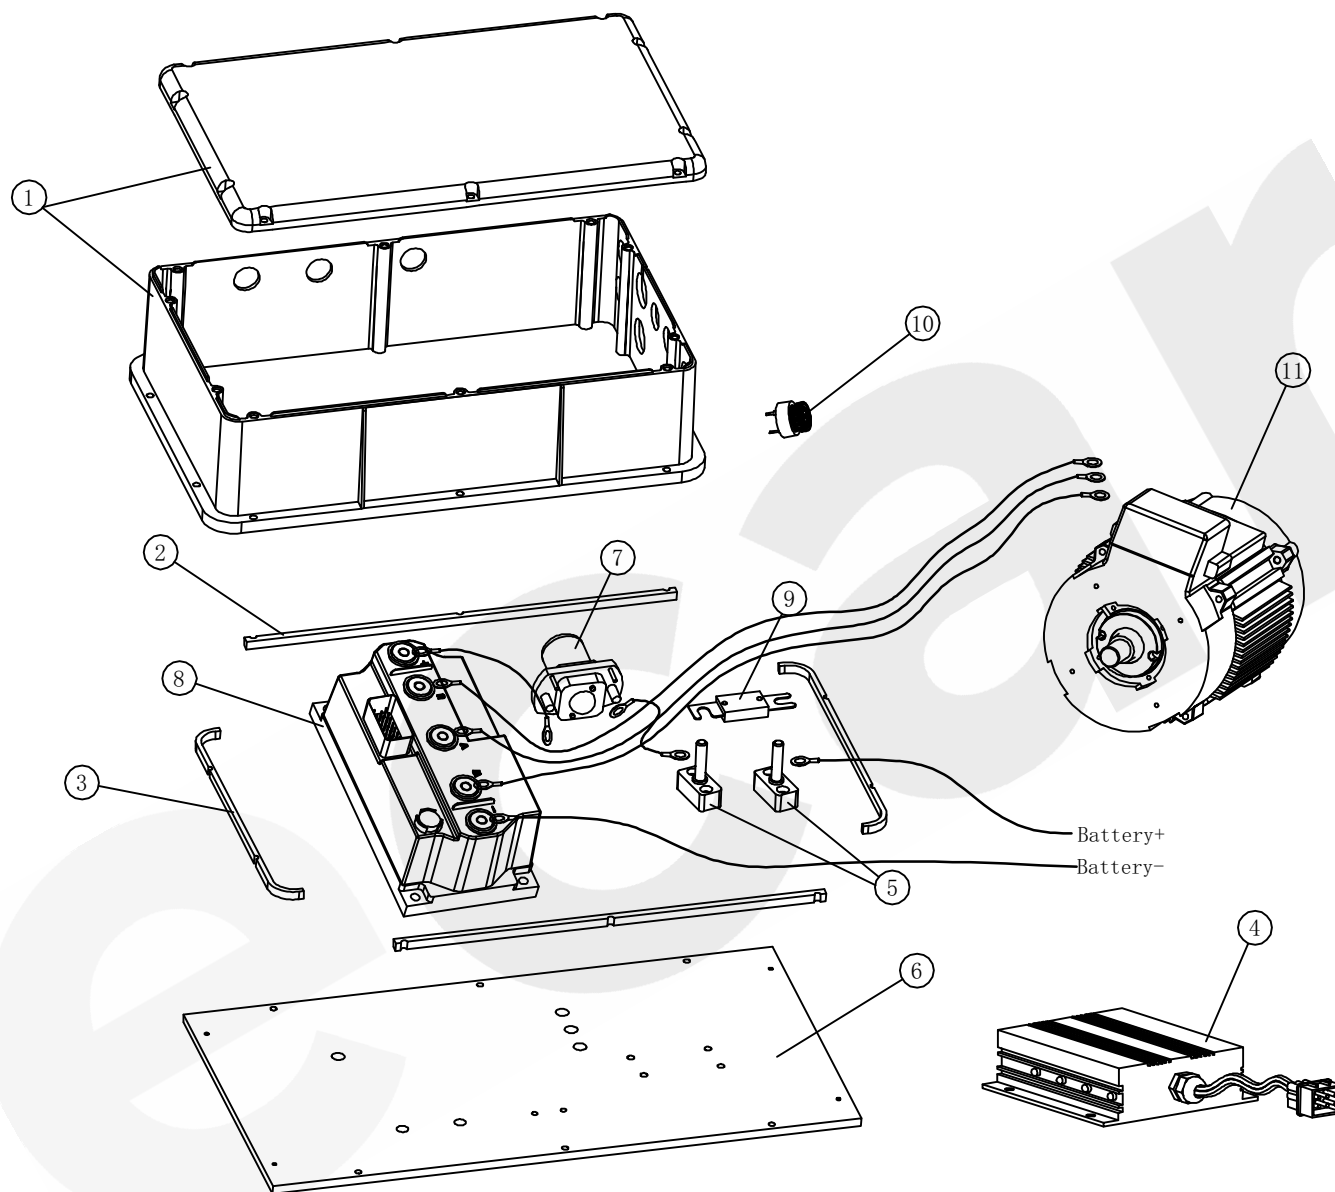 


LT-A627.2 AC spare parts

NO:	Code	Name	QTY	Remark
1	3. 02. 014. 000101	controller cover top	1	
2	3. 02. 014. 000102	controller cover base1	2	
3	3. 02. 014. 000103	controller cover base2	2	
4	3. 03. 016. 000001	DC/DC convertor	1	48V/300W
5	3. 03. 017. 000012	fuse base	2	
6	2. 02. 007. 010031	Toyota heatsink board -A	1	
7	3. 03. 015. 000001	48V sensor	1	ZJ200A
8	3. 03. 003. 000021	Toyota communication controller	1	48V/350A
9	3. 03. 017. 000020	fuse 250A	1	
10	3. 03. 010. 000004	buzzer(48V)	1	
11	3. 03. 007. 000031	AC motor	1	4KW/33V AQHT4-4001B
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

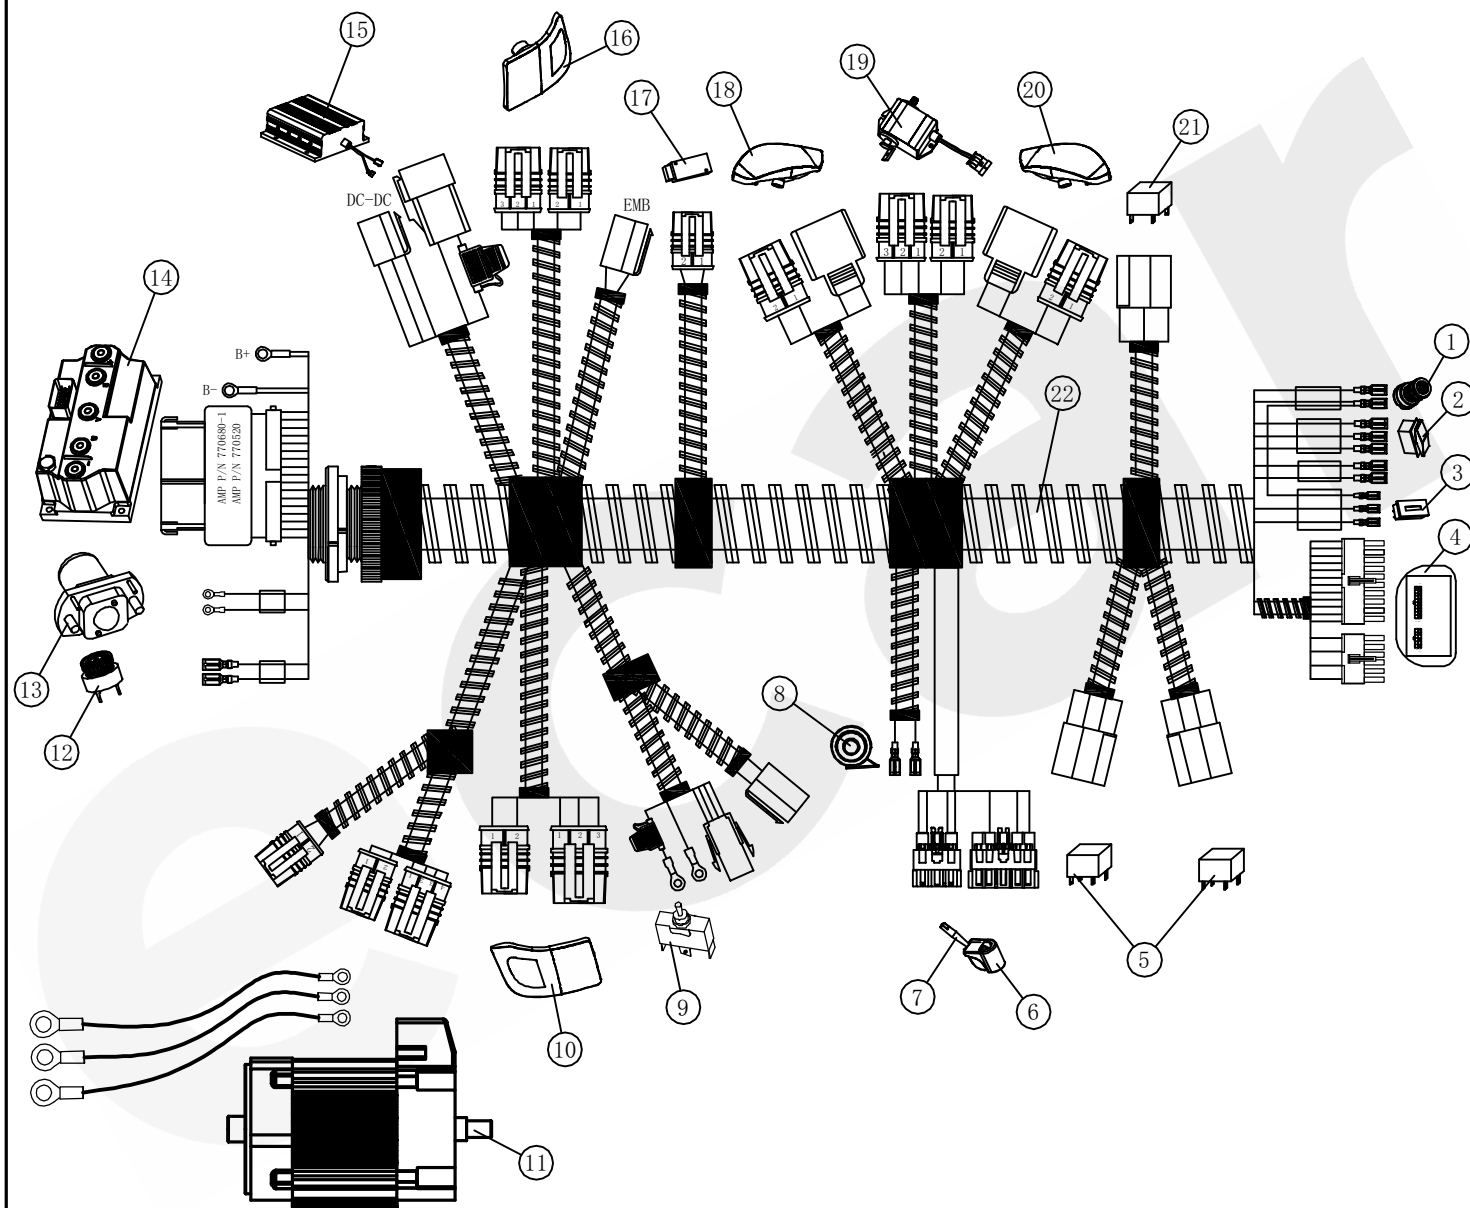 


LT-A627.2 AC diagram

NO:	Code	Name	QTY	Remark
1	3. 03. 002. 000036	S14 key switch	1	
2	3. 03. 002. 000006	switch F/R	1	
3	3. 03. 011. 000007	power indicator/48V	1	
4		speed meter	1	
5	3. 03. 012. 000011	relay	2	
6	3. 03. 011. 000027	Single-arm combination switch board	1	
7	3. 03. 011. 000025	Single-arm combination switch	1	
8	3. 03. 010. 000007	Fanfare horn 12V	1	
9	3. 03. 002. 000004	tow switch(2 level)	1	
10	3. 03. 001. 900025	Integrated rear light/L	1	
11	3. 03. 007. 000031	AC motor	1	4KW/33V AQHT4-4001B
12	3. 03. 010. 000004	buzzer	1	
13	3. 03. 015. 000001	48V sensor	1	ZJ200A
14	3. 03. 003. 000021	Toyota communication controller	1	48V/350A
15	3. 03. 016. 000001	DC/DC convertor	1	48V/300W
16	3. 03. 001. 900026	Integrated rear light/R	1	
17	3. 03. 002. 000008	micro switch 7-3	1	
18	3. 03. 001. 900023	Integrated front head light/L	1	
19	3. 03. 005. 000009	resistance accelerator -3	1	0-5K
20	3. 03. 001. 900024	Integrated front head light/R	1	
21	3. 03. 017. 900004	flasher	1	
22	3. 03. 004. 900065	(A627.2 entire wiring harness	1	
23				
24				
25				

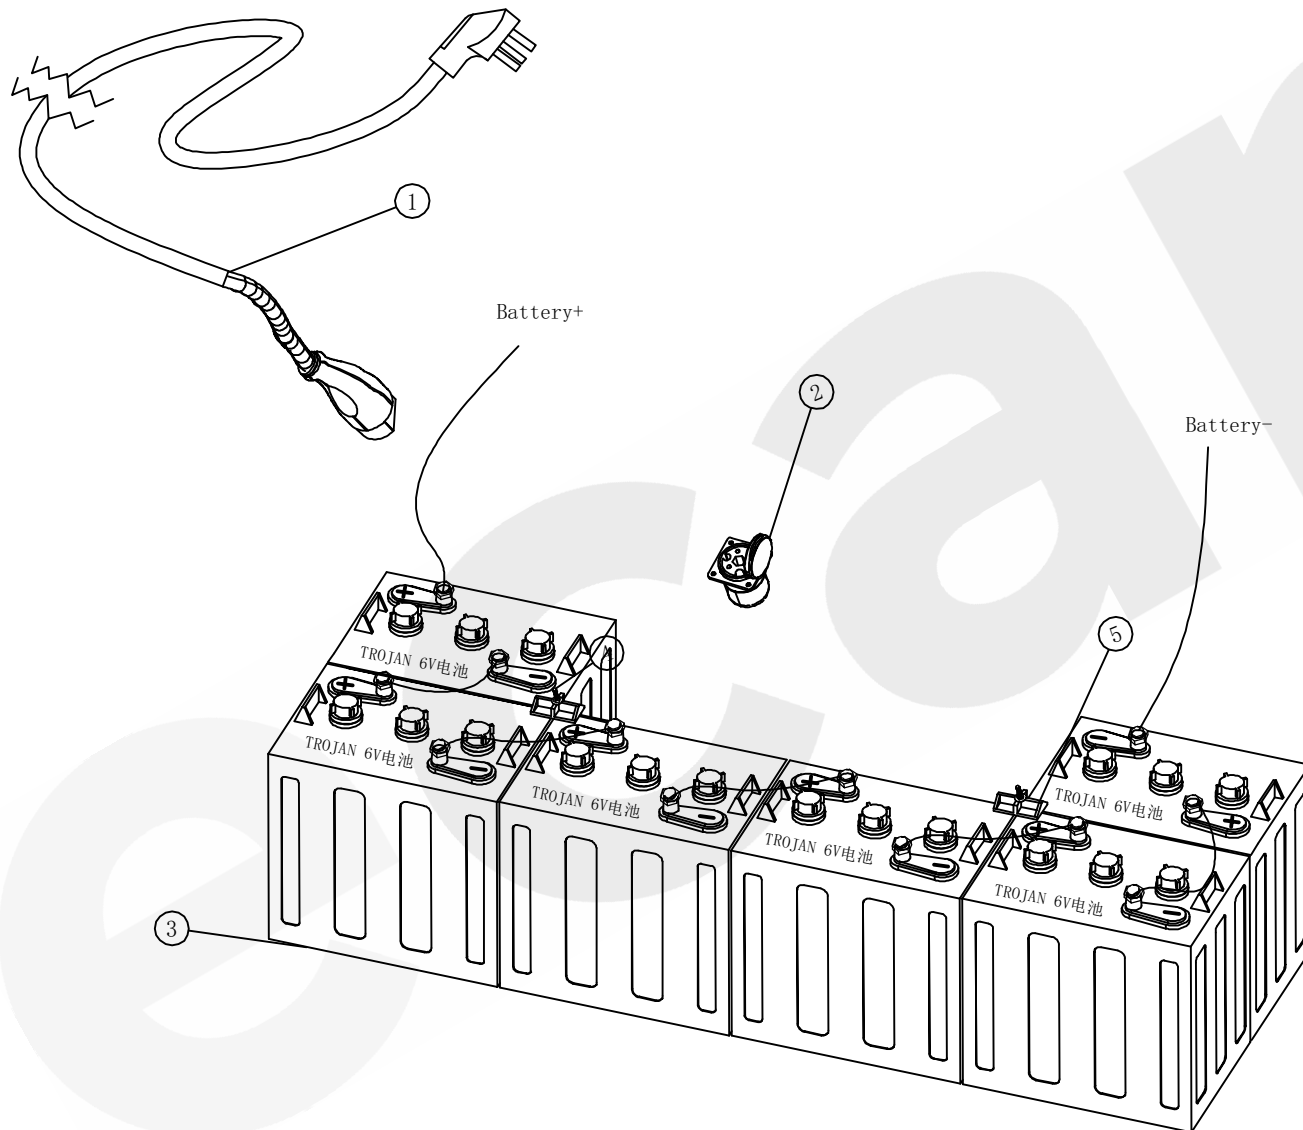 

LT-A627.2 battery system

NO:	Code	Name	QTY	Remark
1	3. 03. 009. 900013	Charger plug	1	220V/30A
2	3. 03. 009. 900014	Charger receptacle	1	220V/30A
3	3. 03. 006. 000029	Torch Battery 6V	6	
4	3. 01. 003. 070013	Battery J-bolt	2	6mm
5	3. 02. 014. 000148	Battery retain clip E	2	
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

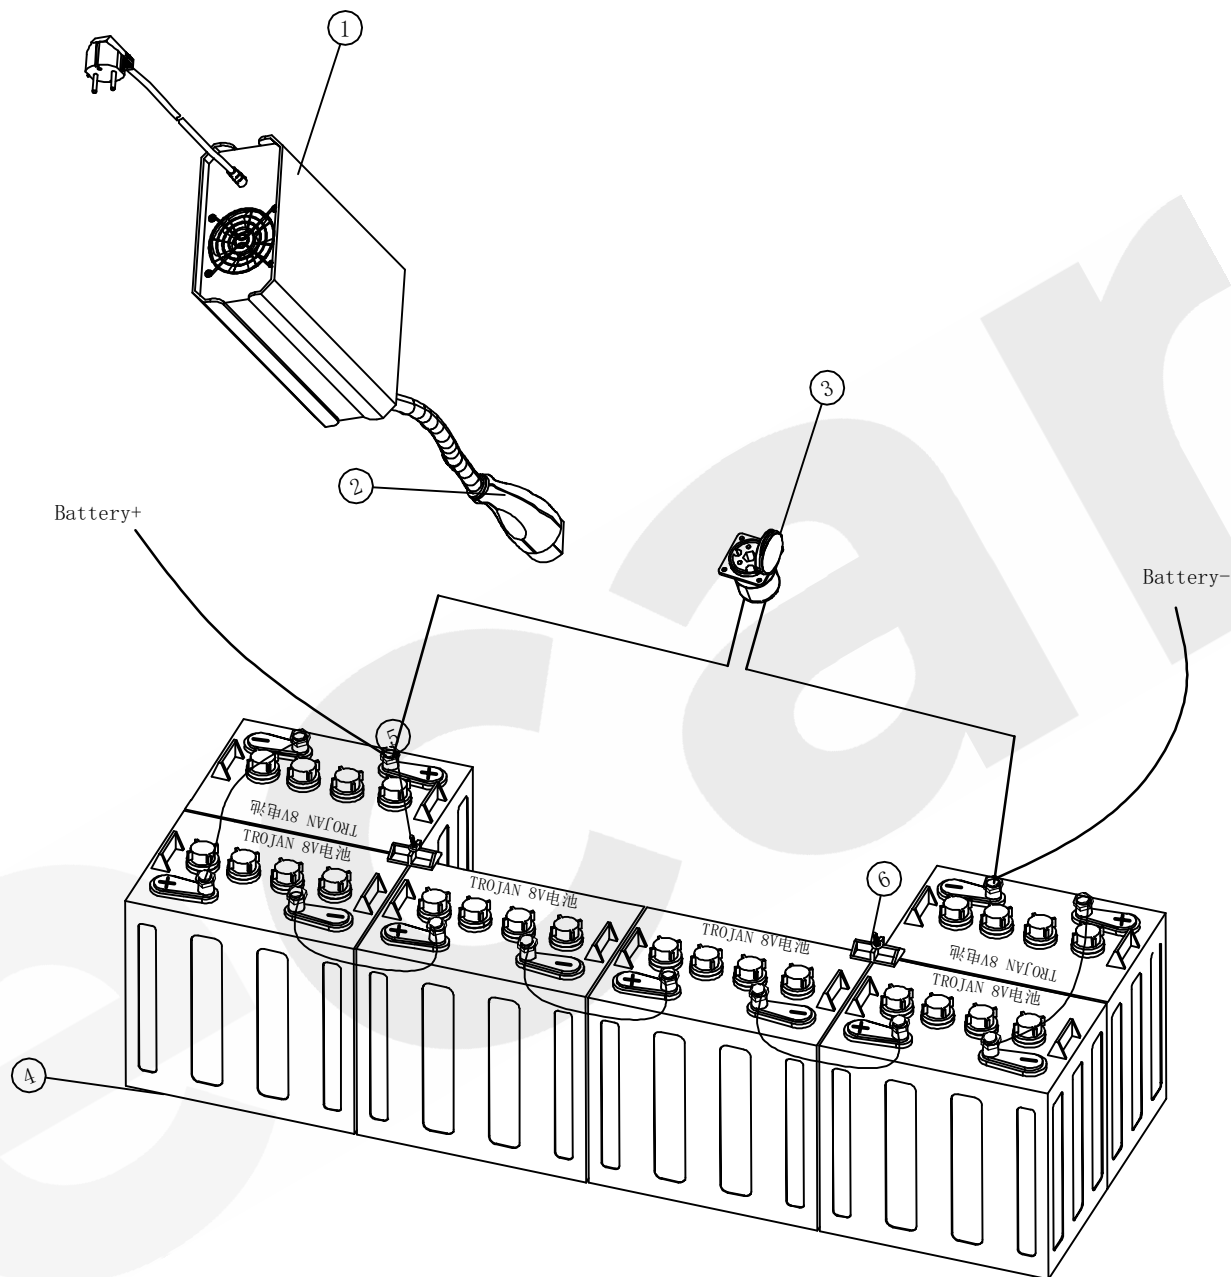 

LT-A627.2 battery system

NO:	Code	Name	QTY	Remark
1	3. 03. 009. 000003	48V charger	1	
2	3. 03. 009. 000013	Charger plug A	1	
3	3. 03. 009. 000014	Charger receptacle A	1	
4	3. 03. 006. 000030	Torch Battery 8V	6	
5	3. 01. 003. 070013	Battery J-bolt	2	6mm
6	3. 02. 014. 000148	Battery retain clip E	2	
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				