



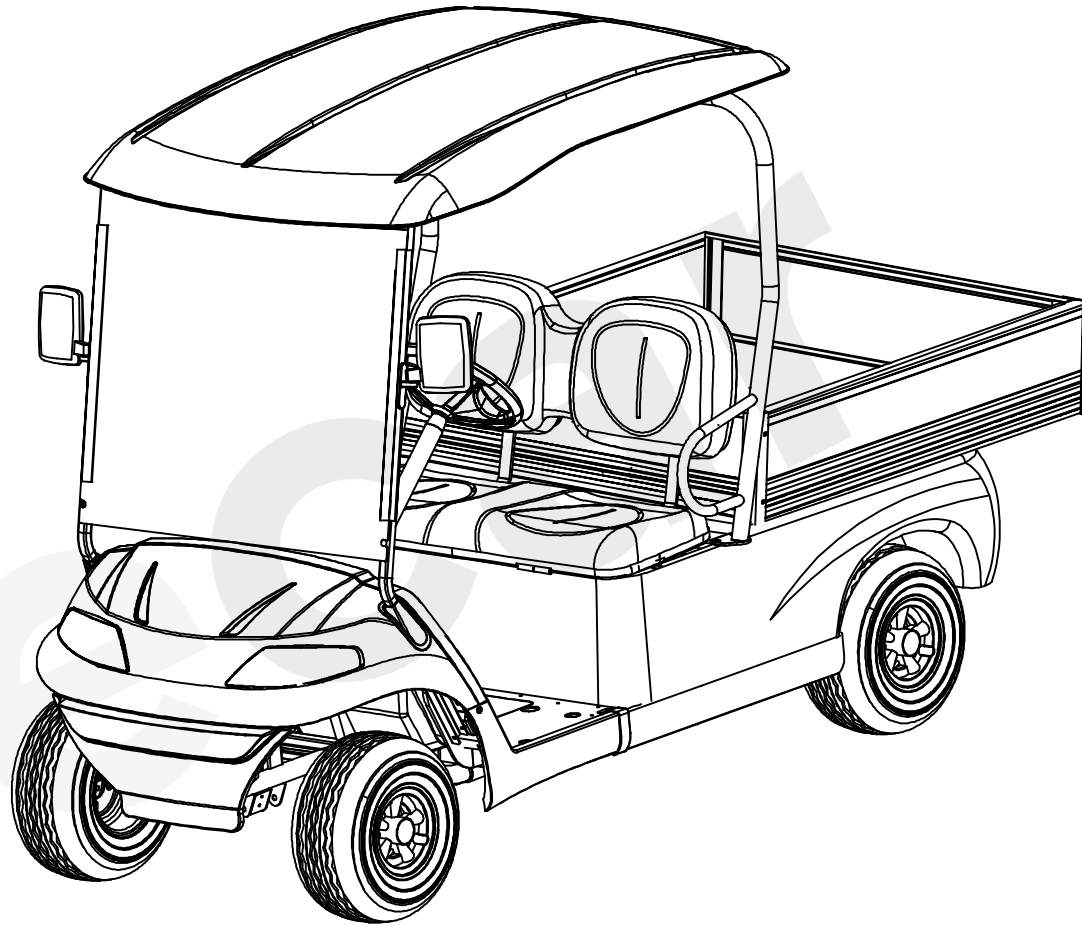


A627.H2.G Spare Parts

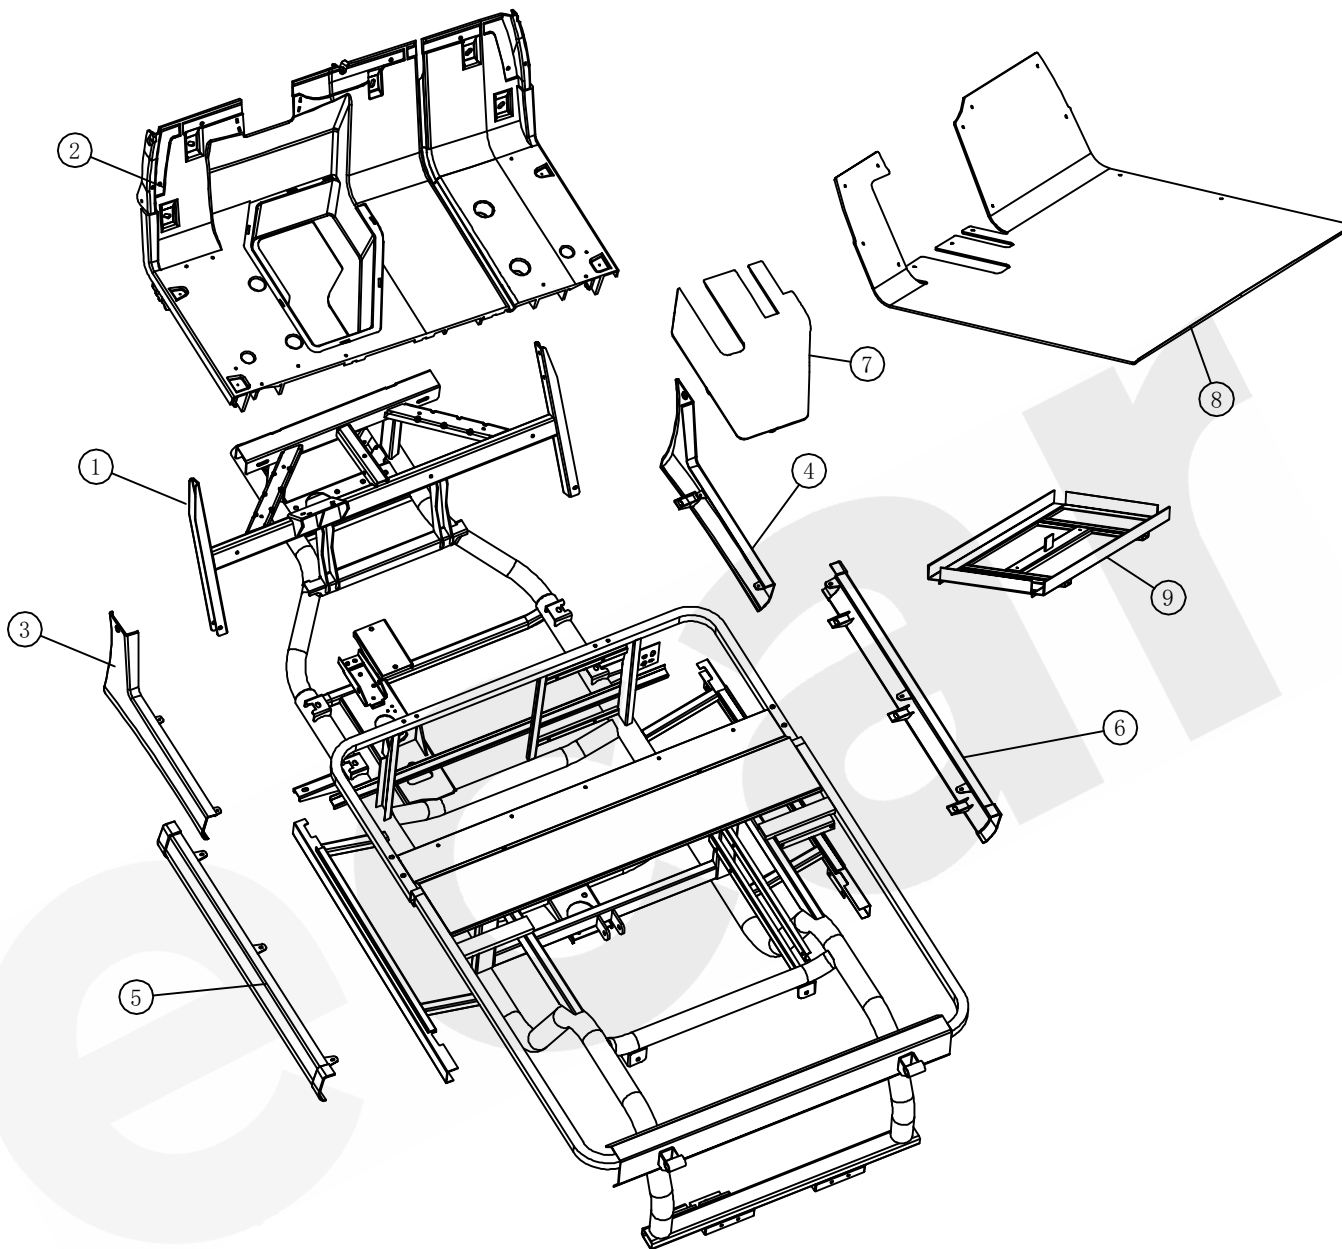


LT-A627.H2 Chassis frame

NO:	Code	Name	QTY	Remark
1	2. 01. 007. 800093	A627.H2 chassis frame	1	
2	3. 02. 011. 300080	A627 baseplate -B	1	
3	3. 02. 011. 300069	A627 Side Sill--L	1	
4	3. 02. 011. 300070	A627 Side Sill--R	1	
5	3. 02. 011. 300085	A627 middle Side Sill -R	1	
6	3. 02. 011. 300084	A627 middle Side Sill -L	1	
7	3. 02. 011. 300081	Cover Plate	1	
8	2. 02. 007. 010033	A627.2 floor plate	1	
9	2. 01. 007. 800114	A627.6 battery holder	1	
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

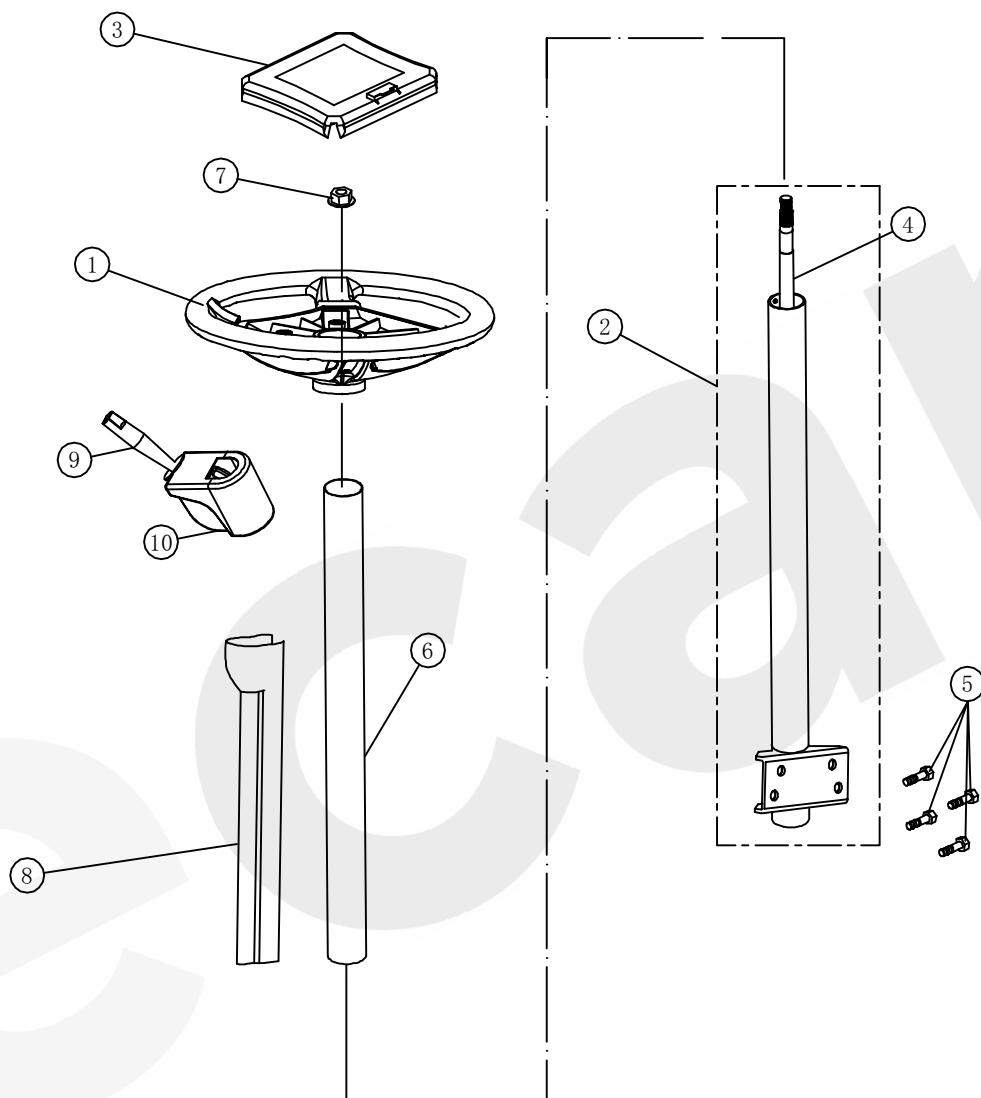


LT-A627.H2 steering system 1

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 070001	steering wheel	1	
2	3. 01. 004. 070080	A627 Steering colum	1	
3	3. 02. 014. 000038	Card Holder	1	
4	3. 01. 004. 070018	rod steering	1	
5	3. 01. 003. 060006	screw	4	8*20
6	3. 02. 014. 000255	A627 Column cover	1	595mm
7	3. 01. 003. 100017	nut	1	14
8	3. 02. 011. 300051	A627 Steering switch wire cover	1	450mm
9	3. 03. 011. 000025	Single arm combination switch	1	
10	3. 03. 011. 000027	Single arm combination switch holder	1	
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

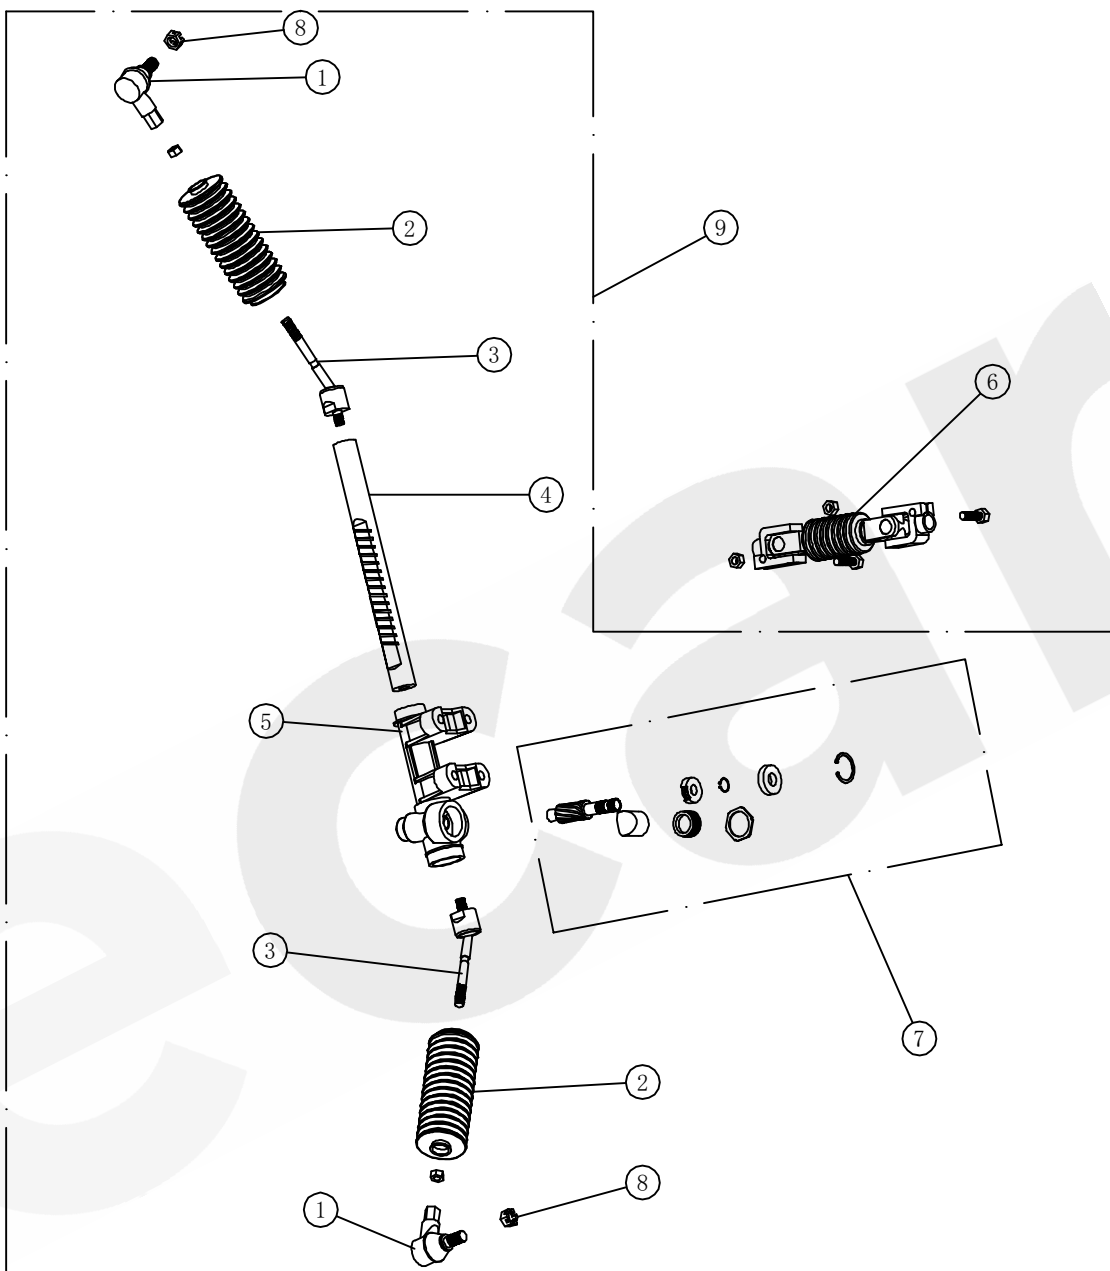


LT-A627.H2 steering system 2

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 070011	ball joint	2	
2	3. 02. 014. 000032	dust proof rubber boot	2	
3	3. 01. 004. 070010	inner ball joint	2	
4	3. 01. 004. 070093	A627 steering gear rack	1	
5	3. 01. 004. 070013	steering box housing	1	
6	3. 01. 004. 900041	universal joint	1	
7	3. 01. 004. 070012	pinion assy	1	
8	3. 01. 003. 100016	screw	2	12mm
9	3. 01. 004. 070072	Steering assy 136	1	
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

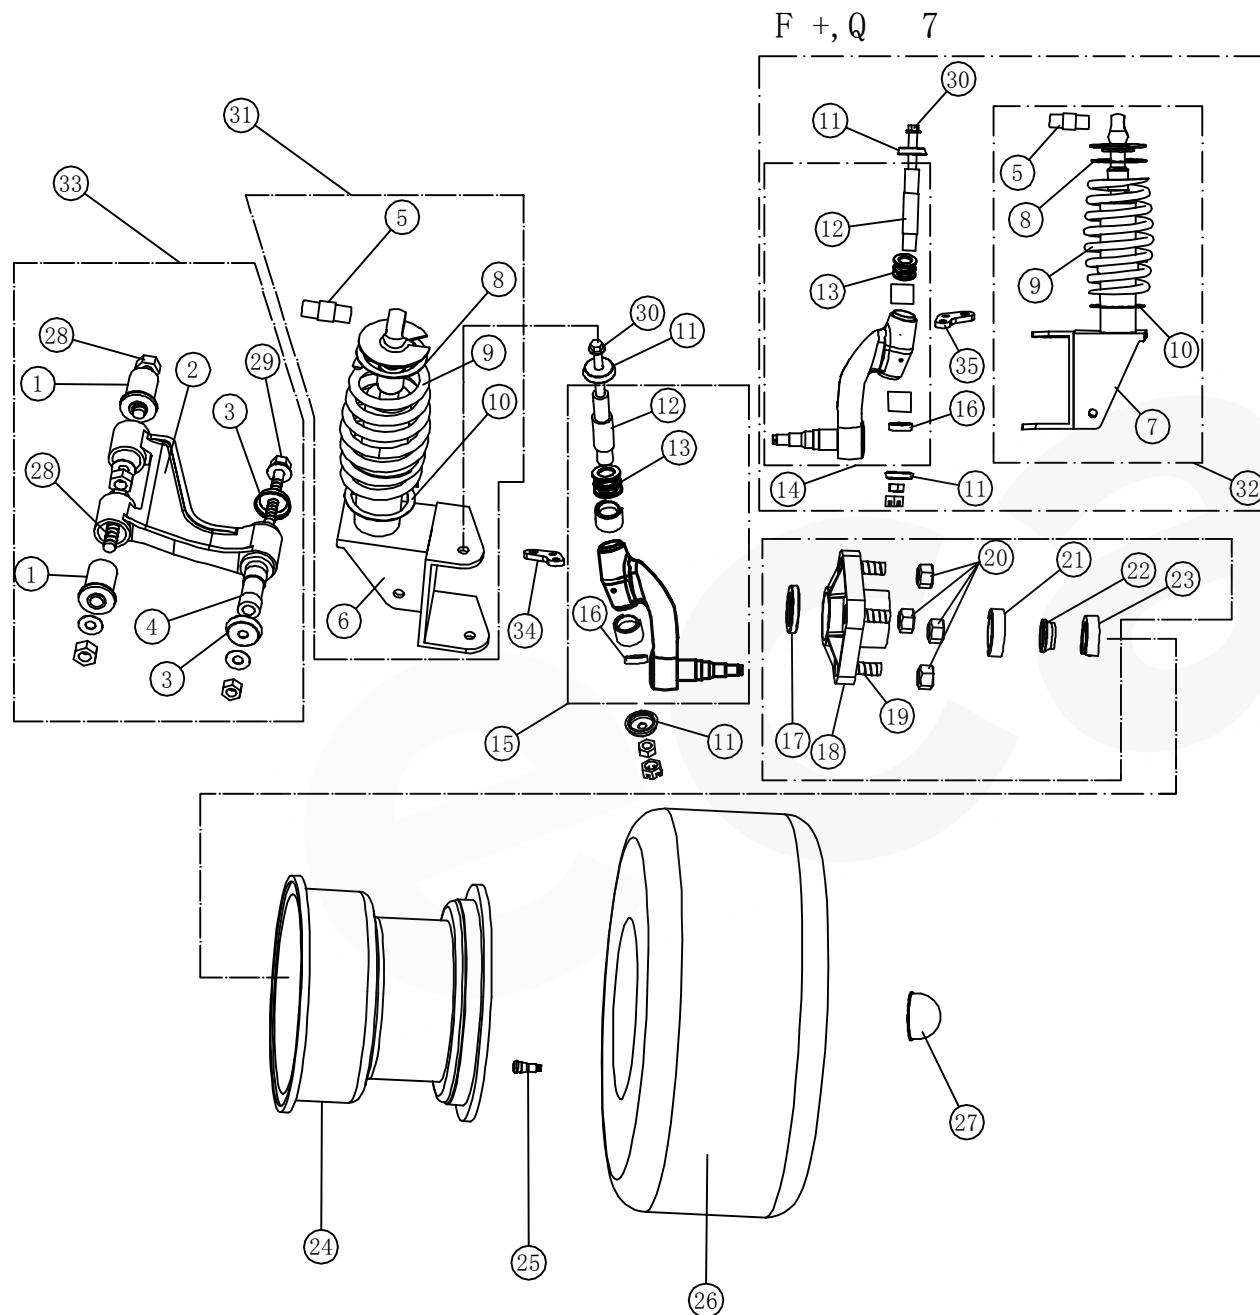

LT-A627.2G front suspension 1

NO:	Code	Name	QTY	Remark
1	3.01.004.070021	Bush	4	Ø13x50mm
2	3.01.005.010008	arm	2	
3	3.01.004.070024	arm seal	4	Ø12x40.8
4	3.01.004.070023	arm shaft	2	
5	3.01.004.080004	front shock absorber up bush	2	
6	3.01.004.080002	front shock absorber/L	1	
7	3.01.004.080001	front shock absorber/R	1	
8	3.02.014.000081	front shock absorber up rubber	2	A-6-001
9	3.01.004.080017	A8 front spring	2	A-8-001
10	3.02.014.000082	Front Shock Absorber Down Rubber	2	45.5mm 74mm
11	3.02.014.000110	Knuckle Shaft Seal/big	4	
12	3.01.004.070022	Main Washer	2	
13	3.01.004.900019	Bearing	2	51103
14	3.01.004.070082	lifted knuckle/left	1	
15	3.01.004.070083	lifted knuckle/right	1	
16	3.01.004.090013	Bearing	2	MK120/20
17	3.01.004.090005	Bearing Base Seal	2	30x47x7
18	3.01.005.010009	Bearing Base	2	
19	3.01.003.070006	C Wheel Screw	8	(1/2)
20	3.01.003.100045	C Wheel Nut	8	(1/2)
21	3.01.004.090001	Bearing 6005	2	
22	3.01.004.090004	Bearing Cover	2	
23	3.01.004.090002	Bearing6204	2	
24	3.01.004.020011	aluminum rim LD-A0721270	2	
25	3.02.001.000021	Valve	2	TR414

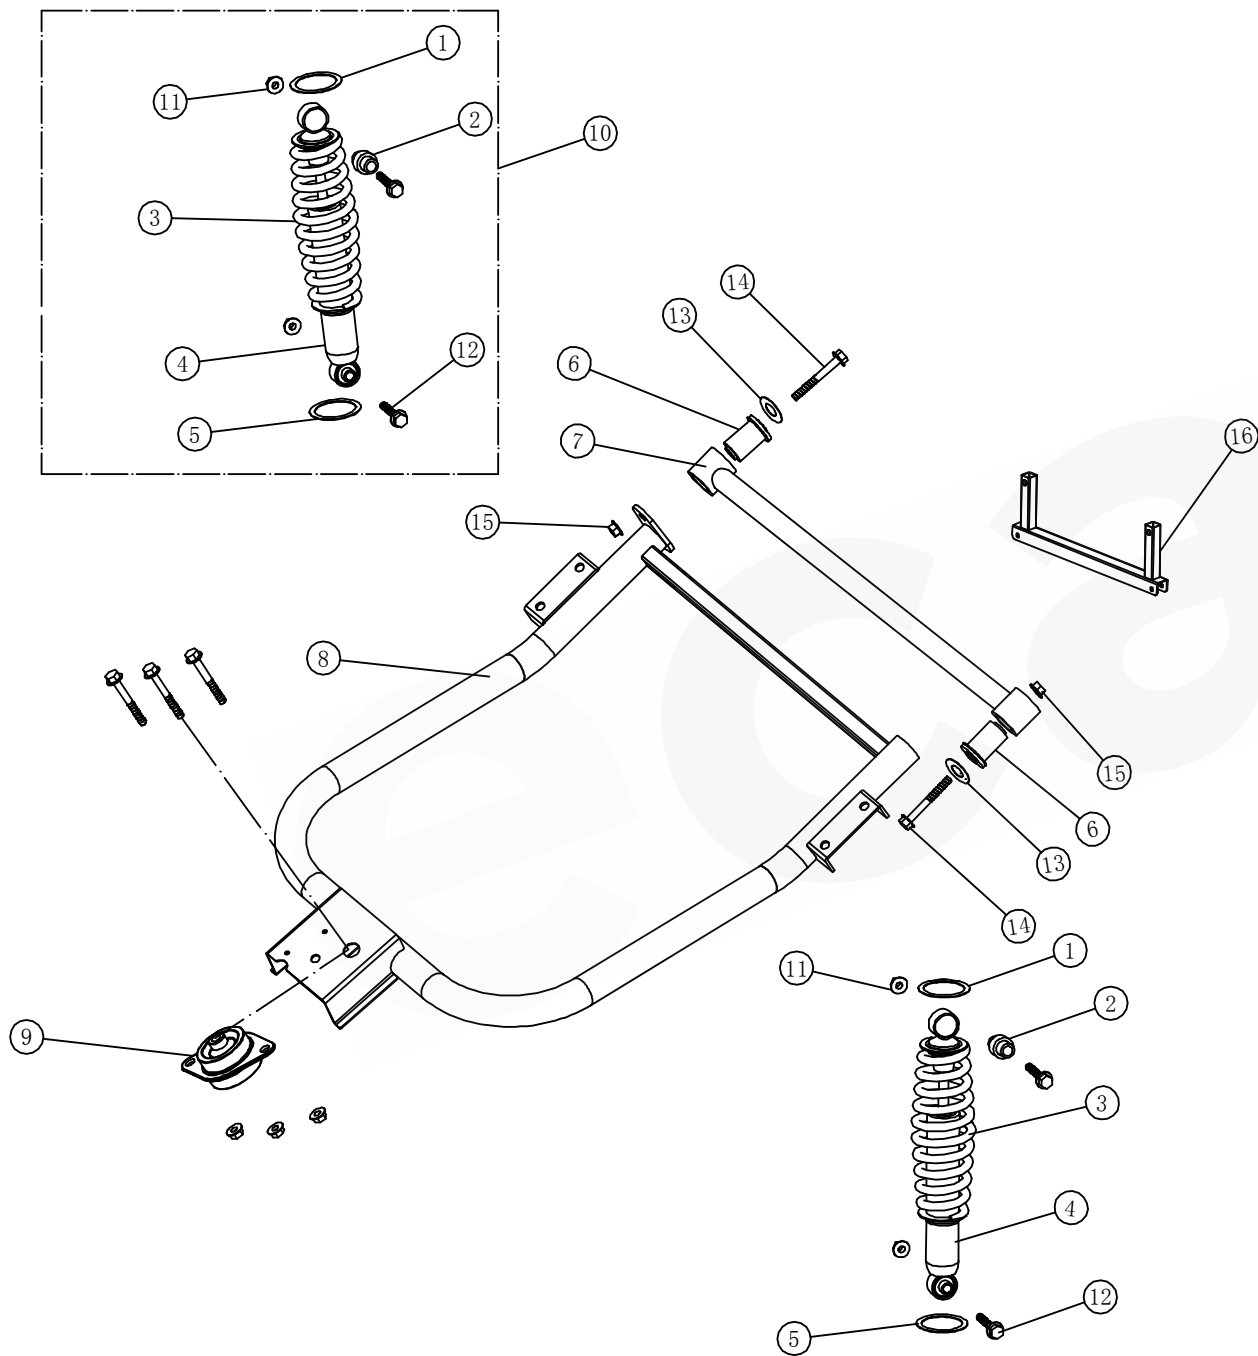



LT-A627.2G rear suspension system

NO:	Code	Name	QTY	Remark
1	3.02.014.000053	Rear Shock Absorb Up Rubber Rim	2	44mm 55mm
2	3.01.004.080007	Rear Shock Absorb Bush	2	
3	3.01.004.080018	A11 Rear Spring	2	A-8-002
4	3.01.004.080005	Rear Shock Absorber	2	
5	3.02.014.000054	Rear Shock Absorb Low Rubber Rim	2	44mm 55mm
6	3.01.004.070021	Suspension Bush	1	φ13*50mm
7	2.01.007.800003	A627 Rear Balancing Pole	1	
8	2.01.007.800047	Transaxle Bend pipe assy	1	
9	3.02.014.000069	Shock Absorb Rubber	1	
10	2.03.001.000022	A11 Rear Shock Absorber Assy	2	
11	3.01.003.100015	Nut	4	10mm
12	3.01.003.060028	Screw	4	10x55
13	3.01.003.080022	Gasket	2	2.0x20x37
14	3.01.003.060037	Screw	2	12x70
15	3.01.003.100016	Nut	2	12mm
16	2.01.007.800048	rear shock absorb lifted stay	1	
17				
18				
19				
20				
21				
22				
23				
24				
25				

LT-A627.H2 transaxle system


NO:	Code	Name	QTY	Remark
1	3. 02. 001. 000054	A627 wheel cover	2	
2	3. 02. 001. 000009	Carlisle tire	2	18*8. 5-8 (6P)
3	3. 02. 001. 000021	valve	2	TR414
4	3. 01. 004. 020002	wheel rim(white)	2	8*7
5	3. 01. 005. 010001	C brake drum	2	
6	3. 01. 003. 100038	C brake drum nut	8	
7	3. 01. 004. 050001	brake/R	1	
8	3. 01. 004. 010065	A627 transaxle	1	
9	3. 02. 014. 000094	input axle seal	1	
10	2. 01. 001. 010258	input axle gear gasket	1	
11	3. 01. 006. 000115	input axle spring	1	
12	2. 01. 001. 010259	input axle round gasket	1	
13	3. 01. 004. 050002	brake/L	1	
14	3. 01. 003. 070005	C fender screw	8	
15	3. 01. 003. 100039	C fender nut	8	
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

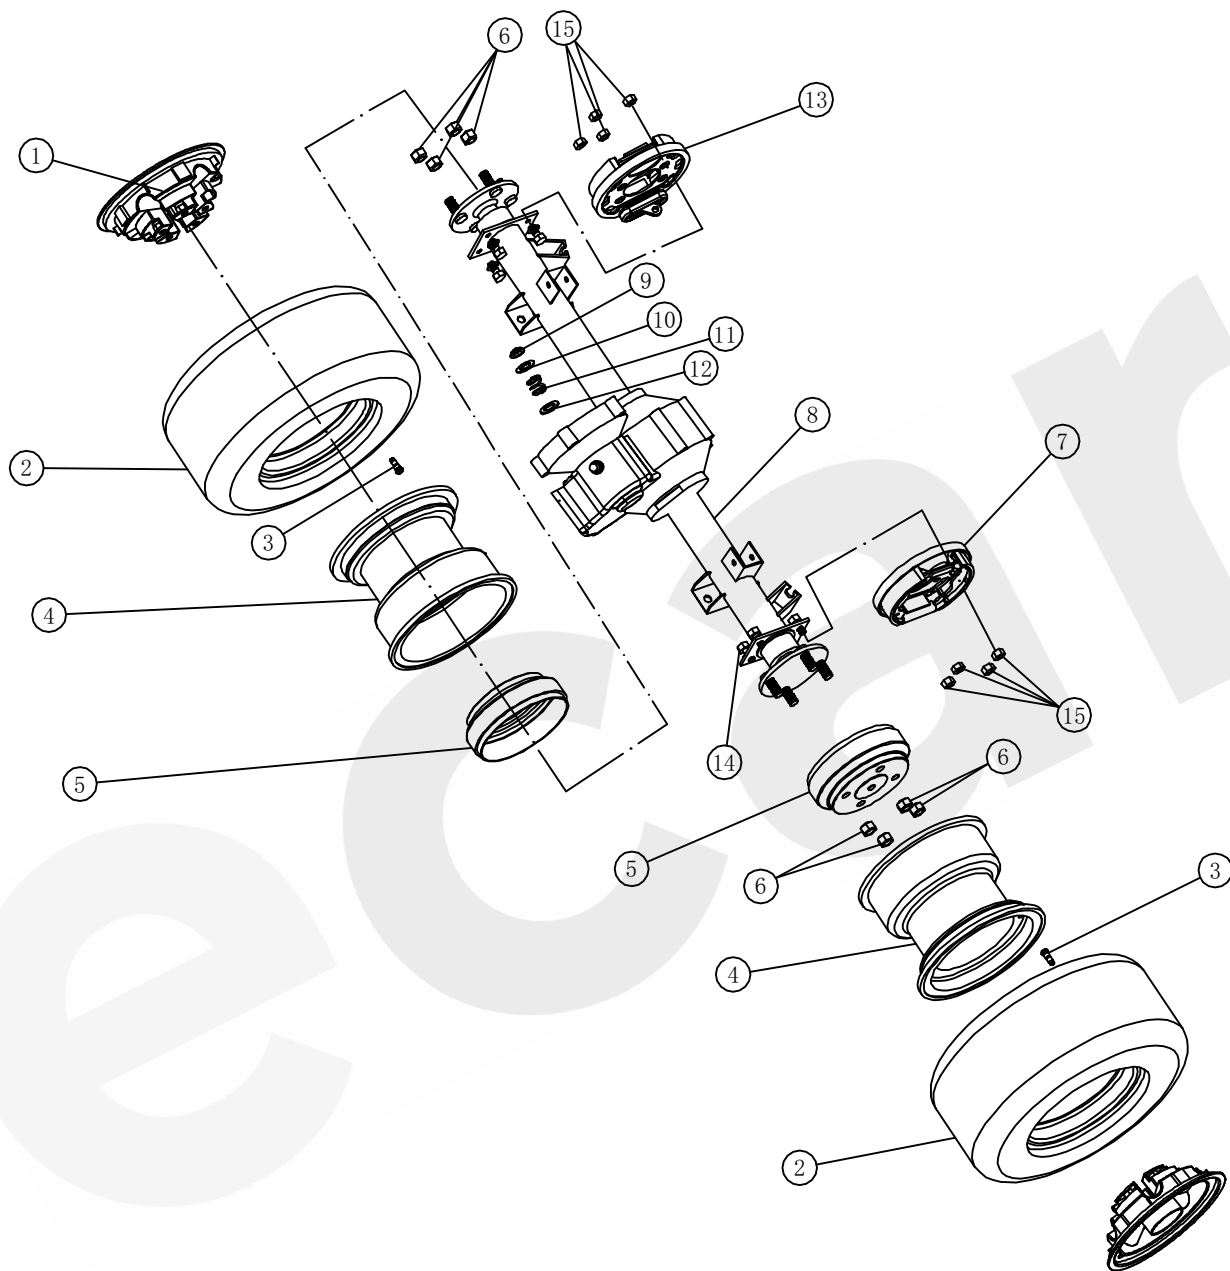

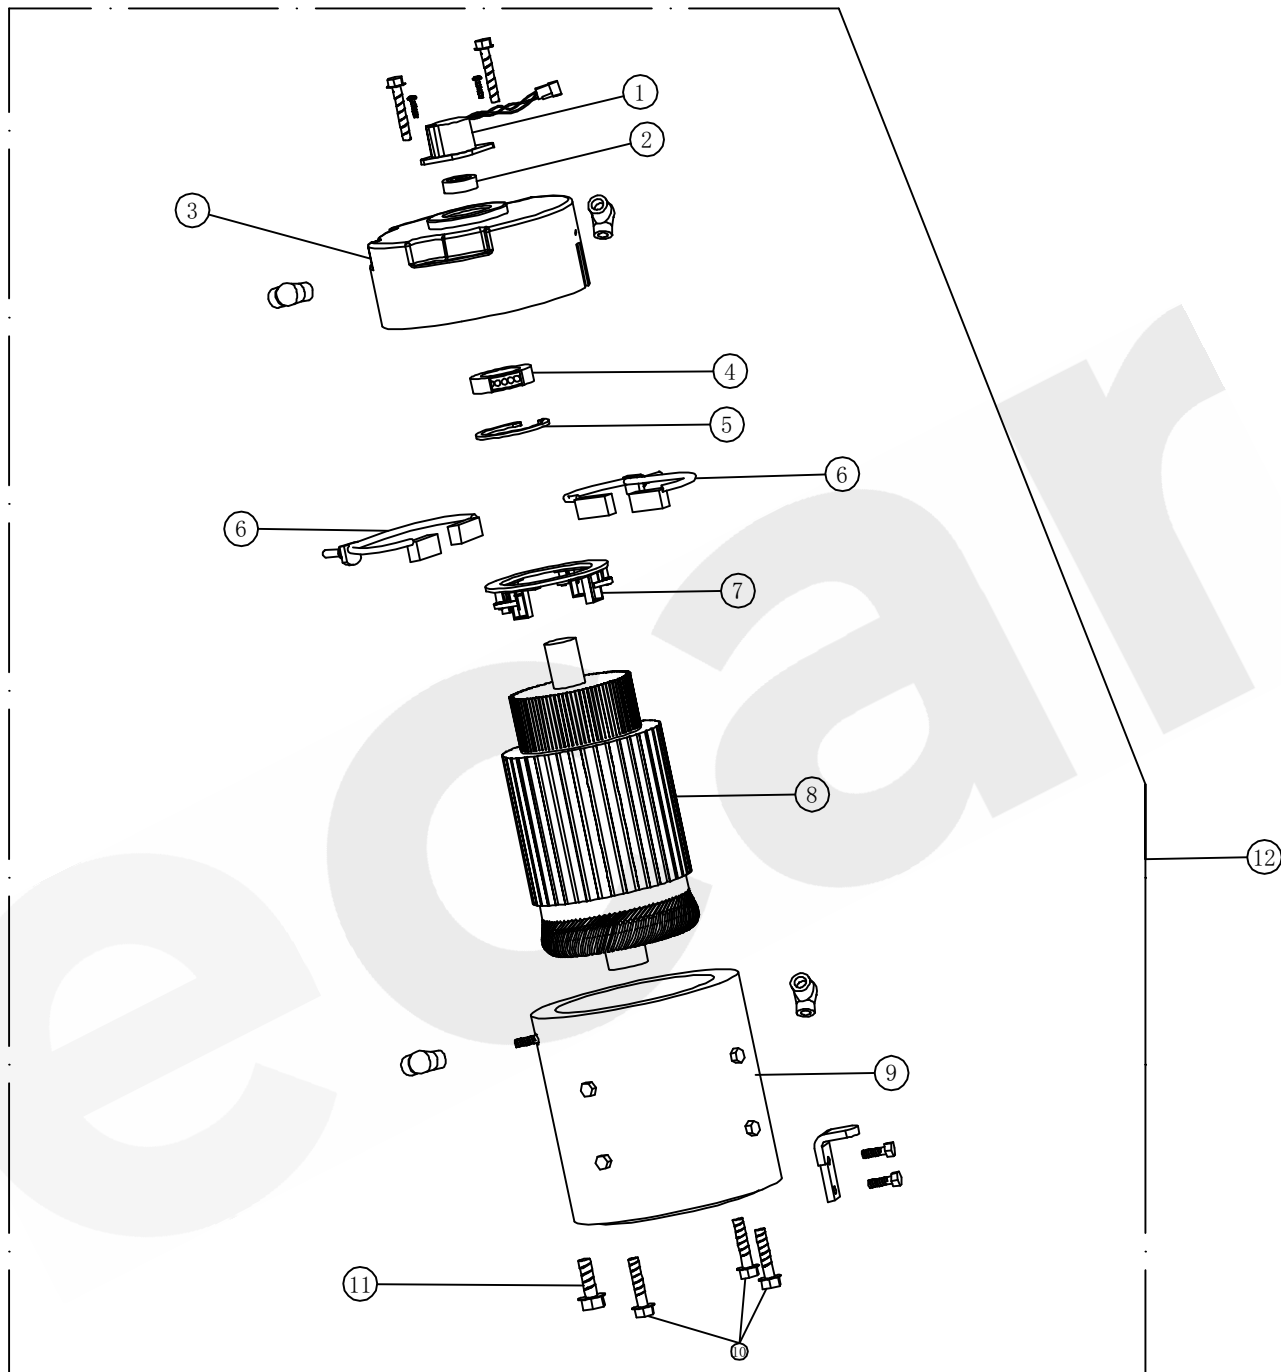


LT-A627.H2 DC motor system

NO:	Code	Name	QTY	Remark
1	3. 03. 007. 000037	speed sensor	1	
2	3. 03. 007. 000052	magnetic ring	1	
3	3. 03. 007. 000012	motor cover	1	
4	3. 01. 004. 090003	bearing	1	6205
5	3. 01. 003. 070014	retainer clip	1	
6	3. 03. 007. 000005	ADC motor carbon brush	4	
7	3. 01. 006. 000119	carbon brush holder	1	
8	3. 03. 007. 000013	amature	1	
9	3. 03. 007. 000011	stator	1	
10	3. 01. 003. 070015	screw	3	1/4*50 (6mm)
11	3. 01. 003. 070016	screw	1	8mm
12	3. 03. 007. 000006	ADC DC motor48V-3.7KW / Import	1	
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

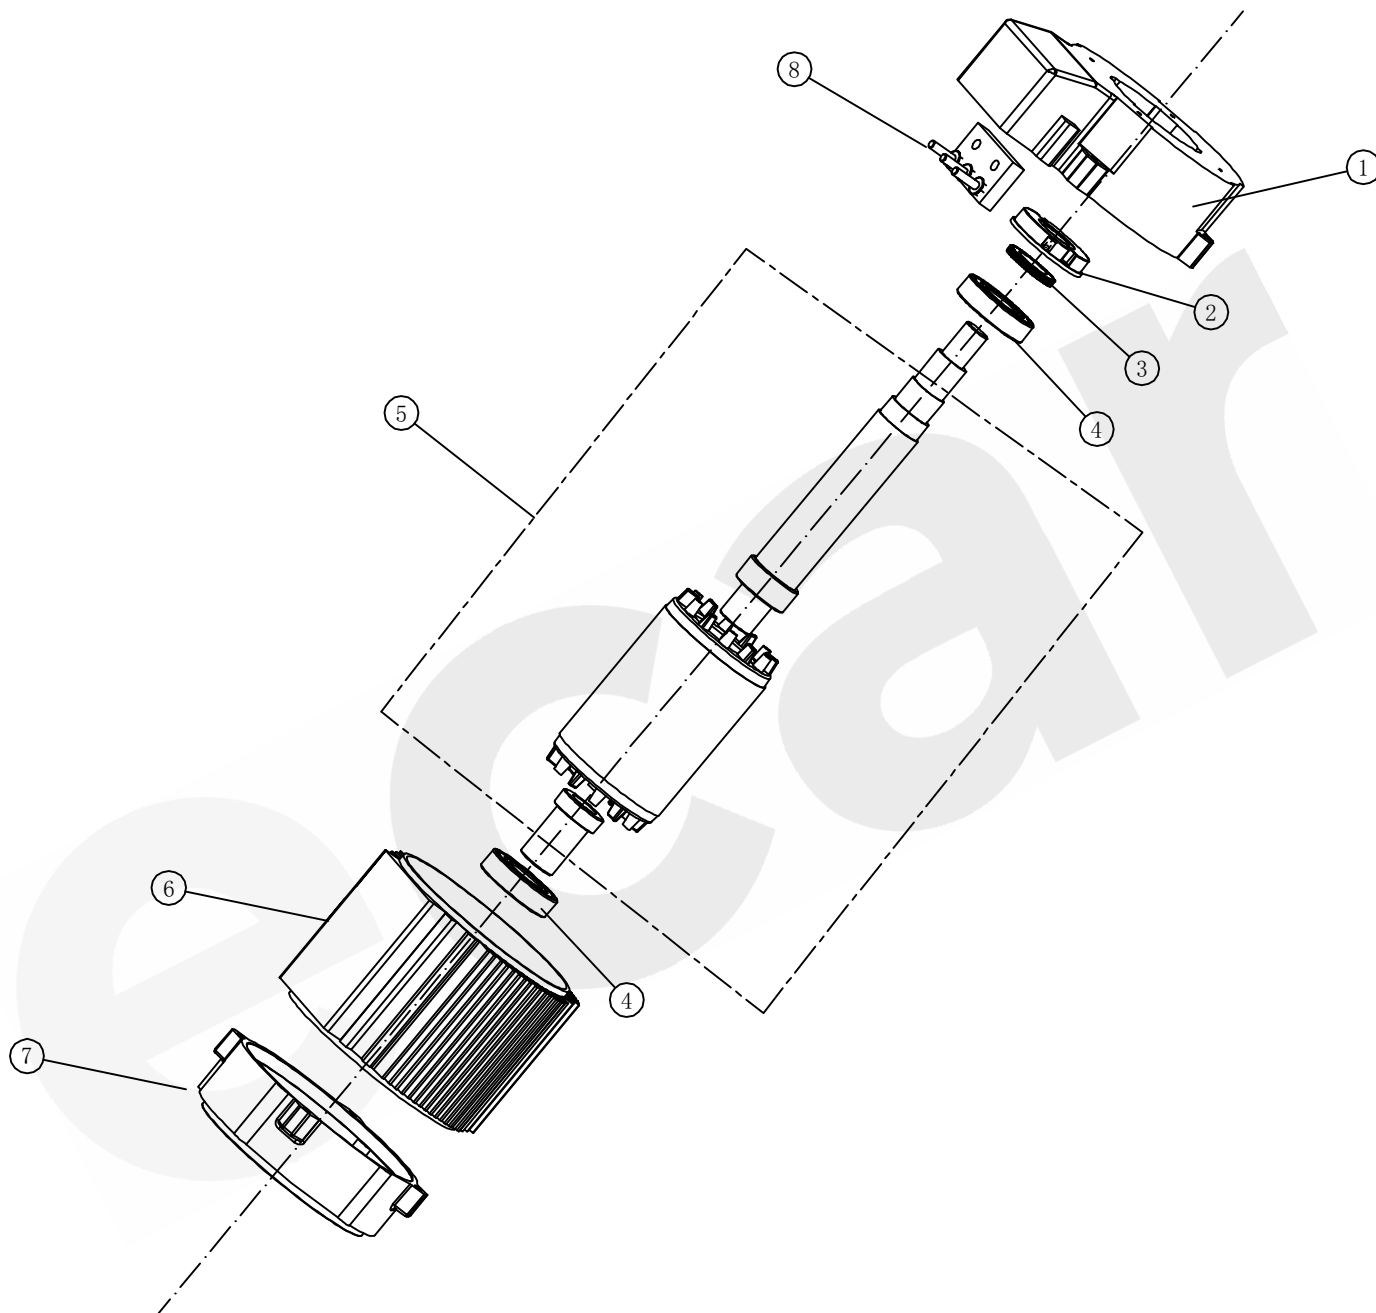


LT-A627.H2 AC motor system

NO:	Code	Name	QTY	Remark
1	3. 01. 006. 000393	rear cover	1	
2	3. 03. 017. 000077	position coder	1	
3	3. 01. 006. 900116	pulse wheel	1	
4	3. 01. 004. 900039	bearing	2	6206ZZ
5	3. 03. 007. 000083	amature	1	
6	3. 03. 007. 000084	stator	1	
7	3. 03. 007. 000086	front cover	1	
8	3. 01. 006. 000404	Motor Cable Borard	1	
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

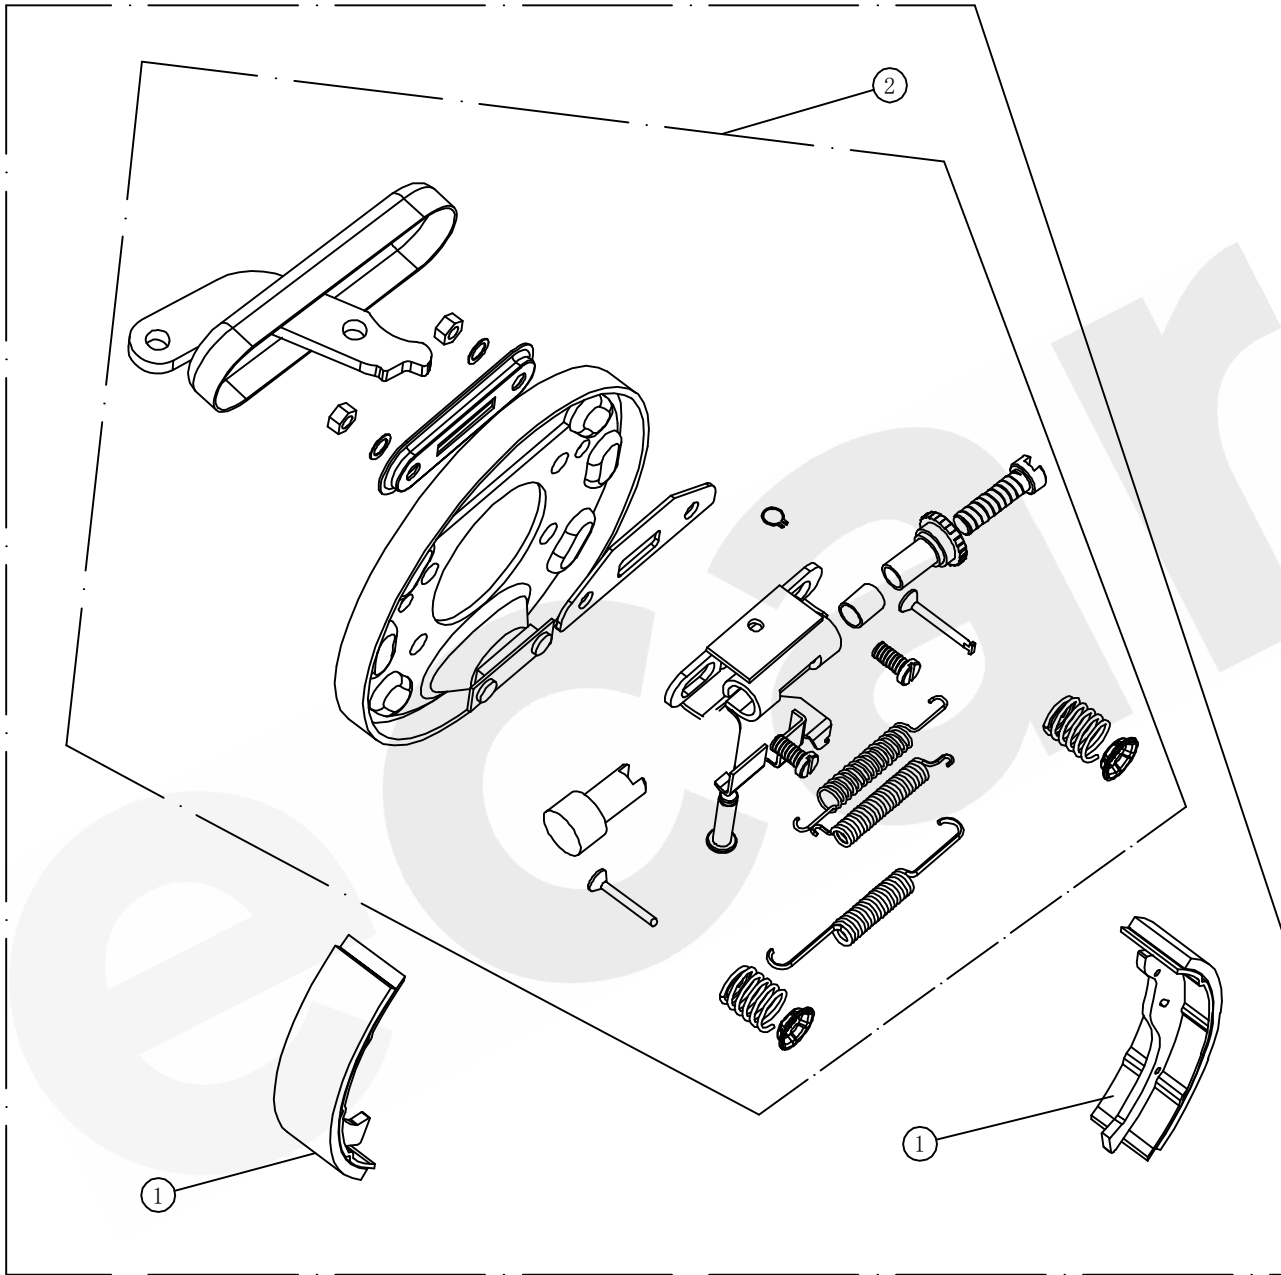


LT-A627.H2 left brake

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 050049	E brake shoe	2	
2	4. 03. 001. 000111	brake repair kit	1	
3	3. 01. 004. 050002	brake assy/L	1	
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

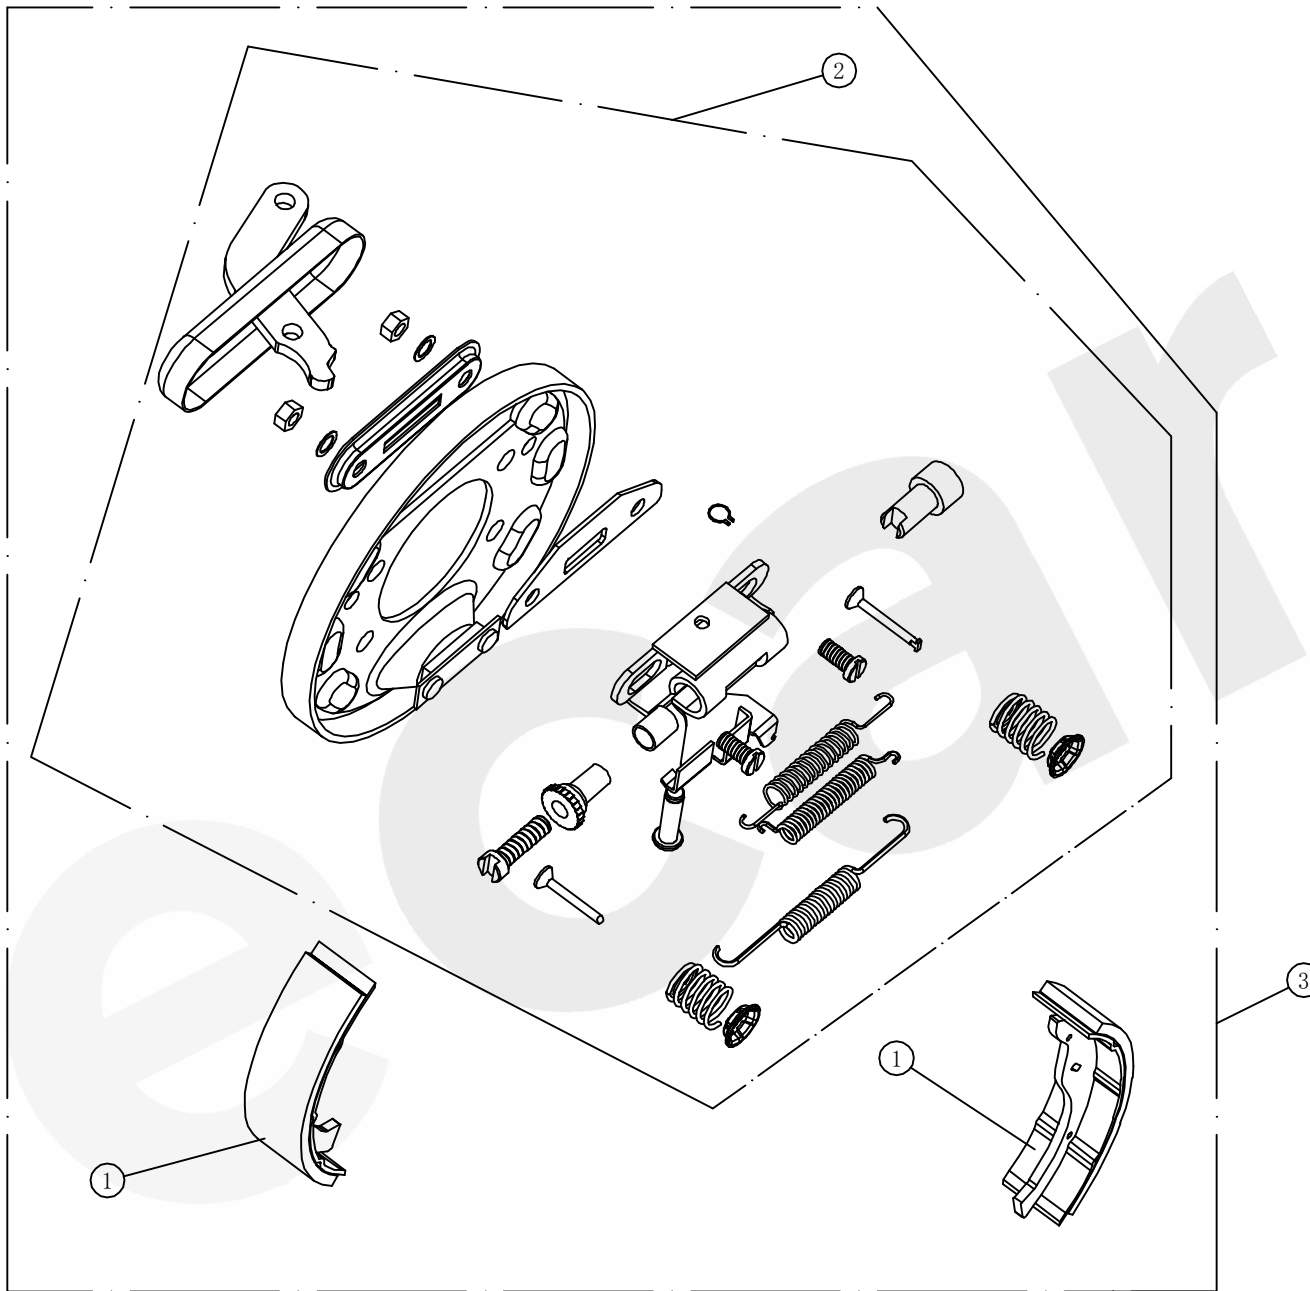


LT-A627.H2 right brake

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 050049	E brake shoe	2	
2	4. 03. 001. 000111	brake repair kit	1	
3	3. 01. 004. 050001	brake assy/R	1	
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

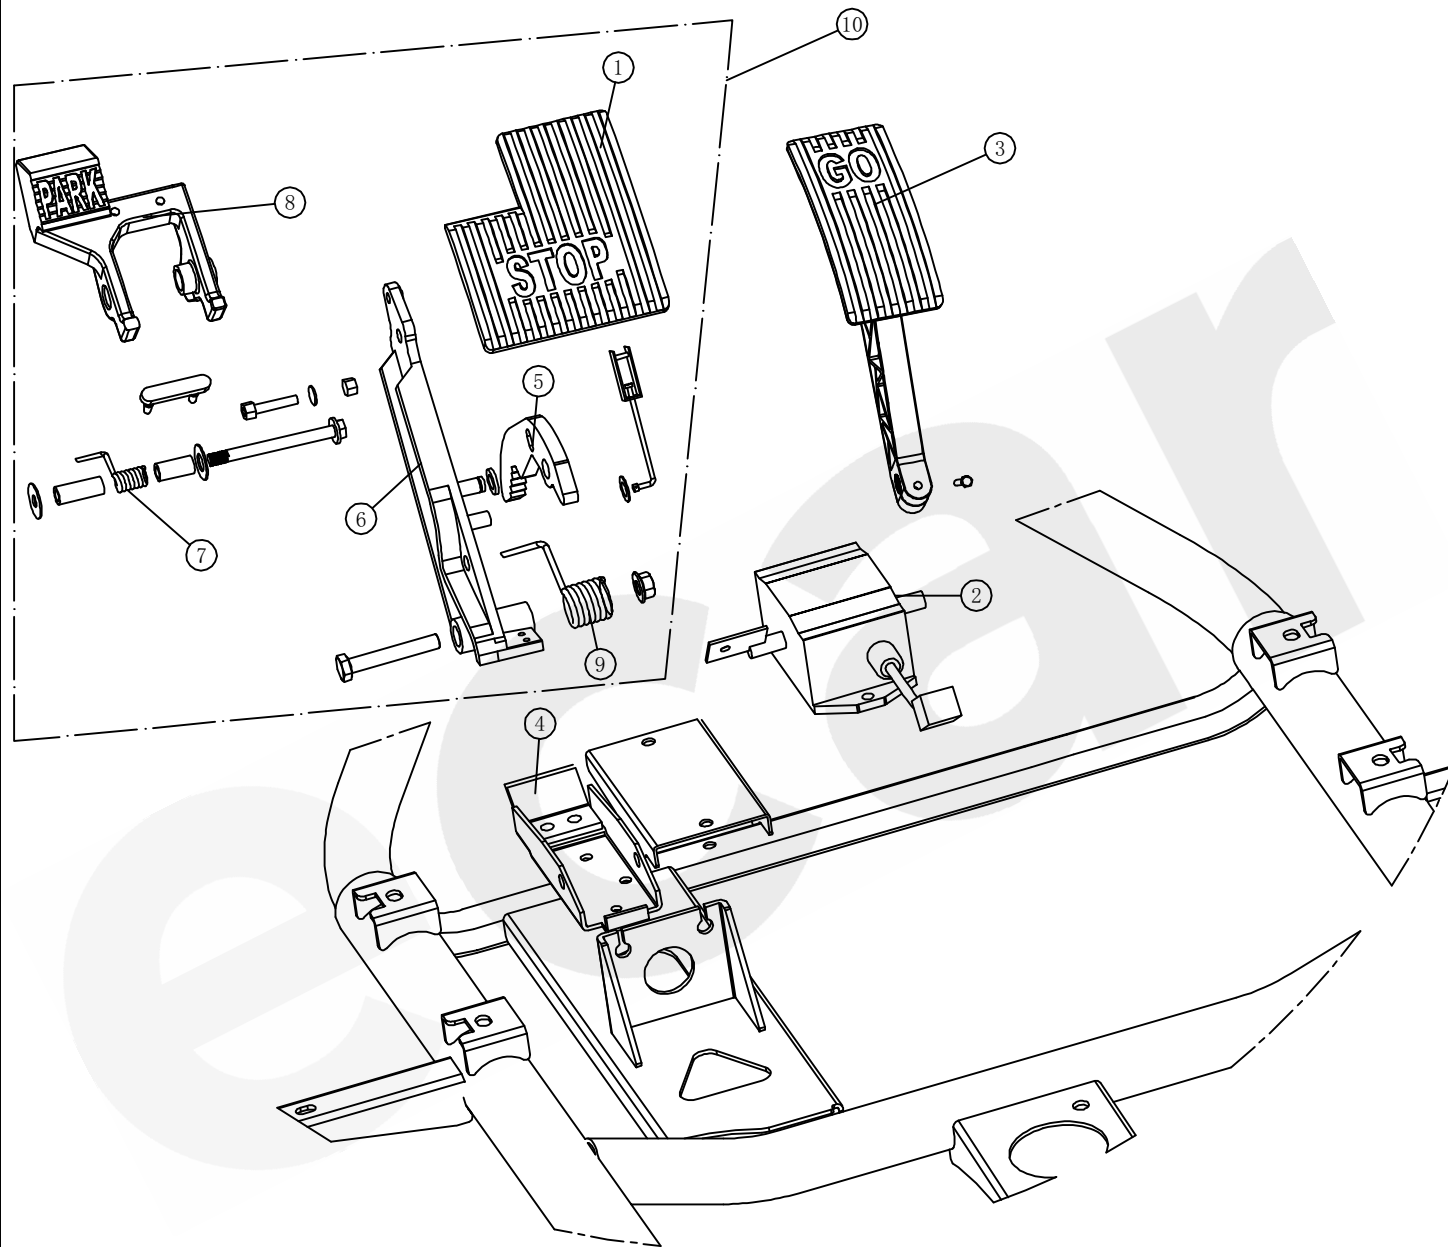


LT-A627.H2 brake system

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 050088	brake pedal	1	
2	3. 03. 005. 000001	accelerator Hall-A	1	Curtis controller
	3. 03. 005. 000009	resistance accelerator -3	1	Toyota controller
3	3. 01. 004. 900025	accelerator pedal assy	1	
4	3. 01. 004. 050033	brake pedal panel	1	
5	3. 02. 014. 200010	brake hook	1	
6	3. 01. 004. 050040	brake pedal support	1	
7	3. 01. 004. 050048	parking pedal spring	1	
8	2. 01. 004. 010337	parking pedal	1	
9	2. 01. 004. 010271	brake pedal spring	1	
10	3. 01. 004. 060004	brake pedal assy	1	
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				

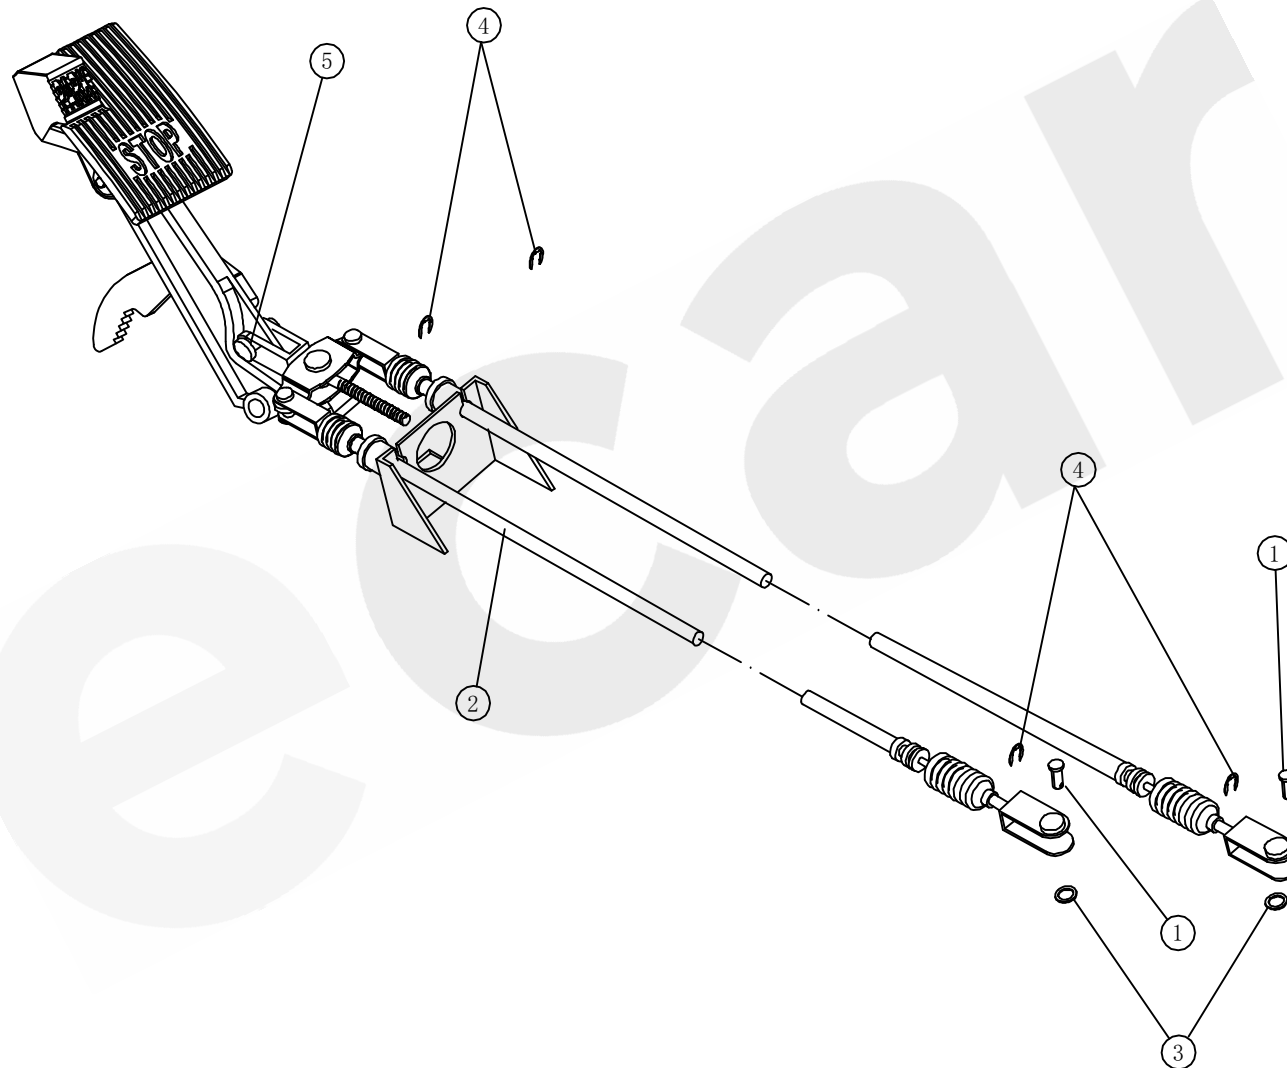


LT-A627.H2 brake pull cable

NO:	Code	Name	QTY	Remark
1	3. 01. 004. 040021	rear nail	2	8*22
2	3. 01. 004. 040007	H2 brake pull cable	1	
3	3. 01. 003. 080004	gasket	2	1. 2*8*20
4	3. 01. 003. 070036	jump ring	4	φ7
5	3. 01. 004. 040022	front nail	1	10*25
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

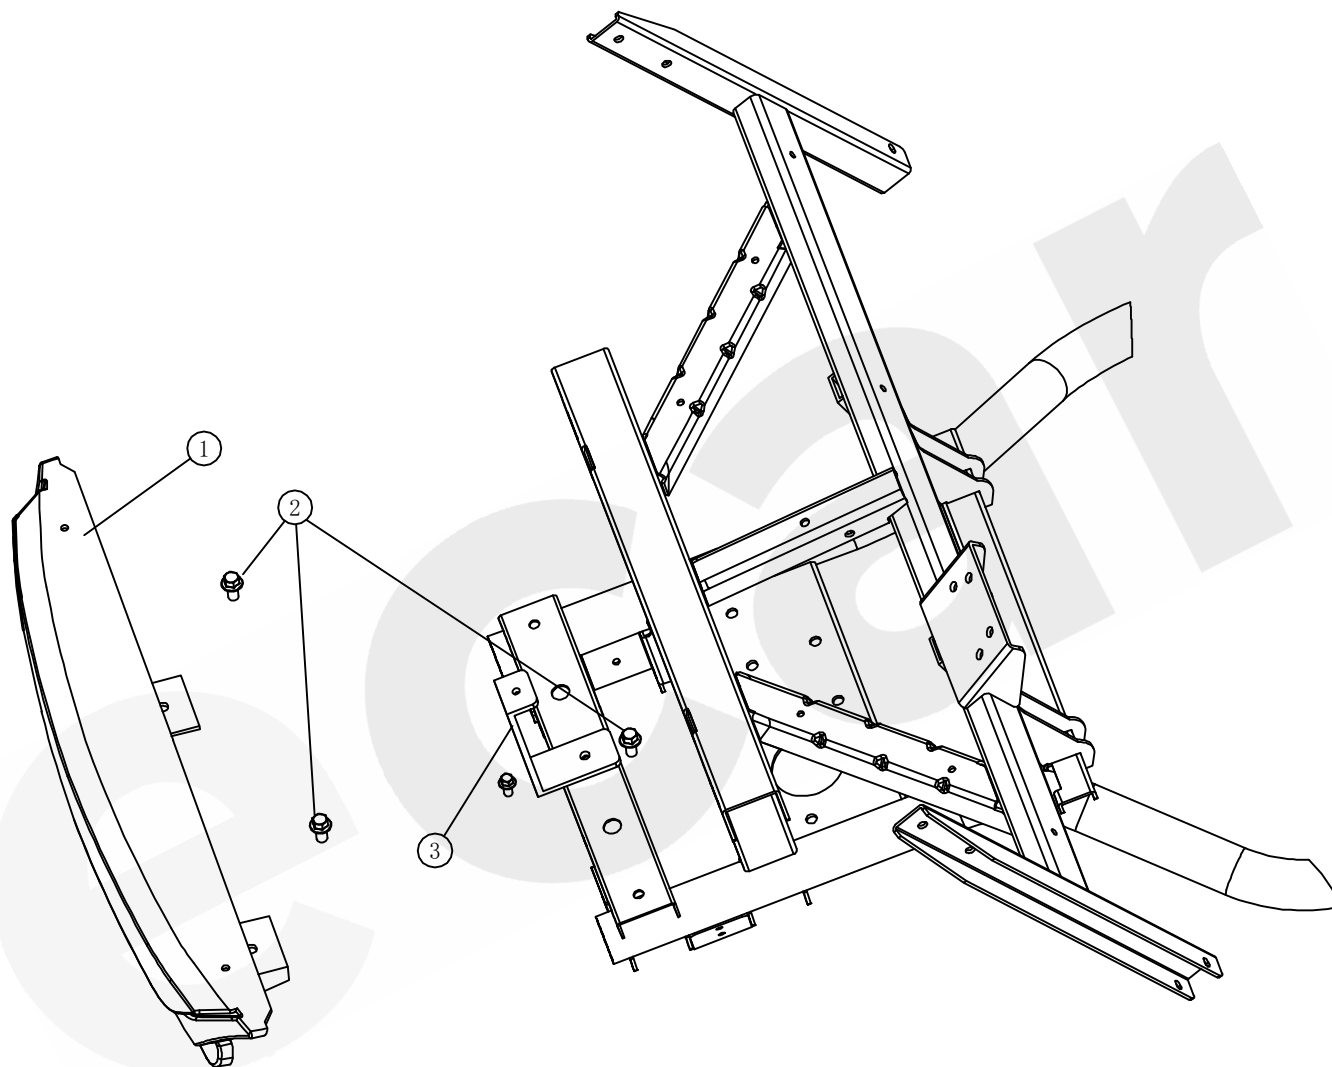


LT-A627.H2 front bumper

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300065	A627 front bumper	1	
2	3. 01. 003. 060006	screw	4	M8*20
3	2. 01. 007. 800083	A627 front bumper base	1	
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

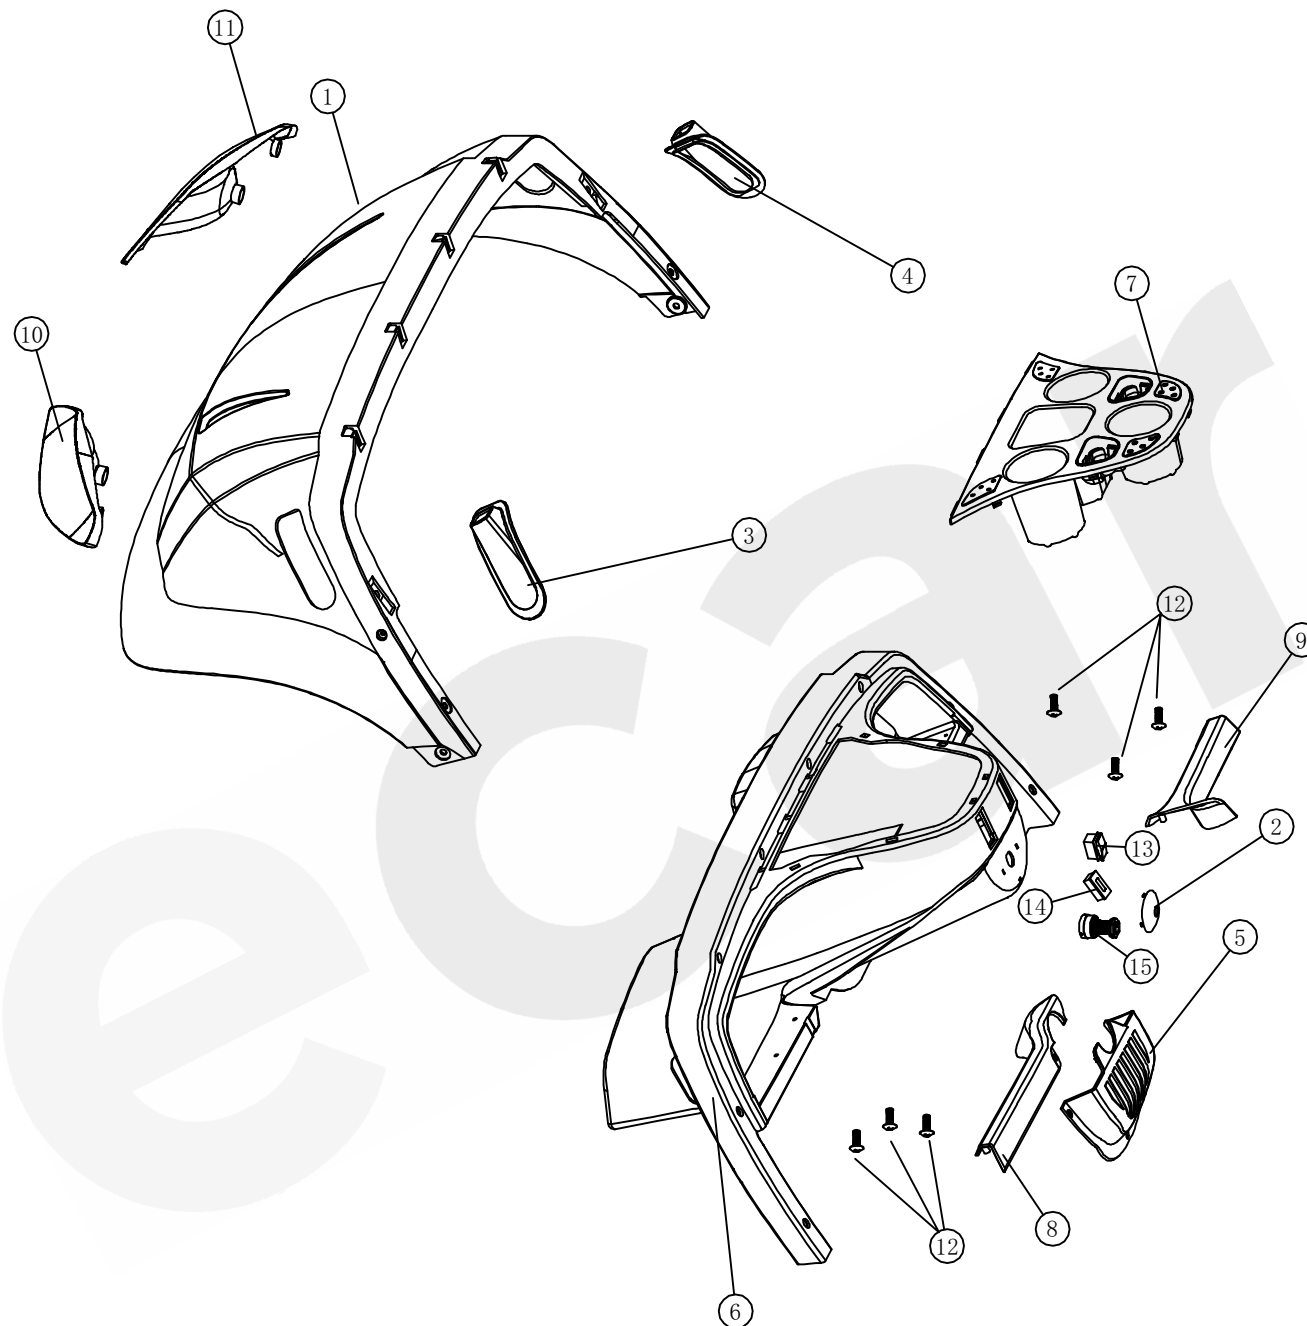


LT-A627.H2 front body cover

NO:	Code	Name	QTY	Remark
1	3. 02. 011. 300066	A627 Front Cover-B	1	
2	3. 02. 011. 300038	A627 Electric lock cover	1	
3	3. 02. 011. 300058	Front support decoration cover/ L	1	
4	3. 02. 011. 300059	Front support decoration cover/ R	1	
5	3. 02. 011. 300073	A627 steering column trim cover-B	1	
6	3. 02. 011. 300067	A627 Front dashboard-B	1	
7	3. 02. 011. 300027	A627 Cup base	1	
8	3. 02. 011. 300075	A627 Ball cabinet cover/L	1	
9	3. 02. 011. 300043	A627 Ball cabinet cover/R	1	
10	3. 03. 001. 900023	Integrated front head light/L	1	
11	3. 03. 001. 900024	Integrated front head light/R	1	
12	3. 01. 003. 110003	cross recessed flat head tapping screws	6	M5*16
13	3. 03. 002. 000006	Switch F/R	1	
14	3. 03. 011. 000007	Power indicator 48V	1	
15	3. 03. 002. 000036	S14 key switch	1	
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

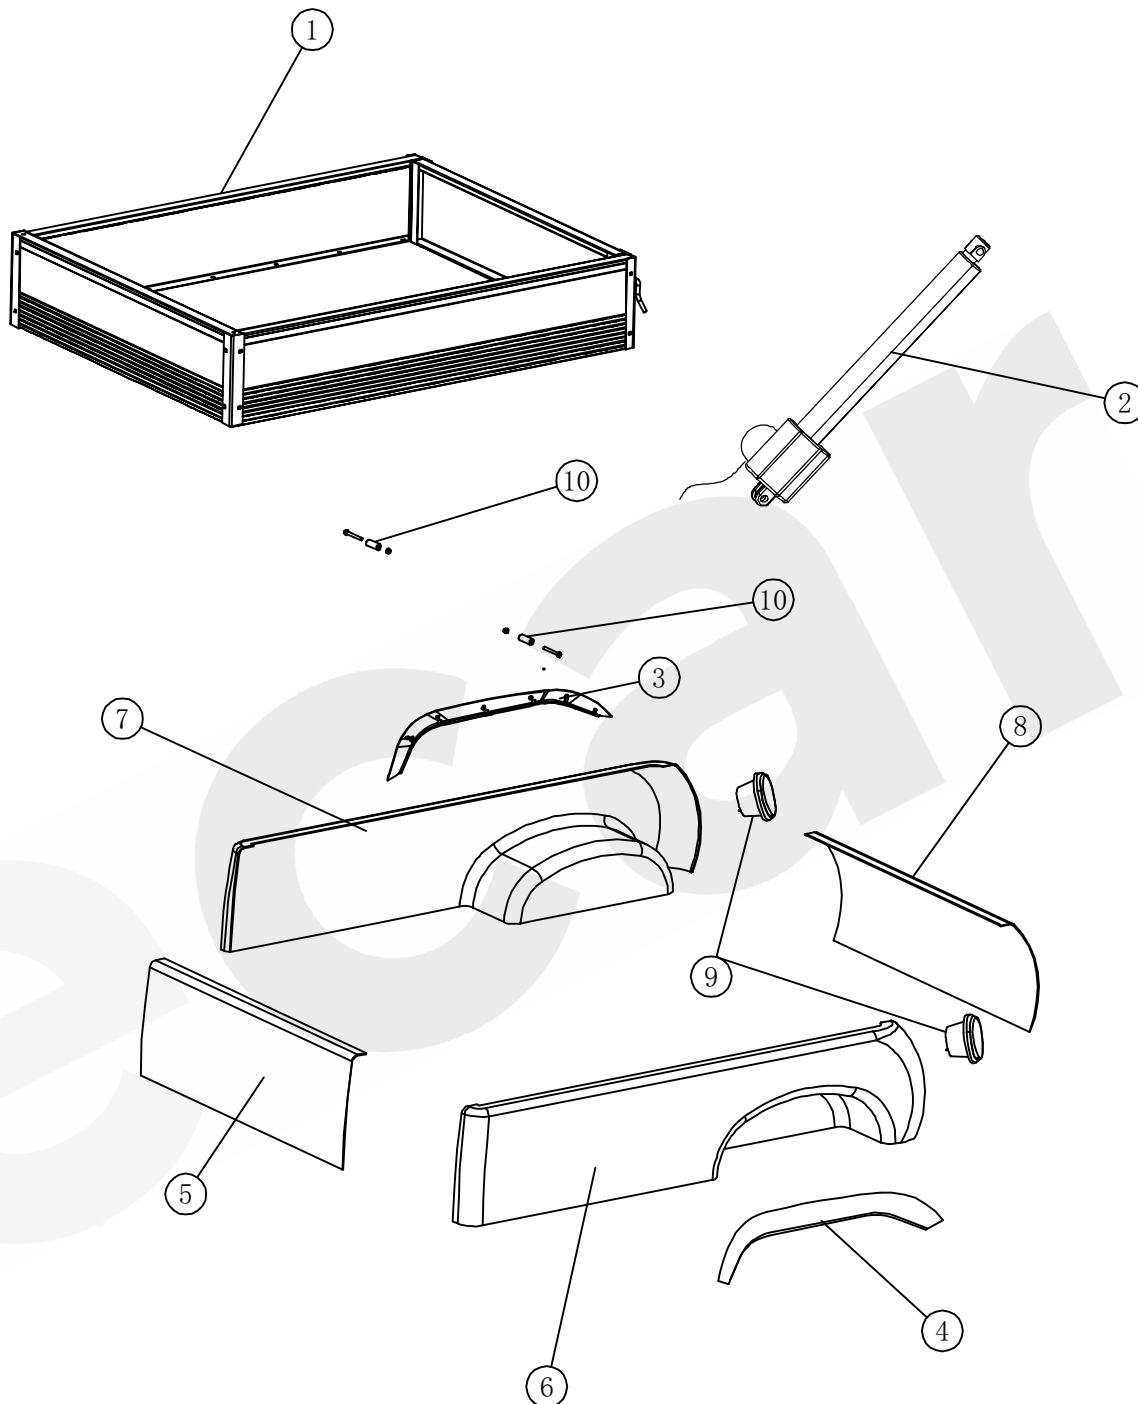


LT-A627.H2 cargo box

NO:	Code	Name	QTY	Remark
1	5. 01. 002. 300020	A627.H2 Standard configuration with Aluminum cargo box	1	
2	3. 01. 004. 100011	electrical lift rod	1	
3	3. 02. 014. 000055	rear tire decoration cover/R	1	
4	3. 02. 014. 000056	rear tire decoration cover/L	1	
5	2. 02. 001. 020019	H2 rear cover/front	1	
6	2. 02. 001. 020044	H2 rear cover/L	1	
7	2. 02. 001. 020033	H2 rear cover/R	1	
8	3. 02. 005. 020005	H2 rear cover/rear	1	
9	3. 03. 001. 000009	tail light	2	
10	3. 01. 006. 000008	collar	2	φ 20*46
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

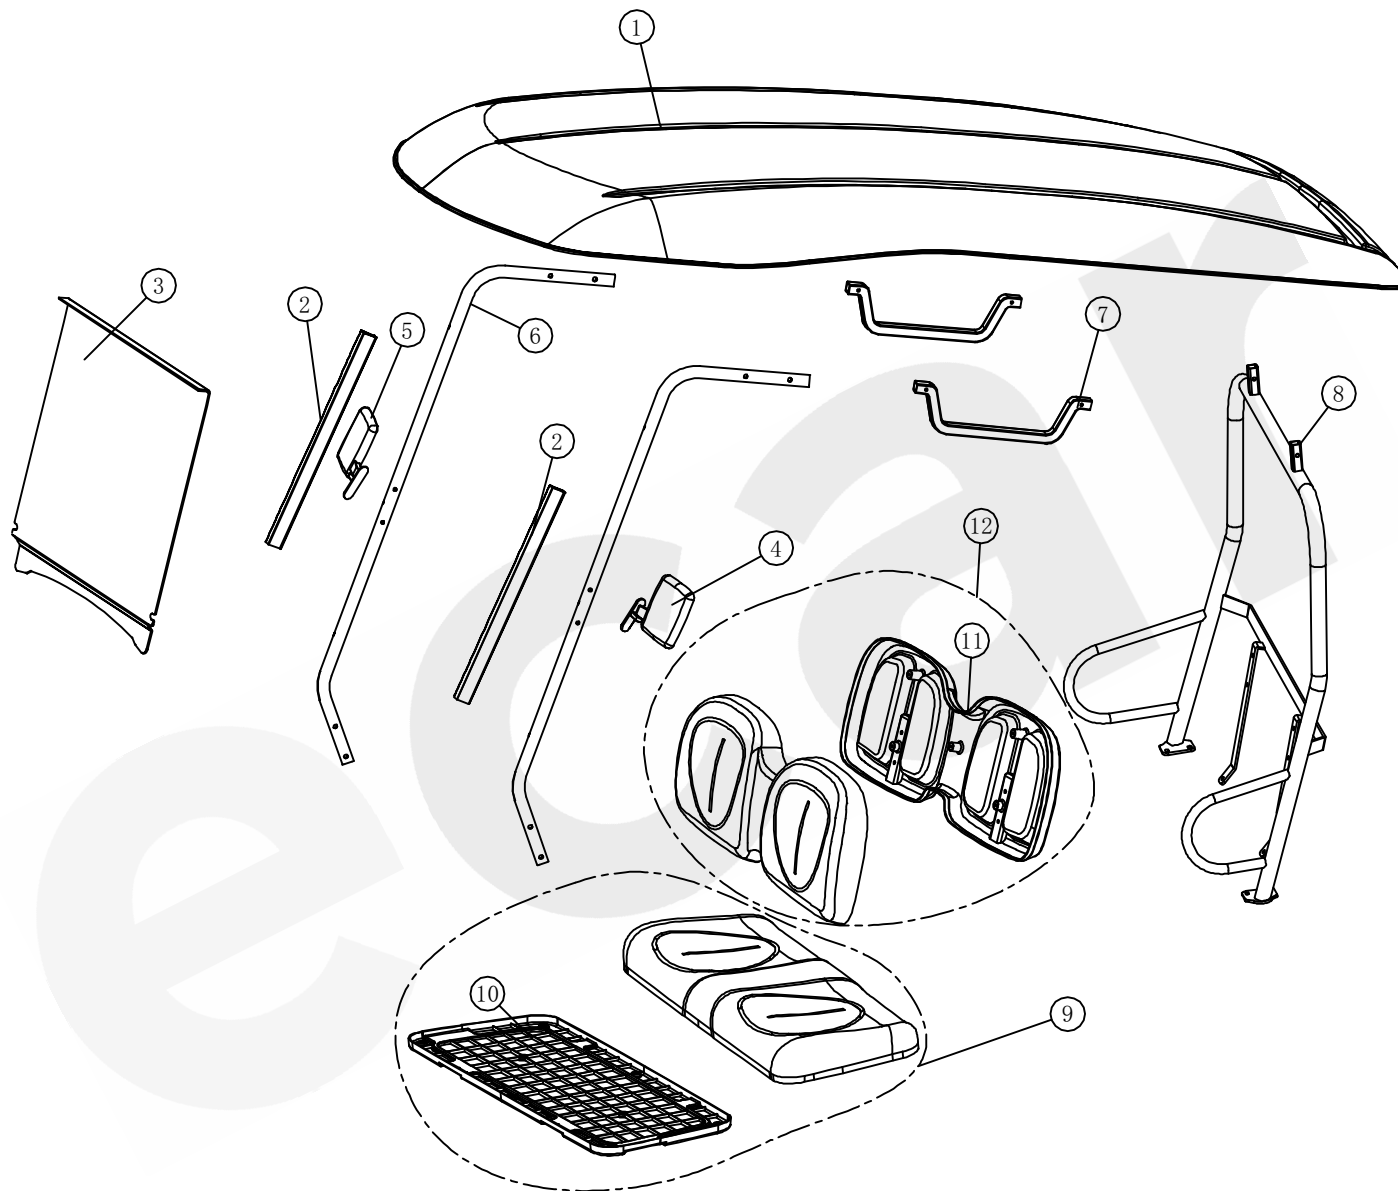


LT-A627.H2 top roof

NO:	Code	Name	QTY	Remark
1	2. 02. 001. 110002	A-U2 top roof	1	
2	3. 02. 012. 000040	windshield retain clip	2	730mm
3	3. 02. 012. 000165	A627 2 windshield	1	
4	3. 02. 013. 000049	A627 Side mirror/L	1	
5	3. 02. 013. 000050	A627 Side mirror/R	1	
6	2. 01. 007. 800072	A627.H windshield frame	2	
7	3. 02. 011. 200006	A-U Roof Handle	2	
8	2. 01. 007. 800073	A627.H rear support	1	
9	2. 02. 007. 010023	A627 rear seat cushion	1	
10	3. 02. 011. 300041	A627 front seat armrest	1	
11	2. 02. 007. 010024	A627 rear seat back	1	
12	3. 02. 011. 300028	A627 rear seat back cover	1	
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

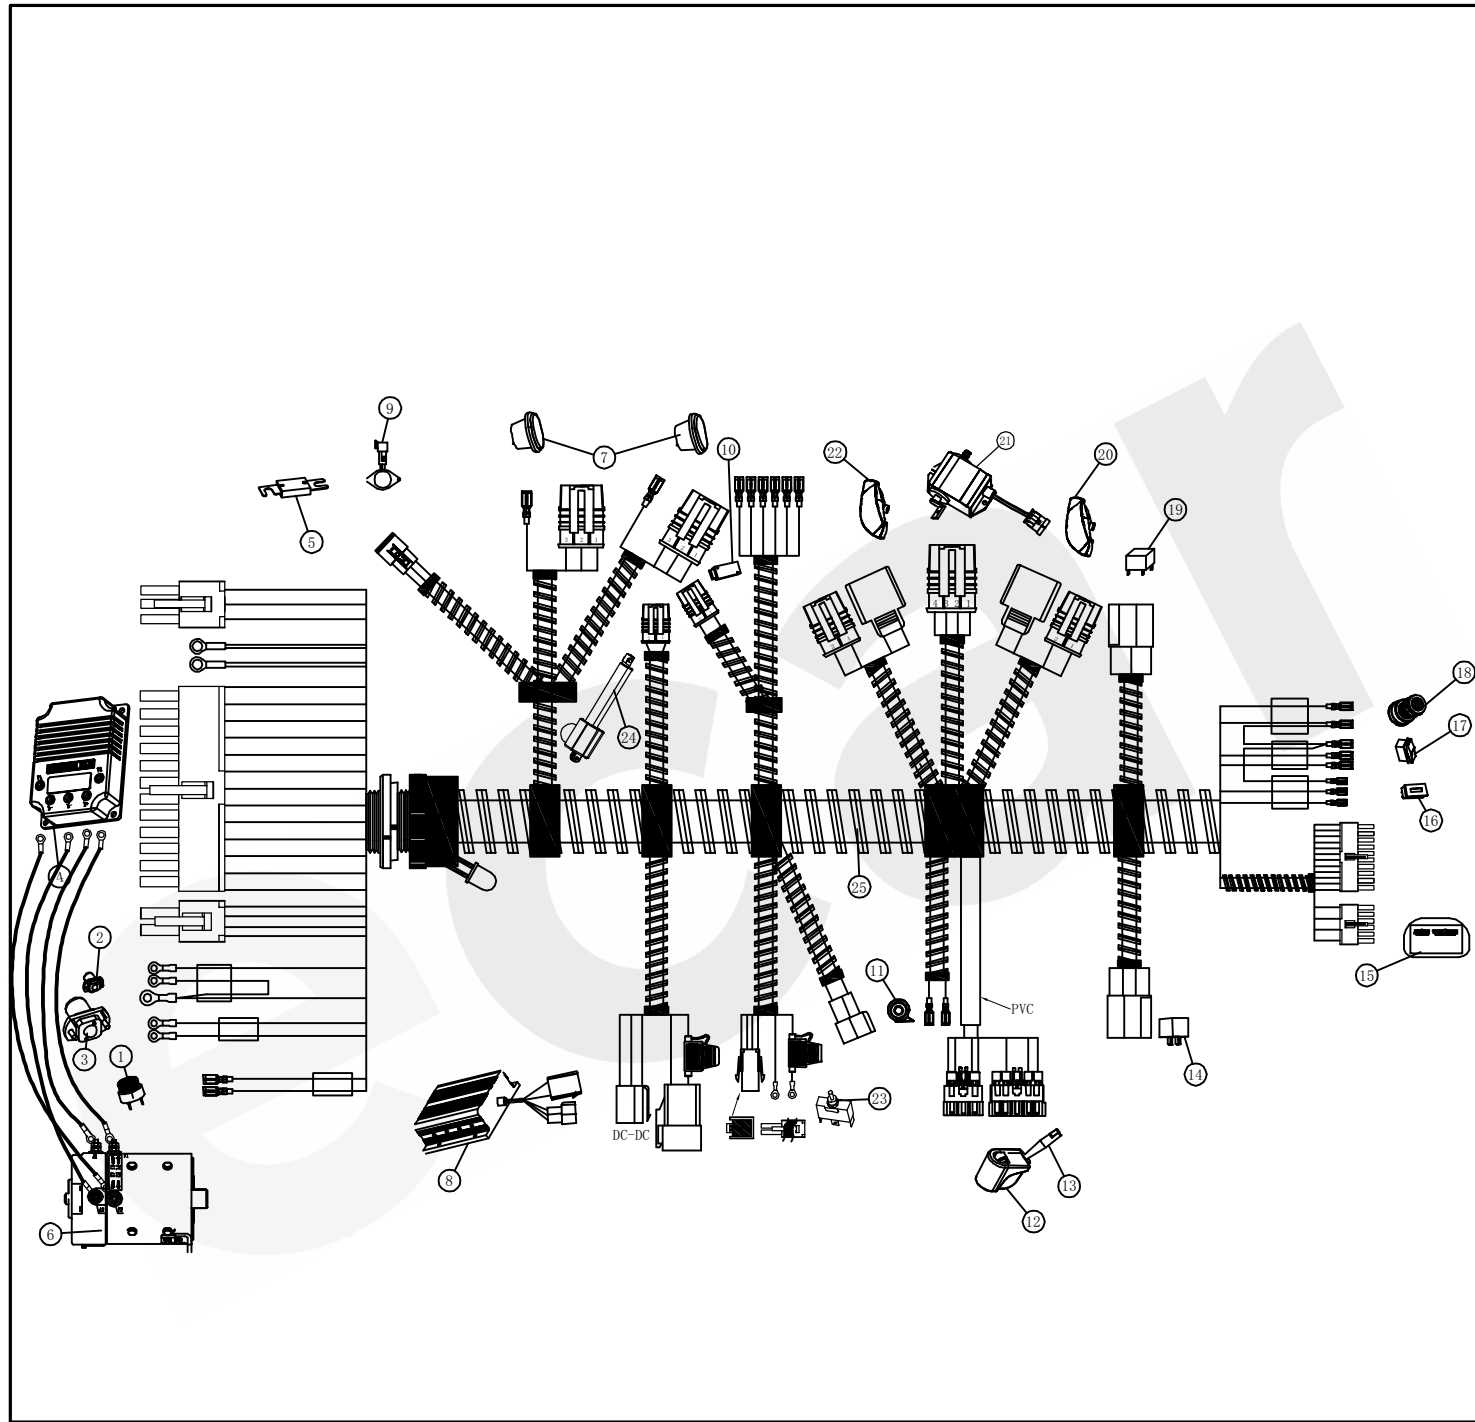


A627.H2 DC wire harness diagram

NO:	Code	Name	QTY	Remark
1	3. 03. 010. 000004	Buzzer(48V)	1	36V
2	3. 03. 015. 000003	48V DC sensor	1	ZJ50A
3	3. 03. 015. 000001	48V DC sensor	1	ZJ200A
4	3. 03. 003. 000005	Curtis controller 12 68-5403	1	
5	3. 03. 017. 000020	Fuse 250A	1	
6	3. 03. 007. 000006	ADC DC motor48V-3.7KW / Import	1	
7	3. 03. 001. 000009	tail light	2	
8	3. 03. 016. 000001	DC/DC convertor	1	48V/300W
9	3. 03. 007. 000037	Motor speed sensor	1	3. 7KW
10	3. 03. 002. 000008	Microswitch	1	
11	3. 03. 010. 000007	Fanfare horn	1	
12	3. 03. 011. 000027	Single-arm combination switch board	1	
13	3. 03. 011. 000025	Single-arm combination switch	1	
14	3. 03. 012. 000011	Relay	1	
15		speed meter	1	
16	3. 03. 011. 000007	power indicator 48V	1	
17	3. 03. 002. 000006	Switch F/R	1	
18	3. 03. 002. 000036	S14 key switch	1	
19	3. 03. 017. 900004	Flasher	1	
20	3. 03. 001. 900024	Integrated front head light/R	1	
21	3. 03. 005. 000001	accelerator Hall-A	1	
22	3. 03. 001. 900023	Integrated front head light/L	1	
23	3. 03. 002. 000004	Two switch(2 level)	1	
24	3. 01. 004. 100011	electrical lift rod	1	
25	3. 03. 004. 900062	A627.H wiring harness	1	

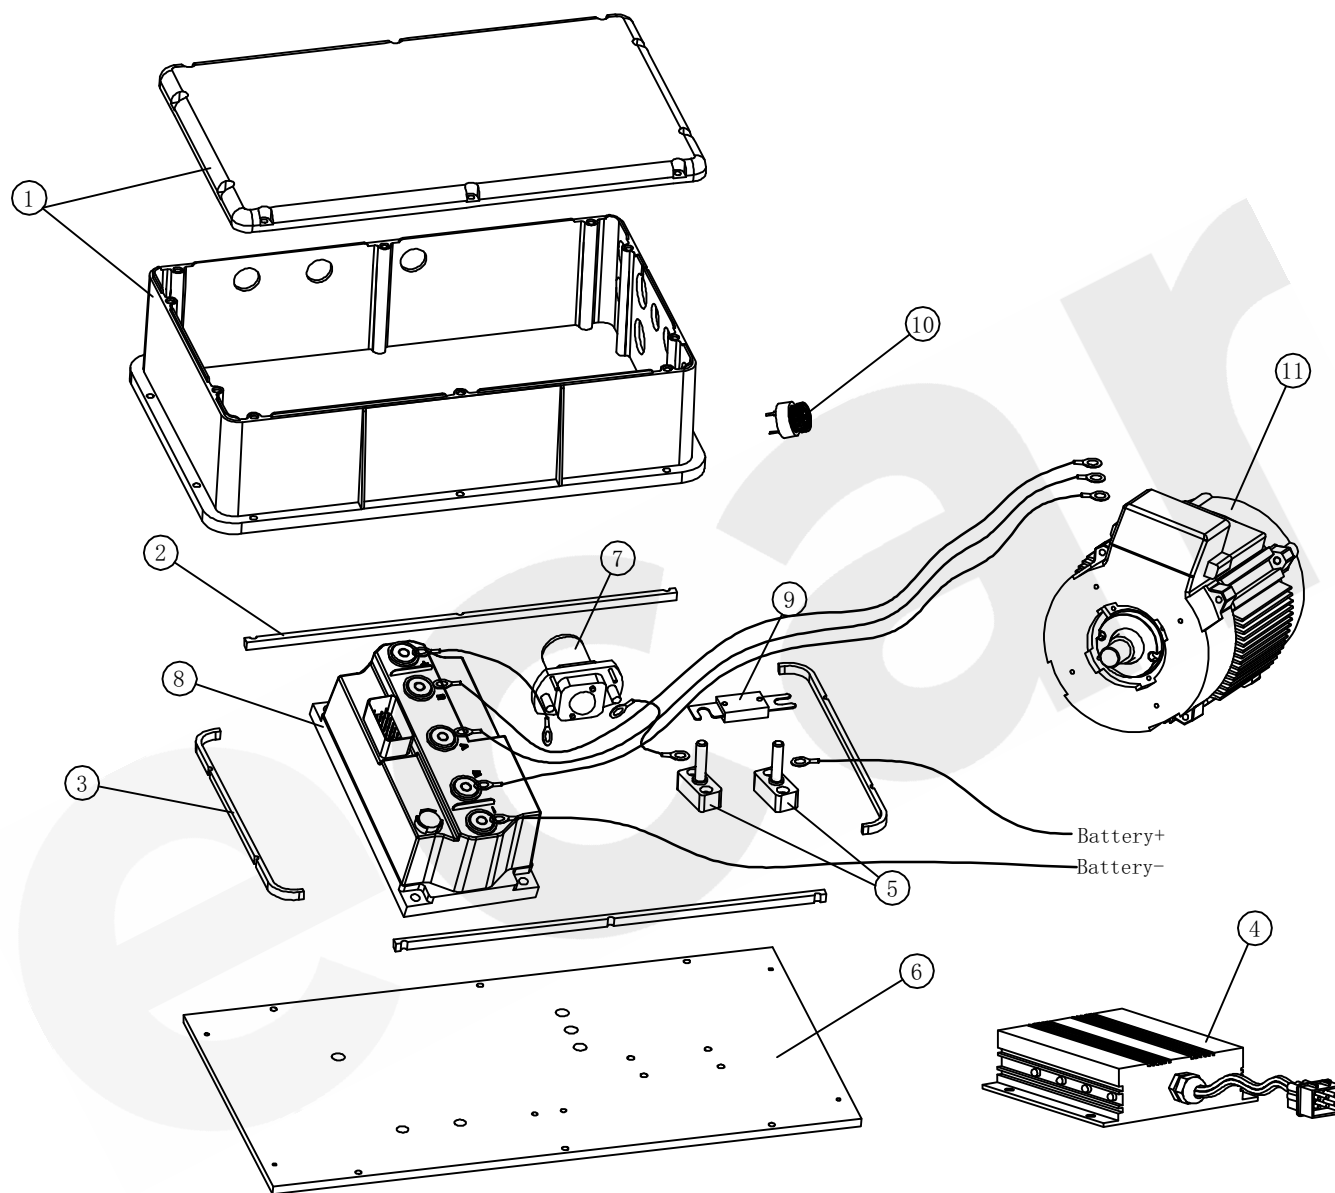


LT-A627.H2 AC spare parts

NO:	Code	Name	QTY	Remark
1	3. 02. 014. 000101	controller cover top	1	
2	3. 02. 014. 000102	controller cover base1	2	
3	3. 02. 014. 000103	controller cover base2	2	
4	3. 03. 016. 000001	DC/DC convertor	1	48V/300W
5	3. 03. 017. 000012	fuse base	2	
6	2. 02. 007. 010031	Toyota heatsink board-A	1	
7	3. 03. 015. 000001	48V sensor	1	ZJ200A
8	3. 03. 003. 000021	Toyota communication controller	1	48V/350A
9	3. 03. 017. 000020	fuse 250A	1	
10	3. 03. 010. 000004	buzzer(48V)	1	
11	3. 03. 007. 000031	AC motor	1	4KW/33V AQHT4-4001B
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

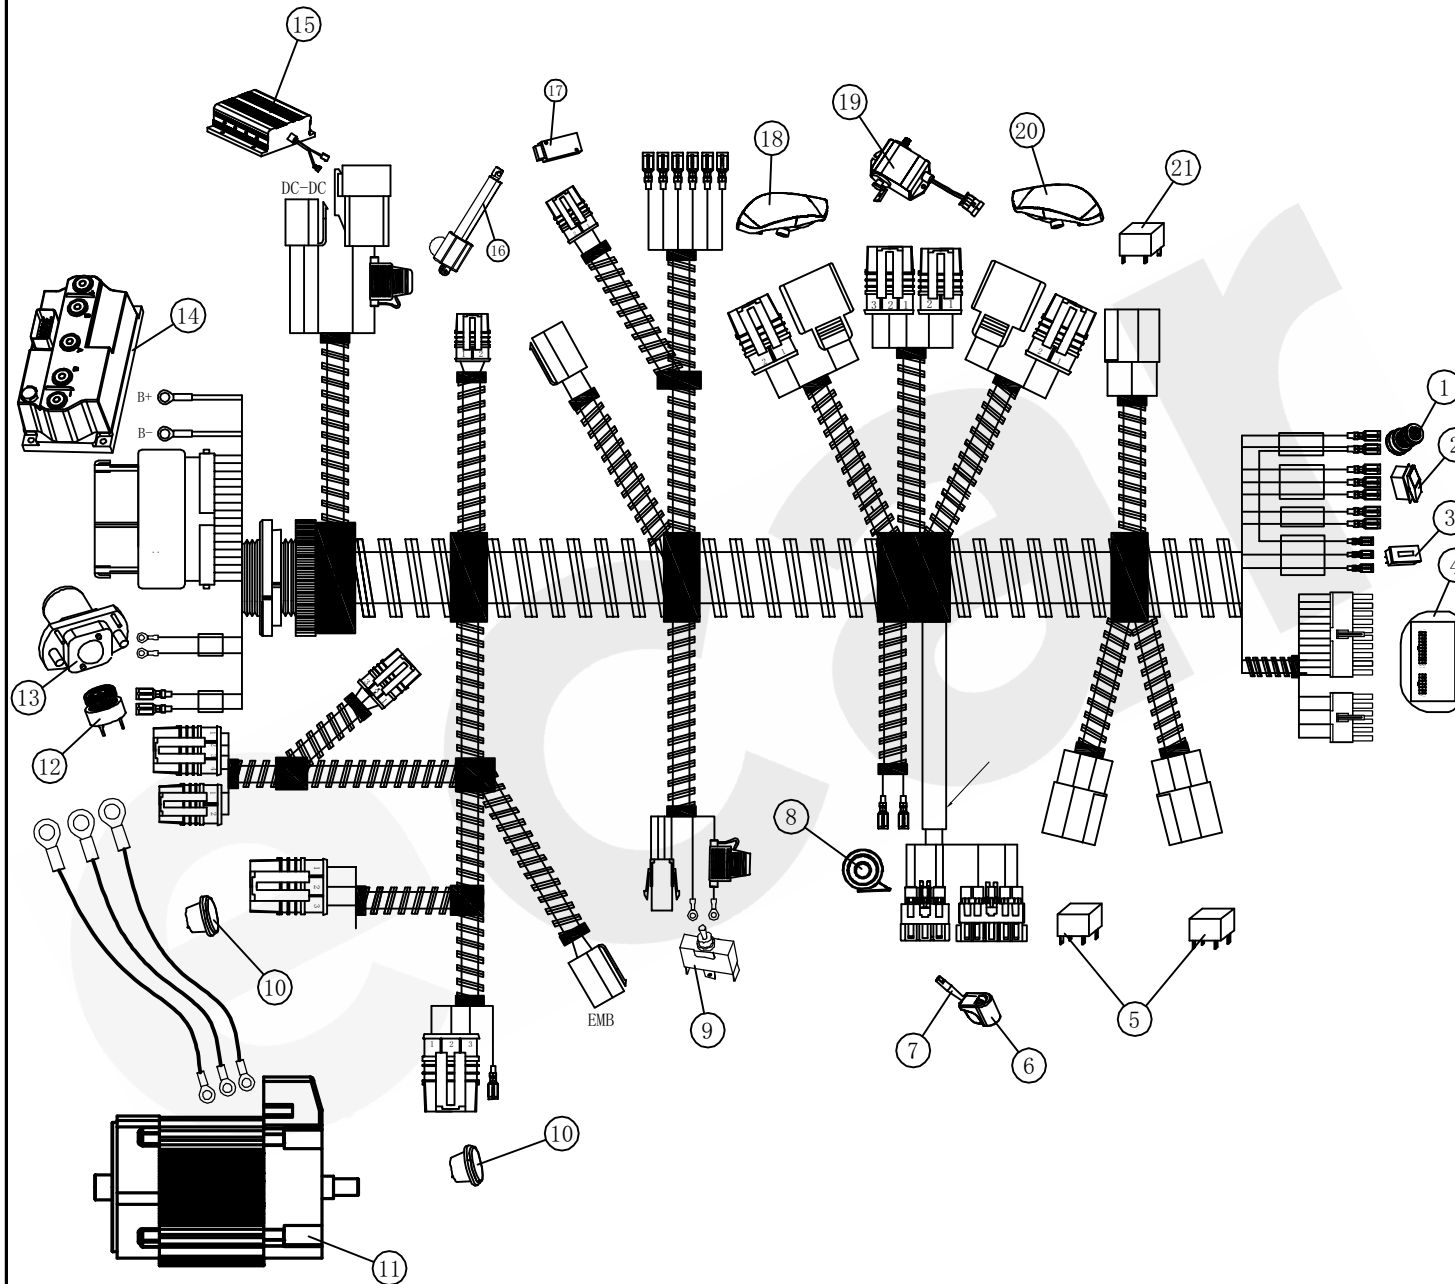

LT-A627.H2 AC diagram

NO:	Code	Name	QTY	Remark
1	3. 03. 002. 000036	S14 key switch	1	
2	3. 03. 002. 000006	switch F/R	1	
3	3. 03. 011. 000007	power indicator/48V	1	
4		speed meter	1	
5	3. 03. 012. 000011	relay	2	
6	3. 03. 011. 000027	Single-arm combination switch board	1	
7	3. 03. 011. 000025	Single-arm combination switch	1	
8	3. 03. 010. 000007	Fanfare horn 12V	1	
9	3. 03. 002. 000004	tow switch(2 level)	1	
10	3. 03. 001. 000009	tail light	2	
11	3. 03. 007. 000031	AC motor	1	4KW/33V AQHT4-4001B
12	3. 03. 010. 000004	buzzer	1	
13	3. 03. 015. 000001	48V sensor	1	ZJ200A
14	3. 03. 003. 000021	Toyota communication controller	1	48V/350A
15	3. 03. 016. 000001	DC/DC convertor	1	48V/300W
16	3. 01. 004. 100011	electrical lift rod	1	
17	3. 03. 002. 000008	micro switch 7-3	1	
18	3. 03. 001. 900023	Integrated front head light/L	1	
19	3. 03. 005. 000009	resistance accelerator -3	1	0-5K
20	3. 03. 001. 900024	Integrated front head light/R	1	
21	3. 03. 017. 900004	flasher	1	
22	3. 03. 004. 900072	A627.H entire wiring harness	1	
23				
24				
25				

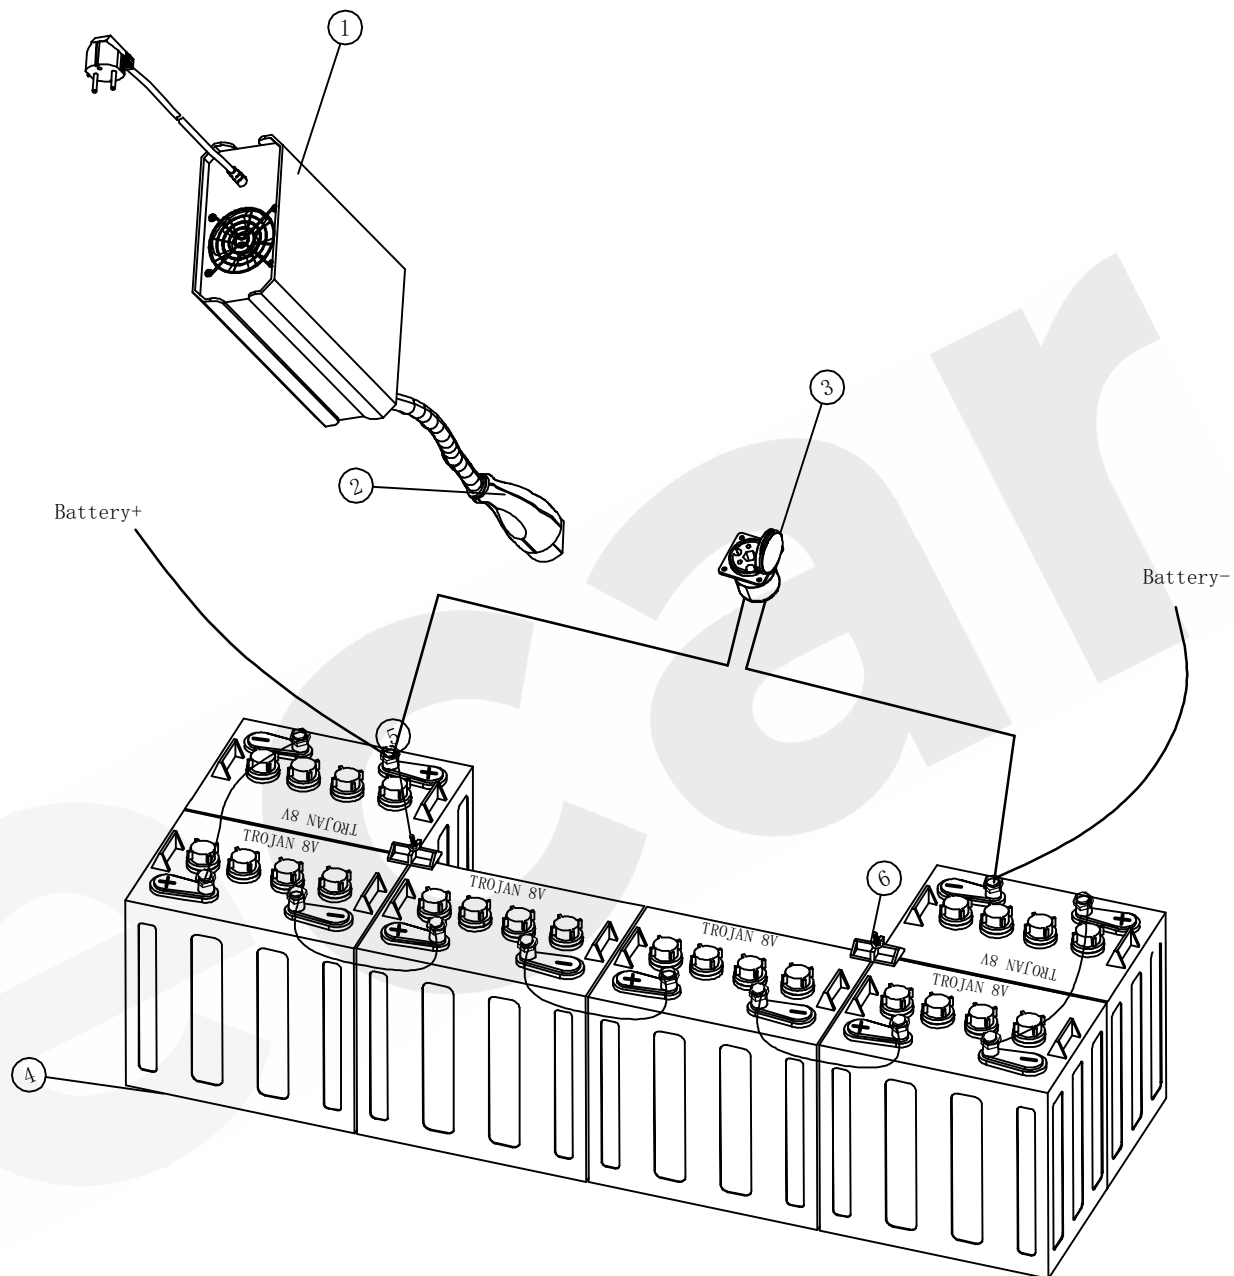

LT-A627.H2 battery system

NO:	Code	Name	QTY	Remark
1	3. 03. 009. 000003	48V charger	1	
2	3. 03. 009. 000013	Charger plug A	1	
3	3. 03. 009. 000014	Charger receptacle A	1	
4	3. 03. 006. 000030	Torch Battery 8V	6	
5	3. 01. 003. 070013	Battery J-bolt	2	6mm
6	3. 02. 014. 000148	Battery retain clip E	2	
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				